



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL ADP 5550 WH. You'll find the answers to all your questions on the WHIRLPOOL ADP 5550 WH in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual WHIRLPOOL ADP 5550 WH**  
**User guide WHIRLPOOL ADP 5550 WH**  
**Operating instructions WHIRLPOOL ADP 5550 WH**  
**Instructions for use WHIRLPOOL ADP 5550 WH**  
**Instruction manual WHIRLPOOL ADP 5550 WH**

## INSTRUCTIONS FOR USE

BEFORE USING THE DISHWASHER/  
CONNECTIONS

ELECTRICAL CONNECTION

PRECAUTIONS AND GENERAL  
RECOMMENDATIONS

HOW TO FILL THE SALT CONTAINER

HOW TO FILL THE RINSE AID DISPENSER

HOW TO FILL THE DETERGENT DISPENSER

CARE AND MAINTENANCE

11



[You're reading an excerpt. Click here to read official WHIRLPOOL ADP 5550 WH user guide](http://yourpdfguides.com/dref/4859624)  
<http://yourpdfguides.com/dref/4859624>

**Manual abstract:**

Removing the packaging and controls: After unpacking, make sure that the dishwasher is undamaged and that the door closes correctly. If in doubt, contact a qualified technician or your local retailer. • Keep the packaging materials (plastic bags, polystyrene parts, etc.) out of reach of children, as they are potentially dangerous. • This dishwasher has been factory tested to ensure it functions correctly. Such testing may leave slight water marks that will disappear with the first wash. 2. Water and electrical connections: All water and electrical connections must be carried out by a qualified technician in compliance with the manufacturer's instructions (refer to the enclosed installation booklet) and current local safety regulations. The appliance must only be used in the household for the prescribed uses. Do not use the dishwasher if it has been damaged in transit.

Consult your local retailer or our After-Sales Service. (Refer to the separate installation instructions booklet) 3. Water inlet and drain: • Observe any special regulations issued by your local Water Board. Water supply pressure: 0.3 - 10 bar.

• Make sure the inlet and drain hoses are kink-free and are not crushed. • If the hose length is not sufficient, please contact your local dealer or our After-Sales Service. • All other models: maximum temperature 60°C. • Fix the drain hose to the spigot with a clamp to prevent it from coming off during operation. For appliances with water-stop system only: If the water connections are made correctly, the waterstop system safeguards your home against damage caused by flooding.

12 4. Electrical connection: • Closely adhere to local Electricity Board regulations. • Voltage information is shown on the rating plate mounted inside the door on the right hand side. • The appliance must be earthed as prescribed by law. • Do not use extension leads or multiple adapters. • Before carrying out maintenance, disconnect the mains plug. • If necessary, the power cable may be replaced with one the same obtained from our After-Sales Service. The power cable must only be replaced by a qualified technician. Warning for models provided with LCD display: The mains plug must be positioned in an easily accessible place. • For Austria: if the apparatus is series connected to a fault current switch, this must be sensitive to the pulsating current.

**ELECTRICAL CONNECTION** 1) For Great Britain only Warning - this appliance must be earthed Fuse replacement If the mains lead of this appliance is fitted with a BS 1363A 13amp fused plug, to change a fuse in this type of plug use an A.S.T.A. approved fuse to BS 1362 type and proceed as follows: 1. Remove the fuse cover (A) and fuse (B). 2. Fit replacement 13A fuse into fuse cover. 3. Refit both into plug.

Important: The fuse cover must be refitted when changing a fuse and if the fuse cover is lost the plug must not be used until a correct replacement is fitted. Correct replacement are identified by the colour insert or the colour embossed in words on the base of the plug. Replacement fuse covers are available from your local electrical store. 2) For the Republic of Ireland only The information given in respect of Great Britain will frequently apply, but a third type of plug and socket is also used, the 2-pin, side earth type. 3) Socket outlet / plug (valid for both countries) If the fitted plug is not suitable for your socket outlet, please contact Whirlpool Service for further instruction.

Please do not attempt to change plug yourself. This procedure needs to be carried out by a qualified Whirlpool technician in compliance with the manufactures instructions and current standard safety regulations. 13 PRECAUTIONS AND GENERAL RECOMMENDATIONS 1. Packing: The packing box may be fully recycled as confirmed by the recycling symbol . 2.

Energy and water saving tips: • Do not rinse crockery under running water. • Always fully load the dishwasher before switching on or set the wash programme to half load/ Multizone (if available) if one rack only is loaded. • If ecological energy sources are available such as solar panel heating, heat pumps or centralised heating systems, the appliance may be connected to the hot water mains up to a maximum temperature of 60°C. Make sure the water inlet hose is of the correct type. Refer to the "Connections" chapter in these user instructions. 3. Disposal: The appliance is built from reusable materials. • To prevent situations of potential danger to children (e.g. •

• Do not use solvents inside the dishwasher: risk of explosion! • The water in the dishwasher is not potable. • Do not store inflammable liquids near the dishwasher. • Do not operate the appliance in the open air. 6. • Do not therefore cut the hose or immerse the plastic casing in water. If the hose is damaged switch off the appliance immediately. 8. •

Remove the lower rack. 2. Unscrew the cap by turning it counter-clockwise. 3. When first using the dishwasher: fill the salt container to the rim with water. 4. Fill the salt container to the rim with salt (using the filler provided) (when filling for the first time use min. 1.5 kg and max. 2 kg) and stir with a spoon handle.

5. Screw the cap back on by turning it clockwise. 6. Fit the lower rack. 7. If regeneration salt is to be added, immediately start a wash programme (rinsing alone is not sufficient) in order to eliminate any residual saline solution straight away and avoid corrosion. Salt level indicator The dishwasher is equipped with an electric or visual salt level indicator (depending on the model installed). Electric indicator The salt level indicator lamp on the control panel lights up when the salt container is empty. Visual indicator The float is clearly visible in the cap window when the salt container is full. The float lowers and is no longer visible when the salt container is empty.

15 HOW TO FILL THE RINSE AID DISPENSER The rinse aid facilitates drying and prevents the formation of unsightly spots and streaks on crockery. Before using the dishwasher for the first time, fill the rinse aid dispenser. Only use rinse aids recommended for use in domestic dishwashers. 1. Press button A to open the cover (see drawing). 2. Fill the dispenser with rinse aid up to the dotted line (about 100 ml maximum). Immediately wipe away any rinse aid spilt accidentally! This prevents the formation of excess suds which may spoil washing results. 3. Close the cover.

Thereafter, regularly check the rinse aid level. A How to adjust the rinse aid dosage regulator Factory setting: Position 4. If you are not satisfied with washing or drying results, change the rinse aid dosage setting. 1. Press button A to open the cover (see drawing). 2. If crockery is prone to whitish streaks: reduce the dosage by turning the dial to a lower setting (1-3) using a coin or the like. If crockery is not perfectly dry: increase the dosage by turning the dial to a higher setting (5-6).



[You're reading an excerpt. Click here to read official WHIRLPOOL](http://yourpdfguides.com/dref/4859624)

[ADP 5550 WH user guide](http://yourpdfguides.com/dref/4859624)

<http://yourpdfguides.com/dref/4859624>

3. Close the cover.

@@@1. Press button C to open the cover. 2. How to fill the detergent dispenser. @@Tablets: place a tablet in the compartment (A) and/or follow the directions on the detergent pack. Powder and/or liquid detergent, tablets: pour the entire recommended dosage into the compartment (A). C A B - •  
Programmes without pre-rinse: - • For programmes with additional "Half load/Multizone" function selected (if provided): When using powder or liquid detergent the dosage can be reduced by 1/3. 3. Close the cover. Detergent Use good quality liquid or powder dishwasher detergents and/or tablets (do not use hand dishwashing detergents).

*In order to safeguard the environment, follow the manufacturer's directions for use. Do not use more than the amount of detergent that is recommended. Observe the manufacturer's safety warnings. Keep these products out of reach of children. If you use detergents in tablet form, follow the manufacturer's directions for use. If you use multi-action dishwasher dete.*



[You're reading an excerpt. Click here to read official WHIRLPOOL  
ADP 5550 WH user guide  
http://yourpdfguides.com/dref/4859624](http://yourpdfguides.com/dref/4859624)