



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL ADP 7979/1 WH. You'll find the answers to all your questions on the WHIRLPOOL ADP 7979/1 WH in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual WHIRLPOOL ADP 7979/1 WH**  
**User guide WHIRLPOOL ADP 7979/1 WH**  
**Operating instructions WHIRLPOOL ADP 7979/1 WH**  
**Instructions for use WHIRLPOOL ADP 7979/1 WH**  
**Instruction manual WHIRLPOOL ADP 7979/1 WH**

## INSTRUCTIONS FOR USE

BEFORE USING THE DISHWASHER/CONNECTIONS  
ELECTRICAL CONNECTION  
PRECAUTIONS AND GENERAL  
RECOMMENDATIONS  
HOW TO FILL THE SALT CONTAINER  
HOW TO FILL THE RINSE AID DISPENSER  
HOW TO FILL THE DETERGENT DISPENSER  
CARE AND MAINTENANCE

35



[You're reading an excerpt. Click here to read official WHIRLPOOL ADP 7979/1 WH user guide](http://yourpdfguides.com/dref/4853258)  
<http://yourpdfguides.com/dref/4853258>

**Manual abstract:**

Removing the packaging and controls: After unpacking, make sure that the dishwasher is undamaged and that the door closes correctly. If in doubt, contact a qualified technician or your local retailer. • Keep the packaging materials (plastic bags, polystyrene parts, etc.) out of reach of children, as they are potentially dangerous. • This dishwasher has been factory tested to ensure it functions correctly. Such testing may leave slight water marks that will disappear with the first wash. 2. Water and electrical connections: All water and electrical connections must be carried out by a qualified technician in compliance with the manufacturer's instructions (refer to the enclosed installation booklet) and current local safety regulations. The appliance must only be used in the household for the prescribed uses. Do not use the dishwasher if it has been damaged in transit.

Consult your local retailer or our After-Sales Service. (Refer to the separate installation instructions booklet) 3. Water inlet and drain: • Observe any special regulations issued by your local Water Board. Water supply pressure: 0,03 - 1,0 MPa. • Make sure the inlet and drain hoses are kink-free and are not crushed.

• If the hose length is not sufficient, please contact your local dealer or our After-Sales Service. • All other models: maximum temperature 60°C. • Fix the drain hose to the spigot with a clamp to prevent it from coming off during operation. For appliances with water-stop system only: If the water connections are made correctly, the waterstop system safeguards your home against damage caused by flooding. 4.

Electrical connection: • Closely adhere to local Electricity Board regulations. • Voltage information is shown on the rating plate mounted inside the door on the right hand side. • The appliance must be earthed as prescribed by law. • Do not use extension leads or multiple adapters. • Before carrying out maintenance, disconnect the mains plug. • If necessary, the power cable may be replaced with one the same obtained from our After-Sales Service. The power cable must only be replaced by a qualified technician. Warning for models provided with LCD display: The mains plug must be positioned in an easily accessible place. • For Austria: if the apparatus is series connected to a fault current switch, this must be sensitive to the pulsating current. EC Declaration of conformity This appliance has been designed, constructed and distributed in compliance with the safety requirements of EC Directives: • 73/23/EEC • 89/336/EEC • 93/68/EEC Load capacity: 12 place settings.

36 ELECTRICAL CONNECTION 1) For Great Britain only Warning - this appliance must be earthed Fuse replacement If the mains lead of this appliance is fitted with a BS 1363A 13amp fused plug, to change a fuse in this type of plug use an A.S.T.A. approved fuse to BS 1362 type and proceed as follows: 1. Remove the fuse cover (A) and fuse (B). 2. Fit replacement 13A fuse into fuse cover. 3. Refit both into plug.

Important: The fuse cover must be refitted when changing a fuse and if the fuse cover is lost the plug must not be used until a correct replacement is fitted. Correct replacement are identified by the colour insert or the colour embossed in words on the base of the plug. Replacement fuse covers are available from your local electrical store. 2) For the Republic of Ireland only The information given in respect of Great Britain will frequently apply, but a third type of plug and socket is also used, the 2-pin, side earth type. 3) Socket outlet / plug (valid for both countries) If the fitted plug is not suitable for your socket outlet, please contact Whirlpool Service for further instruction.

Please do not attempt to change plug yourself. This procedure needs to be carried out by a qualified Whirlpool technician in compliance with the manufactures instructions and current standard safety regulations. 37 PRECAUTIONS AND GENERAL RECOMMENDATIONS 1. Packing: The packing box may be fully recycled as confirmed by the recycling symbol . 2.

Energy and water saving tips: • Do not rinse crockery under running water. • Always fully load the dishwasher before switching on or set the wash programme to half load/ Multizone (if available) if one rack only is loaded. • If ecological energy sources are available such as solar panel heating, heat pumps or centralised heating systems, the appliance may be connected to the hot water mains up to a maximum temperature of 60°C. Make sure the water inlet hose is of the correct type. Refer to the "Connections" chapter in these user instructions. 3. Disposal: The appliance is built from reusable materials. If you decide to scrap the dishwasher, it must be disposed of in compliance with local waste disposal laws. Before scrapping, cut off the power cable so that the appliance cannot be connected to the mains. • To prevent situations of potential danger to children (e.

g. • Do not use solvents inside the dishwasher: risk of explosion! • The water in the dishwasher is not potable. • Do not store inflammable liquids near the dishwasher. • Do not operate the appliance in the open air. • Attention: Danger when door is opened. 6. • Do not therefore cut the hose or immerse the plastic casing in water.

If the hose is damaged switch off the appliance immediately. 8. • Switch on the appliance (consult the quick reference guide). • Select programme 2 (consult the programme chart in the quick reference guide). • Press the Start button for at least 5 seconds until the Start indicator lamp blinks.

• The "Start indicator lamp" blinks or the digital display lights up according to the water hardness level selected (chart, setting - blinking frequency or digital display). • With each successive touch of the Start button the setting increases and when it reaches 7 it returns to 1 again. • Switch off the appliance (consult the quick reference guide). The selected setting is now memorized. Hardness level German degrees °dH French degrees °fH mmol/l Clarke scale or English degrees °eH Setting blinking frequency (1x-7x) or digital display (1-7) Settings for dishwashers without water hardness sensor only.

In appliances provided with a water hardness sensor, the setting is automatically executed. 1 soft 1 - 2 medium 2 average 3 medium-hard 4 hard 4 very hard 4 extremely hard 0-5 6 - 10 11 - 15 16 - 21 22 - 28 29 - 35 36 - 60 0-9 10 - 18 19 - 27 28 - 37 38 - 50 51 - 63 64 - 107 0 - 0.9 1.0 - 1.8 1.9 - 2.7 2.8 - 3.7 3.8 - 5.

0 5.1 - 6.3 6.4 - 10.7 0 - 6.3 7 - 12.6 13.3 - 18.9 19.6 - 25.

9 26.6 - 35 35.7 - 44.1 44.8 - 74.

9 1x 2x 3x 4x 5x 6x 7x 1 2 3 4 5 6 7 If the water hardness level falls within category 1 (soft), no salt is required. How to fill the salt container Warning: Only use regeneration salts for use in domestic dishwashers! Do not fill the salt container with unsuitable substances, such as detergent, as this will cause irreparable damage to the water softener system.



[You're reading an excerpt. Click here to read official WHIRLPOOL ADP 7979/1 WH user guide](http://yourpdfguides.com/dref/4853258)  
<http://yourpdfguides.com/dref/4853258>

1. Remove the lower rack. 2.

Unscrew the cap by turning it counter-clockwise. 3. When first using the dishwasher: fill the salt container to the rim with water. 4. Fill the salt container to the rim with salt (using the filler provided) (when filling for the first time use min. 1.5 kg and max. 2 kg) and stir with a spoon handle. 5. Screw the cap back on by turning it clockwise.

6. Fit the lower rack. 7. If regeneration salt is to be added, immediately start a wash programme (rinsing alone is not sufficient) in order to eliminate any residual saline solution straight away and avoid corrosion. Salt level indicator The dishwasher is equipped with an electric or visual salt level indicator (depending on the model installed). Electric indicator The salt level indicator lamp on the control panel lights up when the salt container is empty. Visual indicator The float is clearly visible in the cap window when the salt container is full. The float lowers and is no longer visible when the salt container is empty. 39 HOW TO FILL THE RINSE AID DISPENSER (Not necessary when using a combined action detergent) The rinse aid facilitates drying and prevents the formation of unsightly spots and streaks on crockery. Before using the dishwasher for the first time, fill the rinse aid dispenser.

Only use rinse aids recommended for use in domestic dishwashers. 1. Press button A to open the cover (see drawing). 2. Fill the dispenser with rinse aid up to the dotted line (about 100 ml maximum).

Immediately wipe away any rinse aid spilt accidentally! This prevents the formation of excess suds which may spoil washing results. 3. Close the cover.

@@@1. Press button A to open the cover (see drawing).

2. @@If crockery is not perfectly dry: increase the dosage by turning the dial to a higher setting until it clicks. @@Rotate the microfilter counter-clockwise (in the direction of the arrow "0") and extract it (E). 2. Remove the wide-mesh filter (F). 3. Remove the fine-mesh filter (G). 4. Clean all filters under running water, paying attention not to bend the fine-mesh filter. Check that no impurities are left inside the dishwasher! 5.

To reassemble: insert the wide-mesh filter into the microfilter so it clicks into place. Insert the fine-mesh filter. The filter must be fitted under both tabs (H). Insert the wide-mesh filter / microfilter unit and turn clockwise (in the direction of the arrow "1"), until the dashed lines on the microfilter and fine-mesh filter are aligned. The filter unit must be correctly assembled to ensure good wash results! E F G H 43 Printed in Germany 5019 396 94172 S N DK FIN GB 1/1205

Ecological Paper .



[You're reading an excerpt. Click here to read official WHIRLPOOL](#)

[ADP 7979/1 WH user guide](#)

<http://yourpdfguides.com/dref/4853258>