



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL ADP 951/3 WH (6910). You'll find the answers to all your questions on the WHIRLPOOL ADP 951/3 WH (6910) in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual WHIRLPOOL ADP 951/3 WH (6910)**  
**User guide WHIRLPOOL ADP 951/3 WH (6910)**  
**Operating instructions WHIRLPOOL ADP 951/3 WH (6910)**  
**Instructions for use WHIRLPOOL ADP 951/3 WH (6910)**  
**Instruction manual WHIRLPOOL ADP 951/3 WH (6910)**

<b>CONTENTS</b>	<b>GB</b>
<b>BEFORE USING THE DISHWASHER</b>	<b>PAGE 32</b>
<b>PROTECTING THE ENVIRONMENT</b>	<b>PAGE 32</b>
<b>PRECAUTIONS AND GENERAL RECOMMENDATIONS</b>	<b>PAGE 32</b>
<b>CONNECTIONS</b>	<b>PAGE 33</b>
<b>HOW TO FILL THE SALT CONTAINER</b>	<b>PAGE 34</b>
<b>HOW TO FILL THE RINSE AID DISPENSER</b>	<b>PAGE 35</b>
<b>HOW TO FILL THE DETERGENT DISPENSER</b>	<b>PAGE 36</b>
<b>CARE AND MAINTENANCE</b>	<b>PAGE 37</b>

To make the most of your new dishwasher, please read these user instructions and the quick reference guide carefully.

21



[You're reading an excerpt. Click here to read official WHIRLPOOL ADP 951/3 WH \(6910\) user guide](http://yourpdfguides.com/dref/4916224)  
<http://yourpdfguides.com/dref/4916224>

**Manual abstract:**

31 BEFORE USING THE DISHWASHER 1. Removing the packaging and check After unpacking, make sure that the dishwasher is undamaged and that the door closes correctly. If in doubt, contact a qualified technician or your local retailer. Keep the packaging materials (plastic bags, polystyrene parts, etc.) out of reach of children, as they are potentially dangerous. 2. Water and electrical connections • All water and electrical connections must be carried out by a qualified technician in compliance with the manufacturer's instructions (refer to the enclosed installation booklet) and current local safety regulations. The appliance must only be used in the household for the prescribed uses. • PROTECTING THE ENVIRONMENT 1. Packing The packing box may be fully recycled as confirmed by the recycling symbol .

2. Energy and water saving tips • Do not rinse crockery under running water. • Always fully load the dishwasher before switching on or set the wash programme to half load (if available) if one rack only is loaded. If ecological energy sources are available, such as solar panel heating, heat pumps or centralised heating systems, the appliance may be connected to the hot water mains up to a maximum temperature of 60° C. Make sure the water inlet hose is of the correct type.

Refer to the chapter "Connections" in these user instructions. 3. • Store the detergent, rinse aid and salt in a dry place out of the reach of children. 2. General recommendations: The open dishwasher door can only support the weight of the loaded rack when pulled out. Do not rest objects on the open door or sit or stand on it: the appliance may topple over! Do not use solvents inside the dishwasher: risk of explosion! Only use detergents, rinse aids and regeneration salts specially recommended for use in domestic dishwashers. Before cleaning or carrying out maintenance, switch off the appliance and turn off the water tap. If a fault occurs, switch off the appliance and turn off the water tap. If necessary, the power cable may be replaced with one the same obtained from our After-Sales Service. The power cable must only be replaced by a qualified technician. • On completion of the programme switch off the dishwasher and turn off the water tap. 3. For appliances with water stop system: The water inlet hose and plastic casing contain electrical components. Do not therefore cut the hose or immerse the plastic casing in water. If the hose is damaged switch off the appliance immediately.

EC Declaration of conformity This appliance has been designed, constructed and distributed in compliance with the safety requirements of EC Directives: • 73/23/EC • 89/336/EC • 93/68/EC • Load capacity: 12 place settings. • 32 CONNECTIONS Do not use the dishwasher if it has been damaged in transit. Consult your local retailer or our After-Sales Service. (Refer to the separate installation instructions booklet) Water inlet and drain: • Observe any special regulations issued by your local Water Board. • Make sure the inlet and drain hoses are kinkfree and are not crushed. • If the hose length is not sufficient, please contact your local dealer or our After-Sales Service. • The inlet hose must be securely screwed on to the water tap to prevent leaks. • The inlet water temperature varies according to the model installed: inlet hose marked "25° C Max": maximum temperature 25° C. All other models: maximum temperature 60° C. • When installing the appliance, make sure the drain water discharges correctly (if necessary, remove the plug from the sink spigot).

• Fix the drain hose to the spigot with a clamp to prevent it from coming off during operation. • The appliance must be earthed as prescribed by law. • Do not use extension leads or multiple adapters. • Before carrying out maintenance, disconnect the mains plug. • Remove the lower rack.

Unscrew the cap by turning it counterclockwise. (1.5 kg and max. 2 kg) and stir with a spoon handle. Screw the cap back on by turning it clockwise. Fit the lower rack. • Check the salt level regularly. • Press button A to open the cover (see drawing). 2. • Immediately wipe away any rinse aid spilt accidentally. •

Replace the cover. • Press button A to open the cover (see drawing). 2. • Close the cover again. Rinse aid level indicator: Visual indicator: light dark = add rinse aid sufficient rinse aid. • Additional electric indicator (if provided): The indicator lamp on the control panel lights up when more rinse aid needs to be added. 35 HOW TO FILL THE DETERGENT DISPENSER A small compartment detergent and a large are provided for the The use of detergent in excess of the recommended dosage may cause pollution. The recommended dosage varies for different brands. If you use detergents in pellet form, follow the manufacturer's directions for use. "New generation" detergents contain enzymes that give better washing results when Bio programmes are used. However, these programmes are also suitable for all other dishwasher detergents.

How to fill the detergent dispenser: Only use detergents recommended for use in domestic dishwashers. Only fill the detergent dispenser prior to starting a wash programme. 1. Press button A to open the cover. 2.

How to fill the Detergent Dispenser. For programmes with pre-rinse: • Pour 2/3 of the recommended dosage into the large compartment . • Pour the remaining 1/3 into the small compartment . For programmes without pre-rinse: Pour the entire recommended dosage into the large compartment. If the recommended dosage on the detergent pack is over 45 ml (maximum capacity of the large compartment), pour the remaining detergent into the small compartment. For programmes with additional "Half load" function selected (if provided): Use a smaller quantity of detergent. 3. Close the cover. Small compartment Large compartment 36 CARE AND MAINTENANCE Before cleaning or carrying out maintenance, switch off the appliance and turn off the water tap. Cleaning the outside of the appliance: To clean the outside of the appliance, use a neutral detergent and a damp cloth.

Do not use abrasive detergents. Cleaning the inside of the dishwasher: Regularly wipe the door seal and inside of the door with a damp cloth to remove any food residues. Upper spray arm: 1. Slacken the fixing nut (A) (by turning it counter-clockwise) and detach the spray arm (B) by pulling it down. 2. Rinse the nozzles. 3. Remount the spray arm by aligning it with the rotary mounting and insert it. 4. Tighten the fixing nut by turning it clockwise.

• Rinse the nozzles. 3. • Push the spray arm down firmly until it is fixed in place. 5. • Fully unscrew the wide-mesh central filter by turning it counter-clockwise and extract it (E). 2. Fully unscrew the fine-mesh filter and extract it from the wide-mesh central filter (F) (pay due attention to the holes in the bottom of the filter).



[You're reading an excerpt. Click here to read official WHIRLPOOL ADP 951/3 WH \(6910\) user guide](http://yourpdfguides.com/dref/4916224)  
<http://yourpdfguides.com/dref/4916224>

*Remove the large filter (G). 4. Clean all filters regularly under running water, and check that no impurities are left inside the dishwasher. 5. Reassemble: Insert the fine-mesh filter in the wide-mesh central filter. (pay due attention to the holes in the bottom of the filter). Insert the filter unit and fix it by turning it clockwise. Make sure that the filters have been inserted correctly. The filter unit must be correctly assembled to ensure good wash results. 37 .*



[You're reading an excerpt. Click here to read official WHIRLPOOL  
ADP 951/3 WH \(6910\) user guide  
http://yourpdfguides.com/dref/4916224](http://yourpdfguides.com/dref/4916224)