



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL ADP 972/3 WHM(6910). You'll find the answers to all your questions on the WHIRLPOOL ADP 972/3 WHM(6910) in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual WHIRLPOOL ADP 972/3 WHM(6910)**  
**User guide WHIRLPOOL ADP 972/3 WHM(6910)**  
**Operating instructions WHIRLPOOL ADP 972/3 WHM(6910)**  
**Instructions for use WHIRLPOOL ADP 972/3 WHM(6910)**  
**Instruction manual WHIRLPOOL ADP 972/3 WHM(6910)**

|  |                |
|--|----------------|
| <b>SUMMARY</b>                                 | <b>GB</b>      |
| <b>BEFORE USING THE DISHWASHER</b>             | <b>PAGE 40</b> |
| <b>PROTECTING THE ENVIRONMENT</b>              | <b>PAGE 40</b> |
| <b>PRECAUTIONS AND GENERAL RECOMMENDATIONS</b> | <b>PAGE 40</b> |
| <b>ENERGY AND WATER SAVING TIPS</b>            | <b>PAGE 40</b> |
| <b>HOW TO FILL THE SALT CONTAINER</b>          | <b>PAGE 41</b> |
| <b>HOW TO FILL THE RINSE AID DISPENSER</b>     | <b>PAGE 42</b> |
| <b>HOW TO FILL THE DETERGENT DISPENSER</b>     | <b>PAGE 43</b> |
| <b>HOW TO USE THE DISHWASHER</b>               | <b>PAGE 44</b> |
| <b>CONNECTIONS</b>                             | <b>PAGE 45</b> |
| <b>MAINTENANCE AND CLEANING</b>                | <b>PAGE 47</b> |
| <b>TROUBLESHOOTING GUIDE</b>                   | <b>PAGE 48</b> |
| <b>AFTER-SALES SERVICE</b>                     | <b>PAGE 48</b> |

For maximum satisfaction from your dishwasher, carefully read these user instructions and consult the wash-programme chart.

29



[You're reading an excerpt. Click here to read official WHIRLPOOL ADP 972/3 WHM\(6910\) user guide](http://yourpdfguides.com/dref/4841813)  
<http://yourpdfguides.com/dref/4841813>

**Manual abstract:**

**39 BEFORE USING THE DISHWASHER** • After unpacking, make sure the appliance is undamaged and that the door closes correctly. Do not use the appliance if it is damaged. If in doubt, consult your local retailer. Keep potentially hazardous packaging (plastic bags etc.) out of the reach of children. • • This appliance is designed for use in the home in compliance with its intended purpose. All water and electrical connections must be carried out by a qualified technician in compliance with the manufacturer's instructions (refer to the enclosed installation booklet) and current local safety regulations. • **PROTECTING THE ENVIRONMENT**

**3. Packing** The packing box may be fully recycled as confirmed by the recycling symbol . 4.

**Appliance** The appliance is built from reusable materials. If you decide to scrap the dishwasher, it must be disposed of in compliance with local waste disposal laws. Before scrapping, cut off the power cable so that the appliance cannot be connected to the mains. **PRECAUTIONS AND GENERAL RECOMMENDATIONS** **Child safety** • Do not allow children to play with the dishwasher. • Store the detergent, rinse aid and salt in a dry place out of the reach of children.

**General recommendations** • Only use detergents, rinse aids and regeneration salts specially recommended for use in domestic dishwashers. • On completion of the wash programme switch off the dishwasher and turn off the water tap. @@@@ • If necessary, the power cable may be replaced with one the same obtained from our After-Sales Service. The power cable must only be replaced by a qualified technician. For appliances with water-stop system: The water inlet hose and plastic casing contain electrical components.

Do not therefore cut the hose or immerse the plastic casing in water. If the hose is damaged switch off the appliance immediately. Do not use solvents inside the dishwasher: risk of explosion! Load capacity: -12 place settings. • • **EC Declaration of Conformity** This appliance has been designed, constructed and distributed in compliance with the safety requirements of EC Directives: • 73/23/EC • 89/336/EC • 93/68/EC. **ENERGY AND WATER SAVING TIPS** • • Do not rinse crockery under running water. Always fully load the dishwasher before switching on or set the wash programme to half load (if available) if one rack only is loaded. • If ecological energy sources are available such as solar panel heating, heat pumps or centralised heating systems, the appliance may be connected to the hot water mains up to a maximum temperature of 60°C. Make sure the water inlet hose is of the correct type. Refer to the "Connections" chapter in these user instructions. **40 HOW TO FILL THE SALT CONTAINER** Check the water hardness level in your area.

Consult your local Water Board or check your last water bill. • Set the water hardness by turning the selector (if fitted) inside the door (top left) with a screwdriver. Use the table below to set the dial to the required setting. Selector setting 0 1 2 3 4 5 6 Water hardness 1 soft 1 - 2 medium 2 medium 3 medium-hard 4 hard 4 very hard 4 extremely hard German degrees °dH 0-5 6 - 10 11 - 15 16 - 21 22 - 28 29 - 35 36 - 60 French degrees °fH 0-9 10 - 18 19 - 27 28 - 37 38 - 50 51 - 63 64 - 107 If the water hardness level falls within category 1 (soft), no salt is required. • • If the water hardness level exceeds category 1-2 (medium), before using the dishwasher for the first time, fill the salt container and run a wash cycle so that any excess saline solution discharged is immediately removed by the water to prevent corrosion. The pre-rinse cycle is not sufficient for this purpose. Check the salt level regularly. Important: Only use regeneration salts recommended for use in domestic dishwashers. Do not fill the salt container with detergent as this will cause irreparable damage to the water softener system. To fill the salt container: 1.

Remove the lower rack. 2. Unscrew the cap by turning it counterclockwise. 3. If the dishwasher is new, fill the salt container to the rim with water.

4. Fill the container to the rim with salt (max. 2 kg) and stir with a spoon handle. 5. Screw the cap back on by turning it clockwise.

**Electric indicator:** The salt level indicator lamp on the control panel illuminates when the salt container is empty. **Visual indicator:** The red float is clearly visible in the cap window when the salt container is full. The red float lowers and is no longer visible when the salt container is empty. Salt level indicator The dishwasher is equipped with an electric or visual salt level indicator depending on the model installed. **41 HOW TO FILL THE RINSE AID DISPENSER** The rinse aid facilitates drying and prevents the formation of unsightly spots and streaks on crockery. @ @ Thereafter, regularly check the rinse aid level. Only use rinse aids recommended for use in domestic dishwashers. 1. Unscrew the cap and press button A (see drawing). @ @ 2.

@ @ 3. @ @ **Factory setting:** 3. @ @ @ @ @ @ @ @ @ @ Always use the recommended dosage stated on the detergent pack. @ @ The recommended dosage varies between different brands. The figures inside the large compartment serve as a dosage guide. The figures are in "ml" or "cm<sup>3</sup>". Only fill the detergent dispenser prior to starting a wash programme. @ @ @ @ @ @ First fill the large compartment. Then fill the small compartment. 1.

Pour two thirds of the recommended dosage in the large compartment. 2. Pour the remaining third in the small compartment. Note: Remember to close the large compartment lid. Large compartment volume: 45 ml (up to rim).

Small compartment volume: 10 ml (up to rim). @ @ @ @ Press the ON/OFF button to switch on the dishwasher. Select the programme required by turning the programme selector knob. The corresponding indicator lamp will illuminate. If required, select any additional functions.

1 2. Press the Start button to start the selected wash programme. The Start indicator lamp will illuminate. @ @ @ @ @ @ @ @ @ @ Turn the programme selector knob counter clockwise to the "0" position to switch off the dishwasher (only after the End indicator lamp has illuminated briefly or the Start indicator lamp has switched off). All the indicator lamps switch off. Note: If the dishwasher is switched off during a wash programme, when switched on again the dishwasher resumes the wash cycle from where it was interrupted. Open the door and unload first the lower rack and then the upper one. 4 44

**CONNECTIONS** Refer to the separate installation instructions booklet. **Water inlet and drain:** • Strictly follow local Water Board regulations. • Make sure the inlet and drain hoses are kinkfree and are not crushed.

• If the hose length does not suffice, replace with similar hoses obtained from your local dealer or our After-Sales Service. • The inlet hose must be securely clamped to the water tap to prevent leaks. • The inlet water temperature varies according to the model installed: inlet hose marked "25 °C max."



[You're reading an excerpt. Click here to read official WHIRLPOOL ADP 972/3 WHM\(6910\) user guide](http://yourpdfguides.com/dref/4841813)  
<http://yourpdfguides.com/dref/4841813>

": maximum temperature 25 °C All other models: maximum temperature 60°C. • When installing the appliance, make sure the drain water discharges correctly and, if necessary, remove the wire gauze from the sink siphon. • Secure the drain hose with a clamp to the siphon to prevent it from dropping off during operation. • For appliances with water-stop system only: if the water connections are made correctly, the water-stop system safeguards your home against damage caused by flooding. Electrical connections: • Closely adhere to local Electricity Board regulations. • Voltage information is shown on the rating plate mounted inside the door on the right hand side. • The appliance must be earthed as prescribed by law.

• Do not use extension leads or multiple adapters etc. • Before carrying out maintenance, disconnect the mains plug. • Do not use the dishwasher if it has been damaged in transit. Consult your local retailer or our After-Sales Service. @@@@2.

2 Non-polarized plugs (e.g. @@The other two wires should be connected to the two pins, irrespective of colour. 3) FUSE REPLACEMENT If the mains lead of this appliance is fitted with a BS 1363A 13 amp fused plug, replace the fuse only with an A.S.

T.A. approved type conforming to BS 1362 and proceed as follows: 2) CONNECTION TO A REWIRABLE PLUG - to be carried out only by a qualified electrician The wires in the mains lead are coloured in accordance with the following code: BLUE - "NEUTRAL" ("N") BROWN - "LIVE" ("L") r spray arm has been correctly fitted. Crockery still dirty after washing: • Have you selected the correct programme? • Have you used the correct amount of detergent? • Filters clogged or incorrectly assembled? • Spray arms blocked or nozzles clogged? • Salt container cap screwed down? • Crockery loaded correctly? (the water jets must spray the entire surface of all items). Spotted crockery: • Water hardness duly checked and regulated? • Salt container empty? • Insufficient detergent? Spotted glasses and cutlery: • Too much rinse aid? (Adjust the rinse aid regulator to a lower setting). Note: On some models when the Start button is pressed, a pre-rinse cycle is performed prior to the actual wash programme to regenerate the water softener system. AFTER-SALES SERVICE Before contacting our After-Sales Service, 1. Try to remedy the problem (See "Troubleshooting guide"). 2. Switch off the dishwasher and restart the wash programme to see if the fault repeats.

If, after carrying out the above checks the malfunction persists, call our After-Sales Service and specify: • the nature of the problem; • the appliance type and model; • the service number (the number after the word Service on the adhesive label) located inside the door on the right hand side; • your name, address and telephone number. 48 .



[You're reading an excerpt. Click here to read official WHIRLPOOL  
ADP 972/3 WHM\(6910\) user guide  
http://yourpdfguides.com/dref/4841813](http://yourpdfguides.com/dref/4841813)