



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL ADPL7698WH. You'll find the answers to all your questions on the WHIRLPOOL ADPL7698WH in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual WHIRLPOOL ADPL7698WH
User guide WHIRLPOOL ADPL7698WH
Operating instructions WHIRLPOOL ADPL7698WH
Instructions for use WHIRLPOOL ADPL7698WH
Instruction manual WHIRLPOOL ADPL7698WH

Quick reference guide Whirlpool Chart

BEFORE USING THE APPLIANCE FOR THE FIRST TIME CAREFULLY READ THIS QUICK REFERENCE GUIDE AND THE ASSEMBLY INSTRUCTIONS!

FOR ENERGY SAVING THE CONTROL PANEL DEACTIVATES AUTOMATICALLY AFTER 30 SECONDS IF NO CYCLE HAS STARTED.

WATER RECYCLING INDICATOR
When lit, it indicates that standard program uses water recycling system.

WASH-TIME DISPLAY
Indicates the cycle duration and the remaining time (hours). With "Delayed start" selected it indicates the time remaining until program start: "02:4" if above 10 hours delay time remain and "0:00" if below 10 hours delay time remain. If "Fix It" message appears on the display, see page 9, chapter "What to do...".

DELAY INDICATOR
When lit, it indicates that delay is active.

RINSE AID INDICATOR
When lit (at the end of the cycle), the rinse aid dispenser needs to be refilled.

SALT INDICATOR
When lit (at the end of the cycle), the salt reservoir needs to be refilled.

MULTIZONE INDICATOR
When lit, it indicates that Multizone option is active.

KEYBOARD LOCK INDICATOR
When lit, it indicates that keyboard lock is active.

WATER TAP CLOSED Alarm
Sings when there is no salt water or water tap is closed.

PROGRAM SELECTION BUTTON
Push "P" button (repeatedly) until selected program number is shown on the display (P1 - P15) - see "Table of programs" - next page. After 3 seconds the cycle remaining time is displayed.

MULTIZONE
Allows you to choose the washing zones. Press this button (repeatedly) to select the wash zones:
— 2nd rack
— 2 indicator lights
— only upper rack (including cutlery rack)
— only lower rack
— indicator lights

KEYBOARD LOCK
This option allows you to lock the buttons on the control panel. Children will not be able to accidentally start the dishwasher by pressing the buttons on the control panel when this option is selected. If you want to activate this option hold down the button for 3 seconds. Repeat the same operation to unlock the panel.

ANTIBACTERIAL RINSE
The function activates an antibacterial rinse at the end of the wash cycle, guaranteeing a further reduction of bacteria. Press the button to activate or deactivate the function. This function can be used with the programs indicated in the table of programs. The dishwasher door must be kept shut for the entire duration of the program in order to guarantee a reduction of bacteria. If the door is opened the indicator lamp starts flashing.

POWERCLEAN
Thanks to the additional power jets this option provides a more intensive and powerful wash in the lower rack, in the specific area.

TABLET SETTING
This setting allows to optimize the cycle performances according to the type of detergent used. Push the Tablet button on the indicator (lights up) if you are using the combined detergents in tablet. If you are using powder or gel detergent, the Tablet indicator on the control panel has to be off.

DELAYED START BUTTON
Push the button (repeatedly) to delay the start of the program. Adjustable from 0:30 to 24 hours. With each press of the button, the delay is increased by 4 hours, 1:00 if selection is below 12 hours, 4 hours if selection is above 12 hours. If 24 hours reached, and the button is pressed, the delayed start is deactivated. "OFF" message is shown. Then press the START button. The delay time can be adjusted after Start key press. The dishwasher will start after the set time.

CANCEL/OFF BUTTON
Push this button to switch off the control panel. If pressed for 3 seconds when a program is running it cancels the program. If pressed for 3 seconds when the dishwasher is off it drains the water out. If pressed during program and delayed start selection it selects on it. To cancel the selection and return to previous cycle and option selection.

START/PAUSE/RESUME BUTTON
Push this button to start the selected program. The indicator lights up and goes off at the end of the program. Press Start button to open the door during waiting cycle to pause the cycle - the Start Indicator blinks. To resume the cycle push Start button and close the door.

501 9 300 01552

Whirlpool is a registered trademark of Whirlpool USA EN-I



[You're reading an excerpt. Click here to read official WHIRLPOOL ADPL7698WH user guide](http://yourpdfguides.com/dref/551554)
<http://yourpdfguides.com/dref/551554>

Manual abstract:

Allows you to choose the washing zones. Press this button (repeatedly) to select the wash zones: both racks 2 indicator lights only upper rack (including cutlery rack) indicator lights only lower rack indicator lights KEYBOARD LOCK This option allows you to lock the buttons on the control panel. Children will not be able to accidentally start the dishwasher by pressing the buttons on the control panel when this option is selected. If you want to activate this option hold down the button for 3 seconds. Repeat the same operation to unlock the panel. ANTIBACTERIAL RINSE TABLET SETTING This function activates an antibacterial rinse at the end of the wash cycle, guaranteeing a further reduction of bacteria. Press the button to activate or deactivate the function. This function can be used with the programs indicated in the table of programs. The dishwasher door must be kept shut for the entire duration of the program in order to guarantee reduction of bacteria. If the door is opened the indicator lamp starts flashing.

POWERCLEAN® Thanks to the additional power jets this option provides a more intensive and powerful wash in the lower rack, in the specific area. This setting allows to optimize the cycle performances according the type of detergent used. Push the Tablet button (the indicator lights up) if you are using the combined detergents in tablet. If you are using powder or gel detergent, the Tablet indicator on the control panel has to be off. DELAYED START BUTTON

Push the button (repeatedly) to delay the start of the program.

Adjustable from 0:30 to 24 hours. With each press of the button, the delay start increases by: 0:30 if selection below 4 hours, 1:00 if selection is below 12 hours, 4 hours if selection is above 12 hours. If 24 hours reached, and the button is pressed, the delayed start is deactivated - "OFF" message is shown. Then press the START button. The delay time can be adjusted after Start key press.

The dishwasher will start after the set time. CANCEL/OFF BUTTON Push this button to switch off the control panel. If pressed for 3 seconds when a program is running it cancels this program. If pressed for 3 seconds when the dishwasher is off, it drains the water out. If pressed during program and delayed start selection it cancels the selection and returns to previous cycle and option selection. START/PAUSE/ RESUME BUTTON Push this button to start the selected program: the indicator lights up and goes off at the end of the program. Press Start button or open the door during washing cycle to pause the cycle the Start Indicator blinks. To resume the cycle push Start button and close the door. 5019 300 01552 EN -1- Whirlpool is a registered trademark of Whirlpool USA

Quick reference guide Chart Table of programs Available options Delay Multizone PowerClean® Antibacterial Rinse Delay Multizone Delay Multizone Delay Multizone Delay Multizone PowerClean® Antibacterial Rinse Delay Multizone Antibacterial Rinse Delay Multizone PowerClean® Antibacterial Rinse Delay Multizone PowerClean® Antibacterial Rinse Programs Loading instructions Use for normal soiled dishes with dried-on food. Senses the level of soiling on the dishes and adjusts the program accordingly.

When the sensor is detecting the soil level an animation appears in the display and the cycle duration is updated. The PowerClean® option is activated automatically with this program. To deactivate, press the PowerClean® button on the control panel. Crockery to be washed later. Lightly soiled crockery, for example glasses and cups. Lightly soiled crockery, with no dried-on food. Normally soiled crockery. Standard program the most efficient in terms of its combined energy and water consumption. Detergent Consumption Litres kWh Minutes 1) Drying Phase P1 P2 P3 P4 P5 P6 P7 P8 1) 2) 6th PowerClean®

Pre-Wash Fragile Rapid Eco 2) Sense® 40-70°C X 7.5-13 0.

95-1.45 85-175 Full cold 40°C 45°C 50°C — X X 4.0 10.5 11.0 0.

01 0.85 0.85 14-16 105-114 30-50 NO Light NO X 6.0 0.92 230 Full Daily 60°C Normally soiled crockery.

X 11.0 1.30 80-95 Full Intensive 65°C Recommended program for heavily soiled crockery, especially suitable for pans and saucepans. X 11.0 1.60 165-175 Full Steam Program including steam action dedicated for heavily soiled crockery, pots and pans. Soaking or hand pretreatment is no longer needed. X 11.0 1.75 180-190 Full Program data obtained under normal conditions and with default options on.

Data may vary depending on ambient conditions and used options. Differences of up to 20 minutes are possible with sensor programs as a result of the appliance's automatic calibration system. Reference program for energy label in compliance with EN 50242 regulations. - Note for Testing Institutes: for detailed information on the EN/Standard loading comparison test and other tests, contact the following address: "contact@whirlpool.com". RECYCLING WATER SYSTEM: these programs save water in a dedicated tank. A TANK CLEANING CYCLE (at least 45 min.) is automatically run every 30 cycles or after every power off, to assure the best product conditions. Power consumption in: Left-on mode: 1.08 W / Off-mode: 0.

40 W. EN -2- How to set water hardness in order to always assure the best cleaning results Water hardness should be set before the first wash or if water hardness has been changed Water hardness level is factory set for medium-hard water (level 4). Detergents When powder or gel detergent is used, regeneration salt must be added and water hardness level must be set as indicated in the table on the right. Also, when tablets which include salt functionality are used, regeneration salt still must be added. - First time use Press and hold together Program and buttons for minimum 3 seconds.

The current water hardness setting will be visible on the display. Press the Program button to increase setting. Value range goes from 1 to 7 (when the level reaches 7, the next press of the start button will set the level back to 1). Wait 30 seconds (control panel switches off) or press Start/Pause button to save setting. 2.

...enter this value 1. Ask your water supply company what the water hardness is... on your dishwasher German degrees °dH 0-5 6 - 10 11 - 15 16 - 21 22 - 28 29 - 35 36 - 50 French degrees °fH 0-9 10 - 18 19 - 27 28 - 37 38 - 50 51 - 63 64 - 90 English degrees °eH 0 - 6.3 7 - 12.6 13.

3 - 18.9 19.6 - 25.9 26.6 - 35 35.7 - 44.1 44.8 - 62.4 Water hardness level Soft Medium Average Medium-hard Hard Very hard Extremely hard Insert value is shown in the display 1 2 3 4 5 6 7 Salt required NO 10 1 4 9 YES 3 2 1 7 8 Filling the salt reservoir - Dissolve limescale (not necessary if water hardness level is set to "soft 1") Visual indicator (depending on the model). Unscrew cap.

Daily check Screw on the cap. Salt residual around the cap needs to be removed. Some salt reservoirs have a level indicator integrated in the cap (see below how to check).



[You're reading an excerpt. Click here to read official WHIRLPOOL](http://yourpdfguides.com/dref/5515554)

[ADPL7698WH user guide](http://yourpdfguides.com/dref/5515554)

<http://yourpdfguides.com/dref/5515554>

5 6 1- salt reservoir 2- rinse aid dispenser 3- detergent dispenser 4- racks system 5,6,7,8- available functions on the panel 9- filters 10- spray arms Add salt (never add detergent!) Fill the salt reservoir with water min. 0.

8 kg/max. 1 kg before the first wash only. Once regeneration salt is added, immediately start a wash program (the "Pre-wash" program alone is not sufficient). Residual saline solution or grains of salt can lead to deep-down corrosion, irreparably damaging the stainless steel components. The guarantee is not applicable if faults are caused by such circumstances.

(depending on the model) The salt level indicator lamp may remain lit Salt indicator on the control panel at the end of several wash cycles. If the water hardness is set to level 1 (soft), no The indicator lamp lights up when salt is required and salt indicator lamp will SALT NEEDS TO BE ADDED. remain off. Salt indicator on the salt reservoir cap green: OK. clear: NEEDS TO BE ADDED Before first use, run the appliance with detergent and without loading. EN -3- Adding rinse aid (not necessary when you use tablets). How to adjust the rinse aid dosage regulator Daily check The rinse aid dosage can be adjusted to the detergent used. The lower the setting, the less rinse aid is dispensed (factory setting: position 4). Press the button to open the cover B. Using a coin or similar object, turn the arrow to the desired setting.

After adjusting the rinse aid setting, shut the cover again. 2 Visual indicator If required, open the cover B (press the dedicated button). Add rinse aid to the max. line ~150 ml Check the rinse aid indicator to check the level into the dispenser. (depending on the model) Rinse aid indicator on the control panel The indicator lamp lights up when RINSE AID NEEDS TO BE ADDED. Rinse aid indicator on the dispenser dark: OK. clear: NEEDS TO BE ADDED Only use rinse aids recommended for use in domestic dishwashers. Immediately wipe away any rinse aid spilt accidentally. This prevents the formation of excess suds which can cause a fault function of the appliance. If there are streaks: reduce the dosage by turning the dial to a lower setting (1-3).

If crockery is not perfectly dry: increase the dosage by turning the dial to a higher setting (5-6). Plastic dishes have more difficulty drying and a higher rinse aid setting will not improve the situation. Detergents with rinse aid incorporated may be effective only with longer programs. In the case of shorter programs, detergent residue may be a problem (if necessary, use powder detergent). Detergents with rinse aid incorporated tend to form excess suds.

Adding detergent - Use only detergent specifically for dishwashers in accordance with the supplier's recommendations Daily use Shut the cover by pressing dedicated ribs. 3 Open the cover A (press the dedicated button). Insert detergent: Tablet / powder / gel into the big chamber. Please look for the recommendation of the detergent manufacturer on the packaging of the detergent product. Use only one tablet per one cycle, only placed in detergent dispenser.

Only fill the detergent dispenser prior to Some types of tablets may not dissolve starting a wash completely during the short cycles program. (Fragile, Rapid, Handwash); placing the tablet on the tub bottom can help dissolving and washing. EN -4- Cutlery rack How to load the racks Load cutlery with the handle into the pins. 4 Knives or cutlery with bulky handle can be loaded with the head into the pins. How to remove cutlery rack (if available) - It could be useful to remove cutlery rack to load stem glasses in upper rack. - Open the two retainers (D) to take off the rack. @@@@Plate holders (B) can be folded down to load bowls. A - CLOSED A - CLOSED A - OPEN A - OPEN A TO OPEN A: - TO OPEN: CLICK! 4 Rotate the flap Rotate the flap clockwise and clockwise and hook on rack hook on rack A A B You can load dishes up to Ø 20 cm in the upper rack ONLY if the rack is in lower position e toothpicks if necessary)...

7 5 6 8 EN -8- What to do if... If a fault occurs, before contacting the After-sales Service, make the following checks to try and remedy the problem.

@@@@@- Adjust water hardness - see table, page 3. wash cycles). - Rinse aid dispenser is empty. - The appliance must be switched on. - The dishwasher door doesn't close. - "Delayed start" option is ON.

@@- Check the household circuit fuse if there is no power supply. - Check if the dishwasher's door is closed. @@@@- The water tap must be open. @@@@- Clean the filters and spray arms. - Concave items (e.

g. bowls, cups) must be arranged facing downwards in the rack. @@@@- Repeat without detergent or wait until foam disappears. - Clean the filters. - The drain hose must not be kinked.

- The closure disk of the syphon hose connection must be removed. - Call factory customer service (state fault display). @@- Water pressure too low. @@@@- Drain hose incorrectly fitted. - High level of foam inside. ...shows "F8 E1" - Dirty filters. - Kinked drain hose.

- Syphon hose connection closed. @@In the majority of cases the fault is thus eliminated. RESET: Press for 3 seconds the button. Close the door. Water drains automatically for up to 1 minute. @@- Too little detergent; detergent too old or incorrectly stored. - Temperature not high enough for heavily soiled crockery. @@- Clogged spray arms, dirty filters or not fitted correctly. @@Concave items (e.g.

bowls, cups) must be arranged facing downwards in the rack. @@@@- For heavily soiled crockery, select a wash program with a higher temperature (see Table of programs - chapter "Chart" - page 2). - If you select the "Half load/Multizone" option (if available), remember to load only the upper rack or only the lower rack to increase washing power and thus obtain optimum wash results. - The spray arms must not be clogged, the filters must not be dirty and must be fitted correctly (see page 8, "Maintenance and care"). - The spray arms must be able to turn freely and must not be impeded by crockery or cutlery.

- In areas with very hard water, more regeneration salt needs to be added (see page 3, "How to set water hardness"). - Close the salt reservoir cap properly. - If you use a combined action detergent, try adding more rinse aid. - Synthetic materials do not dry well; if wet at end of cycle, wipe dry. - In this situation, the presence of drops of water on dishes and on the sides of the dishwasher is normal.

Try releasing the door 5 minutes before removing the dishes. - Arrange crockery so that water does not collect in cavities. - Increase the dosage of rinse aid (see page 4, "Adding rinse aid"). - The Rapid program 40°C / 45°C is intended for quickly washing lightly soiled dishes. If used for a full load of medium/heavily soiled dishes, the dishes may not dry completely. If so, select a standard-length program. For best results, open the door after the end of the program and wait 15 minutes before unloading the dishwasher.



[You're reading an excerpt. Click here to read official WHIRLPOOL](http://yourpdfguides.com/dref/5515554)

[ADPL7698WH user guide](http://yourpdfguides.com/dref/5515554)

<http://yourpdfguides.com/dref/5515554>

...

have deposits: regeneration salt residue - Water too hard. - Salt reservoir cap open. - Not enough rinse aid. ...are not dry - Plastic containers dry badly. - Clean dishes left in dishwasher for a long time after end of cycle (e.g. when using "Delayed start" option).

- Incorrect arrangement of the concave items in the rack. - Incorrect dosage the rinse aid. - Rapid program selected. EN -10- What to do if.
. Crockery and cutlery... .

..have discoloured plastic parts ...opaque glasses, etc. ...removable deposits on glasses .

..glasses not sparkling ...permanent deposits on glasses Possible causes... - Tomato/Carrot juice. - Dishes unsuitable for washing in dishwashers (porcelain), - Usage of incorrect programs for glasses.

- Glasses unsuitable for washing in dishwashers (porcelain). - Rainbow effect. Solutions...

- Tomato sauce, for example, can lead to discolouring of plastic parts. Powder detergent is recommended as it allows slightly higher doses to be used for improved whitening. Programs with higher wash temperatures should be used. - Only use dishwasher-proof crockery and dishes. - Dishes should be put together, to avoid touching each other.

Do not put glassware together in baskets. Use suitable program for glass. - Some kinds of glass cannot be washed in the dishwasher. - This phenomenon is irreversible. We recommend in future: - Change the control of system of dosage of softener. - Be careful – follow recommended detergent dosage. - For combined action tablets see detergent producer's recommendations. - In case of tea stains, to enhance bleaching add one teaspoon of baking soda together with detergent into detergent dispenser. - Salty or acidic food residues can cause rust marks even on stainless steel cutlery. To avoid this, always use the Pre-wash program if the dishes are to be washed later.

- In the presence of marks, increase the rinse aid dosage (see page 4, "Adding rinse aid"). - If you use a combined action detergent, try adding more rinse aid. - In the presence of streaks, reduce the rinse aid dosage (see page 4, "Adding rinse aid"). - If you use a combined action detergent which includes rinse aid, do not add any additional rinse aid. - Only use the amount of detergent/rinse aid required, since excessive amounts can lead to excess suds. ...tea cups darken and dirt does not disappear after washing in dishwasher ..

.rust marks ...other marks .

...streaks ...

suds - Theine present in black tea. - Pre-wash program not used. - Rinse aid dosage too low. - Rinse aid dosage too high. - Unsuitable dosage of detergent/rinse aid. If, after carrying out the above checks, the fault persists, disconnect the mains plug and turn off the water tap. Contact the After-sales Service (see warranty). Before contacting our After-Sales Service, take note of the following: - the description of the fault, - the appliance type and model, - the service code (the number indicated on the adhesive rating plate) inside the door on the right-hand side; EN -11- Precautions and general recommendations 1. Packing The packaging materials are 100% recyclable and marked with the recycling symbol . 2.

Removing the packaging and inspecting the contents After unpacking, make sure that the dishwasher is undamaged and that the door closes correctly. If in doubt, contact a qualified technician or your local retailer. 3. Before using the dishwasher for the first time - The appliance is designed to operate with a minimum ambient temperature of 5°C. - This dishwasher has been tested by the manufacturer to ensure it functions correctly. Such testing may leave slight drips/water marks which will disappear with the first wash. 4. Energy and water savings - Do not rinse crockery under running water. - Always fully load the dishwasher before running it or select the "Half load/ Multizone" option (if available). - If ecological energy sources are available such as solar panel heating, heat pumps or centralised heating systems, the appliance may be connected to the hot water mains up to a maximum temperature of 60°C.

Make sure the water inlet hose is of the correct type ("70°C Max" or "90°C Max"). 5. Child safety - Keep the packaging materials out of the reach of children. - Children must not be allowed to play with the dishwasher. @@6.

@@- Do not operate the appliance in the open air. @@- The water in the dishwasher is not potable. - Do not use solvents inside the dishwasher: risk of explosion! - Be careful when the door is open: risk of tripping! @@Do not rest objects on the open door or sit or stand on it. - Sharp items that might cause injury (e.g.

knives), must be placed in the cutlery basket with the sharp end facing downwards. Long-handled utensils must be arranged horizontally in the upper rack, with the sharp end facing away from the front of the appliance. The guarantee is not applicable if faults are caused by incorrect use of the appliance. We reserve the right to make technical modifications. EN -12- Before cleaning or carrying out maintenance, disconnect the mains plug and turn off the water tap; also in the event of any malfunction. - Repairs and technical modifications must be carried out exclusively by a qualified technician. 7. Resistance to frost If the appliance is placed in surroundings exposed to the risk of frost, it must be drained completely. Turn off the water tap, remove the inlet and outlet hoses, and let all the water drain away. Make sure there is at least 1 kg of dissolved regeneration salt in the salt container, to protect the appliance from temperatures of up to -20°C.

When the program resumes, an error message may be indicated (see page 9). "F6 E2" - the appliance must remain at an ambient temperature of min. 5°C for at least 24 hours. After eliminating these faults, RESET the appliance (see chapter "What to do if..."). 8. Disposal - The appliance is manufactured using recyclable materials. If you decide to scrap the dishwasher, it must be disposed of in compliance with local waste disposal regulations.

Make it unusable by cutting off the power cord. To prevent situations of potential danger to children (e.g. danger of suffocation), break the lock of the door so that it can no longer be closed. - This appliance is marked according to the European directive 2002/96/CE on Waste Electrical and Electronic Equipment (WEEE).

By ensuring that this appliance is scrapped suitably, you can help prevent potentially damaging consequences for the environment and health. Unsuitable disposal of an appliance of this type as household waste could have detrimental effects on the environment. The symbol on the appliance, or on documentation enclosed with the appliance, indicates that this product must not be treated as household waste, but must be delivered to the nearest collection centre for the recycling of electrical and electronic appliances. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For further information on the treatment, recovery and recycling of this appliance, contact your competent local authority, the collection service for household waste or the shop where you purchased the appliance.

[You're reading an excerpt. Click here to read official WHIRLPOOL ADPL7698WH user guide](#)



<http://yourpdfguides.com/dref/5515554>

EC Declaration of conformity This appliance has been designed, constructed and distributed in compliance with the 2006/95/CE, 89/336/CE, 93/68/CE and safety requirements of EC Directives: 2002/95/CE (RoHS Directive). Loading Capacity: 13 place settings..



[You're reading an excerpt. Click here to read official WHIRLPOOL
ADPL7698WH user guide
http://yourpdfguides.com/dref/5515554](http://yourpdfguides.com/dref/5515554)