


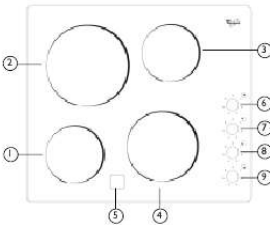 


Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL AKM 901/NE/03. You'll find the answers to all your questions on the WHIRLPOOL AKM 901/NE/03 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

 
User manual WHIRLPOOL AKM 901/NE/03 User guide WHIRLPOOL AKM 901/NE/03 Operating instructions WHIRLPOOL AKM 901/NE/03 Instructions for use WHIRLPOOL AKM 901/NE/03 Instruction manual WHIRLPOOL AKM 901/NE/03

GB AKM 901/03  **HOB INSTRUCTIONS** **GB**



1. Radiant cooking zone Ø 145
2. Radiant cooking zone Ø 210
3. Radiant cooking zone Ø 145
4. Radiant cooking zone Ø 180
5. Residual heat indicator lights
6. Control knob for rear right cooking zone
7. Control knob for rear left cooking zone
8. Control knob for front left cooking zone
9. Control knob for front right cooking zone

Important:
To avoid permanently damaging the glass-ceramic top, do not use:
- Pots with bottoms that are not perfectly flat
- Metal pots with enamelled bottom.

PROTECTING THE ENVIRONMENT
Disposal of packaging materials
• The packing material can all be fully recycled, as confirmed by the recycling symbol .
• The various parts of the packing must not be sent for waste, but recycled in conformity with the regulations imposed by local authorities.
Disposal of used household appliances
• This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

Energy saving
• Use pots and pans whose bottom diameter is equal to that of the cooker plates, or slightly larger.
• Only use fat-bottomed pots and pans.
• If possible, keep the pot covered when cooking.
• Cook vegetables, potatoes, etc. with little water in order to cut down cooking time.
• A pressure cooker allows you to save even more energy and time.

CAUTION
• Should the hob become cracked or broken, do not use it and call the After Sales Service immediately.
• If the hob incorporates halogen cooking elements, do not stare at them.
• The hob is designed for use as a domestic food cooker only. No other type of use is allowed. The Manufacturer declines all responsibility for inappropriate use or incorrect setting of the controls.
• This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given initial supervision or instruction concerning use of the appliance by a person responsible for their safety.
• Do not expose the hob to atmospheric agents.
• Any repairs or adjustments must be carried out exclusively by an authorised technician.
• Avoid touching the hob with wet hands or using it when barefoot.
• **Do not allow children to touch:**
- the hob in general, to avoid burns.
- During and immediately after use the hob reaches extremely high temperatures;
- packing materials (bags, polystyrene, metal parts, etc.);
- the hob to be scrapped.
• Make sure that the electrical wires of other electrical appliances near the hob do not come into contact with hot parts of the hob itself.

BEFORE USING THE COOKING HOB
Before use, remove:
- adhesives stuck on the hob;
- cardboard guards and protective plastic film;
- check whether the hob has been damaged during transport. If in doubt, contact the After Sales Service.

 
ACCESSORY
Child guard AMH 122
This accessory can be obtained from the After Sales Service under code number 461 931 018436 or from your dealer under reference number 017124.

Care and maintenance
Important: never clean the appliance with steam cleaning equipment.
• Clean the hob, when it is cool, after each use. This will prevent the build-up of dirt and make cleaning easier.
• Use a clean cloth, absorbent kitchen wipes and washing up liquid or a specific glass ceramic cleaner.
• Remove baked-on dirt with the special scraper tool (if provided) and specific cleaning products.
• Any food spills should be cleaned off before they dry.
• Do not use abrasive products, chlorine-based cleaners, appliance-cleaner spray or pan scourers.
• The hob should be treated periodically with specific products available from the shops, following the manufacturer's instructions.

Telescopic knobs (depending on model)
• The knobs can be lifted approx. 1 cm for cleaning.
• After cleaning, restore the knob to its original position.

TROUBLESHOOTING GUIDE
The hob does not work:
- Make sure that the power supply is on.
- Turn the hob off and on again, to make sure that the problem has been solved.
- Make sure that the knob is not turned to "0".
- Turn the multi-pole switch to "Off" for a few minutes and then turn it back to "On".
The hob will not switch off:
- disconnect the hob immediately from the power supply.

DIMENSIONS OF THE COOKING HOB AND WORKTOP (mm)

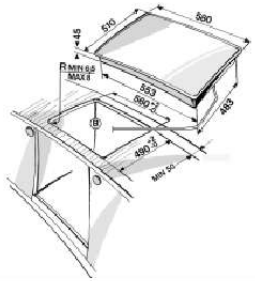

Make sure that the voltage indicated on the rating plate is the same as the mains voltage. Technical data is given on the rating plate on the underside of the hob and also below:

Supply voltage	Conductors (number and size)
230 V ~	H05RR-F 3 X 2.5 mm ²

Type PLEVS 230 V ~ 50 Hz 5.8 kW

5019 319 01158 To get full satisfaction from the hob, please read these instructions carefully and keep them for future consultation.

Whirlpool is a registered trade mark of Whirlpool USA
© Copyright Whirlpool Europe S.r.l. All rights reserved



[You're reading an excerpt. Click here to read official WHIRLPOOL AKM 901/NE/03 user guide](http://yourpdfguides.com/dref/4910473)
<http://yourpdfguides.com/dref/4910473>

Manual abstract:

2. 3 3. 4. 5. 6 7 6. 7. 8. 9. HOB INSTRUCTIONS Radiant cooking zone Ø 145 Radiant cooking zone Ø 210 Radiant cooking zone Ø 145 Radiant cooking zone Ø 180 Residual heat indicator lights Control knob for rear right cooking zone Control knob for rear left cooking zone Control knob for front left cooking zone Control knob for front right cooking zone • GB PROTECTING THE ENVIRONMENT Disposal of packaging materials • • The packing material can all be fully recycled, as confirmed by the recycling symbol. The various parts of the packing must not be sent for waste, but recycled in conformity with the regulations imposed by local authorities.

This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The symbol on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. • • • • hot parts of the hob itself. Always keep a watch on pans when cooking with oil and grease. The oil and grease might overheat and catch fire! Do not use the hob as a support or worktop. Do not leave the hot plates/cookers turned on when they are empty.

Do not rest plastic, aluminium foil, cloths, paper etc. on the hot plates/cookers. The hob is fitted with hot plates/cookers of different sizes. Use pans whose bottom diameter is equal to that of the hot plates/cookers, or slightly larger. 2 Disposal of used household appliances BEFORE USING THE COOKING HOB

Before use, remove: - adhesives stuck on the hob; - cardboard guards and protective plastic film; - check whether the hob has been damaged during transport. If in doubt, contact the After Sales Service. 1 8 9 5 4 ACCESSORY Child guard AMH 122 This accessory can be obtained from the After Sales Service under code number 4819 310 18436 or from your dealer under reference number 017124. • • • To use the hob turn the knob(s) clockwise and position it (them) on the required power setting. To switch off the hob return the knob(s) to position "0". @@@@• Clean the hob, when it is cool, after each use.

This will prevent the build-up of dirt and make cleaning easier. • Use a clean cloth, absorbent kitchen wipes and washing up liquid or a specific glass ceramic cleaner. • Remove baked-on dirt with the special scraper tool (if provided) and specific cleaning products. • Any food spills should be cleaned off before they dry. • Do not use abrasive products, chlorine-based cleaners, appliance-cleaner spray or pan scourers. • The hob should be treated periodically with specific products available from the shops, following the manufacturer's instructions. Energy saving • • • • • ELECTRICAL CONNECTION Supply voltage 230 V + ~ Conductors (number and size) H05RR-F 3 X 2.5 mm² • • • • • Use pots and pans whose bottom diameter is equal to that of the cooker plates, or slightly larger. Only use flat-bottomed pots and pans. If possible, keep the pot covered when cooking.

Cook vegetables, potatoes, etc. with little water in order to cut down cooking time. A pressure cooker allows you to save even more energy and time. Should the hob become cracked or broken, do not use it and call the After Sales Service immediately. If the hob incorporates halogen cooking elements, do not stare at them.

The hob is designed for use as a domestic food cooker only. No other type of use is allowed. The Manufacturer declines all responsibility for inappropriate use or incorrect setting of the controls. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given initial supervision or instruction concerning use of the appliance by a person responsible for their safety. Do not expose the hob to atmospheric agents.

Any repairs or adjustments must be carried out exclusively by an authorised technician. Avoid touching the hob with wet hands or using it when barefoot. Do not allow children to touch: - the hob in general, to avoid burns. During and immediately after use the hob reaches extremely high temperatures; - packing materials (bags, polystyrene, metal parts, etc.); - the hob to be scrapped. Make sure that the electrical wires of other electrical appliances near the hob do not come into contact with DIMENSIONS OF THE COOKING HOB AND WORKTOP (mm) Make sure that the voltage indicated on the rating plate is the same as the mains voltage. Technical data is given on the rating plate on the underside of the hob and also below: CAUTION Telescopic knobs (depending on model) • • The knobs can be lifted approx. 1 cm for cleaning. @@@@- Make sure that the knob is not turned to "0". @@@@ @@@@ @@@@ @@@@ @@@@ @@@@ 1935/2004.

This hob (Class Y) has been designed to be used only for cooking. @@@@ @@@@ @@@@ @@@@ @@@@ If you are not sure contact the dealer or the nearest service centre. • 1. 2. • 1. 2. @@@@ @@@@ Code 4819 404 78697. @@• Insert a separator panel at a minimum distance of 90 mm from the bottom of the hob, so that it cannot be accessed by the user. • If there is an oven under the hob, make sure that it is manufactured by us and equipped with a cooling system. • There must be nothing between the hob and the oven (e.

g. cables, insulating material, etc.). • An adjacent column unit must be installed at least 100 mm from the edge of the hob. • Cut an opening in the worktop of the given dimensions.

• We recommend you seal the internal edges of the worktop with wood glue or silicone. • If not already in place, apply the supplied seal to the hob, after cleaning the adhesive surface thoroughly. • If the worktop is made of wood, use the spring clips and screws provided. Secure the spring clips (A) (fig. 1) with the screws provided (B) (fig.

1) as shown, paying attention to the specified distances. Fit the hob into the worktop. If the worktop is made of marble, plastic, ceramic, stone, etc., the hob must be secured with special brackets (C) (fig. 2). Fit the hob into the worktop (fig. 1). Place the 4 brackets (C) in position in accordance with the thickness of the worktop as shown in fig. 2. Fasten the 4 screws (D) in the positions (E) (fig.



[You're reading an excerpt. Click here to read official WHIRLPOOL AKM 901/NE/03 user guide](http://yourpdfguides.com/dref/4910473)

2). *Electrical connection* • • Regulations require that the appliance be earthed. Connection to the mains must be carried out by a qualified technician in accordance with the manufacturer's instructions and in compliance with local regulations. The installer is responsible for connecting appliances correctly to the mains and for observing the safety regulations. @@@@Do not use multiple plug adapters or extension leads. @@1 • • • • • Connecting the hob to the power supply Fig. 2 Fig. 3 Note: the yellow/green earth wire must be connected to the screw with the symbol . • Strip approx. 70 mm of the cable sheath from the power supply cable (G).

• Strip approx. 10 mm of sheath from the conductors. Insert the cable (G) through the opening in the lid (F). Glass-ceramic hob • Insert the cable into the cable clamp and connect the Important: remove any protective film before installing conductors to the terminal block as indicated in the the hob. diagram printed on the lid.

Make sure that the opening in the worktop for the hob is cut • Secure the power cable (G) by means of the cable according to the dimensions given in the drawing, paying clamp. attention to the tolerance range. • Refit the protection lid (F). The hob should not be forced into the worktop. Forcing the • After the electrical connection, fit the hob from the top glass-ceramic top may cause it to crack (even at a later date)! and hook it to the fixing springs, according to the illustration.



[You're reading an excerpt. Click here to read official WHIRLPOOL AKM 901/NE/03 user guide](#)
<http://yourpdfguides.com/dref/4910473>