



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL AKP 802 IX. You'll find the answers to all your questions on the WHIRLPOOL AKP 802 IX in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual WHIRLPOOL AKP 802 IX
User guide WHIRLPOOL AKP 802 IX
Operating instructions WHIRLPOOL AKP 802 IX
Instructions for use WHIRLPOOL AKP 802 IX
Instruction manual WHIRLPOOL AKP 802 IX

INSTRUCTIONS FOR USE

INSTALLATION
ELECTRICAL CONNECTION
BEFORE USING THE OVEN
SAFEGUARDING THE ENVIRONMENT
PRECAUTIONS AND GENERAL
RECOMMENDATIONS
OVEN ACCESSORIES
CARE AND CLEANING
TROUBLE-SHOOTING GUIDE
AFTER SALES SERVICE
DECLARATION OF CONFORMITY CE

3



[You're reading an excerpt. Click here to read official WHIRLPOOL
AKP 802 IX user guide](http://yourpdfguides.com/dref/4830519)
<http://yourpdfguides.com/dref/4830519>

Manual abstract:

Do not lift the oven by the handle, but hold it by the sides. Make sure that the appliance was not damaged during transport. The oven and unit dimensions are shown in the below figures. The units in contact with the oven must be heat-resistant (min. 85°C). If the plastic laminates or the sealing material are not sufficiently heat resistant, this may result in the formation of bubbles, deformation of the surface or detachment of the coating. • Insert the oven in the unit cavity, lifting it by the sides and being careful not to trap the power cable. • The oven and housing dimensions are illustrated in the below figures. • For correct ventilation, follow the ventilation opening directions shown in the figure 1. • Two systems can be used to fit your appliance to a chosen furniture layout: A.

Between two side panels of two distinct cabinet units without the aid of a support shelf, by fitting four support steel brackets provided with the product. (fig. 3). B. Between two side panels each fixed to the side of a cabinet unit without the aid of a support shelf.

In this case only the two lower support brackets will be necessary (fig. 4). Note: In both of the above cases you must measure 717 mm from the underside of the worktop and mark the correct position of the lower support brackets before fixing them to the sides. With reference to (fig. @@If necessary, this product can be installed in a housing unit (fig.

2). @@This housing unit will need to fulfil the ventilation requirements. @@1 Mi n. BACK EDGE OF SUPPORT SHELF (WHEN APPLICABLE) Fig. 2 Mi n. @@3 Fig. 4 52 5 4 708 715 715 ELECTRICAL CONNECTION • Warning: This appliance must be earthed. • Electrical installation must comply with all relevant local and national regulations. Make sure that the voltage supply is the same as the voltage shown on the rating plate positioned on the lower part of the front of the oven. • This appliance must be connected to an a.

c. single phase 230V, 50Hz electricity supply. • The total rated load is 4.120 kW, connect the appliance accordingly. • Fit an all-pole On/Off switch between the appliance and the power supply with minimum contact separation of 3 mm. • If necessary, the electrical power cable must be replaced exclusively with a power cable having identical characteristics to the original supplied by the manufacturer. This operation must be performed by the After Sales Service or a qualified electrician. BEFORE USING THE OVEN • For best use of this oven read the instructions for use carefully and keep them in a safe place. • Remove the cardboard and polystyrene protection from inside the oven. • Clean the inside of the oven with non abrasive soap and warm water.

• Remove the accessories from the oven and heat it at the maximum temperature for about 1 hour to remove the odour and fumes from the insulating material and the protective greases. • The window should be kept open during this operation. SAFEGUARDING THE ENVIRONMENT 1. Packing • The packaging material is 100% recyclable, as confirmed by the recycling symbol. The symbol on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste.

Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. 2. Oven • This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE).

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. 5 PRECAUTIONS AND GENERAL RECOMMENDATIONS Warning: • Not intended for use by young children and infirm persons without supervision. • Young children should be supervised to ensure they not play with the appliance. • The appliance must not be used by people (including children) with limited physical, sensory or mental abilities, or without experience or expertise, unless they have received instructions for using it from those responsible for their safety. • The accessible parts of the oven may get very hot during use. Keep children away. @@• The unit gets very hot during use. Do not touch the heating elements in the oven. @@Any other use is forbidden. @@• Never expose the oven to atmospheric agents.

@@Do not cling to the doors. • Never hang anything heavy on the oven doors handles. @@• The oven doors must close properly. The door seals must be kept clean. • Do not pour water directly into the inside of a hot oven. The enamel coating could be damaged. @@We recommend the oven be cleaned before reusing it. @@@@Do not obstruct the vent opening. @@@@The pressure that develops inside the packaging might cause it to explode, damaging the oven. • Do not use containers made of synthetic material for cooking (except for packages specifically designed for this purpose; see the manufacturer's instructions).

They could melt at high temperatures. • Keep an eye on the oven if you are using a lot of fat or oil. Oil and fat can overheat and catch fire! • Never pull out fully loaded shelves. Use extreme caution. 6 OVEN ACCESSORIES Drip tray □ The drip tray is designed to collect fat and food particles when it is positioned under the grid or as a plate, such as when cooking meat, chicken and fish with or without vegetables.

Pour water in the drip tray to cover the bottom to reduce smoke and fat splatters. Wire shelf □ To be used to cook food or as a support for pans, cake tins or any other cooking container. It can be positioned on any level available. Kit "Grill Pan Set" □ The set comprises a grid, to be placed on the drip tray, and one handle. 7 CARE AND CLEANING Important: Do not use steam cleaners.

Exterior of the oven • Clean with a damp cloth. If it is very dirty, add a few drops of washing up detergent to the water. Wipe with a dry cloth. • Do not use corrosive or abrasive detergents, which dull the surface. In the event that one of these products comes into contact with the oven, immediately clean it using a damp cloth. • Slight differences in colour on the front of the appliance are determined by the different materials used, such as glass, plastic and metal.

Accessories • Soak the accessories in water with washing up detergent immediately after use. Food residues can be easily removed using a brush or sponge. Oven cavity • Do not use abrasive cleaners or pan scourers. Use special oven cleaners and follow the manufacturer's instructions.



[You're reading an excerpt. Click here to read official WHIRLPOOL](http://yourpdfguides.com/dref/4830519)

[AKP 802 IX user guide](http://yourpdfguides.com/dref/4830519)

<http://yourpdfguides.com/dref/4830519>

• After every use, wait for the oven to cool then clean it to prevent the build-up of baked-on food residues. • With long cooking times or when cooking on different levels, especially food with a high water content (pizzas, stuffed vegetables, etc.) condensation may form on the inside of the doors and the seal. When the ovens are cool, dry the inside of the doors with a cloth or sponge. • Clean the glass of the doors with a suitable liquid detergent. Replacing the bulb
Warning: Disconnect the appliance from the power supply. To remove the side runner frame, push it simultaneously down and towards the centre of the oven (A-fig.1). Then lift the side runner frame upwards to release it from the cavity wall (B-fig.1).

Prise off the glass cover C using a screwdriver E. Change the lamp D (fig. 2). Note: use only 25 W/230 V, E-14 type, T300°C bulbs available from After Sales Service. Refit the glass cover, pressing it slightly (fig.

2). To refit the side runner frame, follow the steps above in reverse order. Fig. @@When bolt G is raised, the hinge is released from its housing. @@@@3).

WARNING • Take care not to dislodge the hinge lock system when removing the door as the hinge mechanism has a strong spring system! • Do not immerse the door in water at any time. Fig. 2 Fig. 3 8 TROUBLE-SHOOTING GUIDE 1. The oven does not heat: Check: • Has the selector knob been set to the required function? • Has the temperature been set? • Is there a power failure? 2. The interior light does not switch on: Check: • Is there a power failure? • Is the bulb faulty? If so, replace it. AFTER SALES SERVICE Before contacting AFTER SALES SERVICE: 1. Check whether you can deal with the problem without help (see "Trouble-shooting Guide"). 2. Switch the appliance on again to check.



[You're reading an excerpt. Click here to read official WHIRLPOOL
AKP 802 IX user guide
http://yourpdfguides.com/dref/4830519](http://yourpdfguides.com/dref/4830519)