



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL AKT 809/NE. You'll find the answers to all your questions on the WHIRLPOOL AKT 809/NE in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

 
**User manual WHIRLPOOL AKT 809/NE**  
**User guide WHIRLPOOL AKT 809/NE**  
**Operating instructions WHIRLPOOL AKT 809/NE**  
**Instructions for use WHIRLPOOL AKT 809/NE**  
**Instruction manual WHIRLPOOL AKT 809/NE**



## INSTRUCTION FOR USE



BEFORE USING THE GLASS CERAMIC  
HOB  
INSTALLATION  
ELECTRICAL CONNECTIONS  
ENERGY SAVING TIPS  
SAFEGUARDING THE ENVIRONMENT  
PRECAUTIONS AND GENERAL  
RECOMMENDATIONS  
HOB ACCESSORIES  
CARE AND MAINTENANCE OF THE  
GLASS-CERAMIC HOB  
TROUBLESHOOTING GUIDE  
AFTER SALES SERVICE



[You're reading an excerpt. Click here to read official WHIRLPOOL AKT 809/NE user guide](http://yourpdfguides.com/dref/4911045)  
<http://yourpdfguides.com/dref/4911045>

**Manual abstract:**

fm Page 81 Friday, April 11, 2008 5:31 PM INSTRUCTION FOR USE BEFORE USING THE GLASS CERAMIC HOB INSTALLATION ELECTRICAL CONNECTIONS ENERGY SAVING TIPS SAFEGUARDING THE ENVIRONMENT PRECAUTIONS AND GENERAL RECOMMENDATIONS HOB ACCESSORIES CARE AND MAINTENANCE OF THE GLASS-CERAMIC HOB TROUBLESHOOTING GUIDE AFTER SALES SERVICE 81 31902044GB.fm Page 82 Friday, April 11, 2008 5:31 PM BEFORE USING THE GLASS CERAMIC HOB • To make the most of your new appliance, please read the user instructions carefully and keep them handy for future consultation. INSTALLATION Cooktop • The cooktop must be set into a worktop between 20 mm and 50 mm deep • There must be nothing between the cooktop and the oven (cross rails, brackets, etc.). • The distance between the lower face of the glass ceramic hob and the cupboard or separating panel must be at least 20 mm. • If the cooktop is to be installed next to a column unit, leave a distance of at least 100 mm from the edge of the cooktop to the side of the column unit. • Make an opening in the worktop, respecting the dimensions indicated in the enclosed product description sheet. • Apply the supplied gasket to the cooktop (unless it has already been fitted), after having cleaned its surface. Important In order to prevent the electronic circuits from overheating, and therefore from being damaged, we recommend the following: • Do not install the cooktop near a dishwasher or washing machine, so that the electronic circuits do not come into contact with steam or moisture, which could damage them. If an oven (from our range of ovens) is installed beneath the cooktop, make sure that it is equipped with a cooling system. If the temperature of the electronic circuits exceeds the maximum permitted temperature, the cooktop will switch off automatically; in this case, wait for a few minutes until the internal temperature of the electronic circuits reaches a tolerable level, at which point it will be possible to switch the hob on again. • Switch the hob off after use. Rear wall Front 82 31902044GB.fm Page 83 Friday, April 11, 2008 5:31 PM INSTALLATION Assembly A) If the worktop is made of wood, use the appropriate brackets, spring clips and screws provided. • Position the 4 clips (A) around the cooktop frame, in the slots provided, see Fig. @@2. @ @ @ @ @ @ • Insert the cook hob into the pre-prepared hole ensuring that the clips (A) lodge into the bracket slots provided (C Fig. 4 e 5). Fig. 1 A Fig. 2 C B Fig. 3 A Fig. 4 Fig. 5 B) If the worktop is made of marble, ceramic, stone, plastic materials, etc., order the installation kit, code 4812 310 19277 from an authorized after-sales service. 83 31902044GB.fm Page 84 Friday, April 11, 2008 5:31 PM ELECTRICAL CONNECTIONS Electrical connection must be made before connecting the appliance to the electricity supply. The appliance must be installed by a qualified electrician who is fully aware of current safety and installation regulations. Specifically, installation must be carried out in compliance with the regulations of the local electricity supply company. Make sure that the voltage shown on the rating plate is the same as the power supply voltage in your home.

Regulations require that the appliance be earthed: use conductors (including the earth conductor) of the appropriate size only. The manufacturer declines all liability for injury to persons or animals and for damage to property resulting from failure to observe the above regulations. For the electrical connection use a H05 RR-F type cable as indicated in the table below: Power supply voltage. Conductors Amount x size 230V ~ + 230V 3~ + 400V 3N ~ + 400V 2N ~ + 3 X 4 mm2 4 X 1.5 mm2 5 X 1.5 mm2 4 X 1.5 mm2 The appliance must be connected to the electricity supply by means of an all-pole disconnect switch with minimum contact gap of 3 mm. Attention: the power supply cable must be long enough to allow the cooktop to be removed from the worktop and must be positioned so as to avoid damage or overheating caused by contact with the base. Connecting to the terminal board Note: the yellow/green earth wire must be connected to the terminal with the symbol and must be longer than the other wires. • Remove approx. 70 mm of the cable sheath from the power supply cable (B). • Strip approx. 10 mm of sheath from the wires. Then insert the power supply cable into the cable clamp and connect the wires to the terminal block as indicated in the connection diagram placed close to the terminal block itself. • Secure the power supply cable (B) by means of the cable clamp.

• Close the terminal board with the cover (A) securing it with the screw provided. • After the electrical connection, fit the hob from the top and hook it to the support springs, according to the illustration. 84 31902044GB.fm Page 85 Friday, April 11, 2008 5:31 PM ENERGY SAVING TIPS • Use pots and pans whose bottom diameter is equal to that of the cooking zone or slightly larger. • Only use flat-bottomed pots and pans. • If possible, keep pot lids on when cooking. • Cook vegetables, potatoes, et. with little water in order to cut down cooking time. • A pressure cooker allows you to save even more energy and time. NO! SAFEGUARDING THE ENVIRONMENT 1. Packing • The packaging material can be 100% recycled, as confirmed by the recycling symbol ( ). 2. Products This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). @ @ @ @ @ @ @ @ @ @ @ @ Any other use of the appliances (e.g.

@ @ @ @ @ @ @ @ @ @ @ @ Make sure children do not play with the appliance. @ @ @ @ @ @ @ @ @ @ @ @ • The cooktop features different size hotplates/cooking zones. @ @ @ @ - When finished cooking, press button . • Do not use the cooktop as a work surface or a support surface. @ @ • If the glass ceramic surface should break or crack due to violent impact (falling objects, etc.) do not use it and call the After-Sales Service immediately. • Do not place food wrapped in aluminium foil, plastic containers or cloths on the hot cooking zones. • Do not drag pans across the glass-ceramic surface - risk of scratches. • Avoid spilling sugar and similar substances on the cooktop. If necessary, clean the cooktop immediately following the care and maintenance instructions in this handbook. • If the hob is fitted with halogen lamps, do not stare at the bulbs directly. HOB ACCESSORIES Child guard accessory AMH 122 This accessory can be obtained from the After-Sales Service under Part N° 4819 310 18436. 86 31902044GB.fm Page 87 Friday, April 11, 2008 5:31 PM CARE AND MAINTENANCE OF THE GLASS CERAMIC HOB Clean the cooktop, when it is cool, after each use. This will prevent the build-up of dirt and make cleaning easier.

Important: at all costs avoid the use of high pressure water or steam cleaning equipment. • Use a clean cloth, absorbent kitchen wipes and washing up liquid or a specific glass ceramic cleaner. • Remove baked-on dirt with the supplied scraper tool and specific cleaning products.



[You're reading an excerpt. Click here to read official WHIRLPOOL AKT 809/NE user guide](http://yourpdfguides.com/dref/4911045)  
<http://yourpdfguides.com/dref/4911045>

• Food spills should be cleaned off before they bake onto the glass ceramic surface. • Foods with high sugar content (toffee, fruit juice, jam, etc.) that boil over while cooking, or spattered sugar stains must be immediately removed using a scraper. • Do not use abrasive products, bleach, oven-cleaner spray or pan scourers. The cooktop should be treated periodically with a proprietary brand of protective wax for glass-ceramic hobs. **TROUBLESHOOTING GUIDE** Cooktop not working • When pressing the control buttons, did you follow the instructions in the section "Using the hob" in the enclosed "Product Description Sheet"? Is there perhaps a power failure? Did you dry the hob carefully after cleaning it? If a cooking zone has been selected and an "F" or an "ER" appear on the display followed by a number, contact the After Sales Service and inform them. - With the exception of the message "F03" or "ER03" that identifies the incorrect cleaning of the controls area. - To solve the problem follow the instruction in the ICleaning and maintenance of the glass-ceramic hob paragraph. @@@@Try to solve the problem (see "Troubleshooting Guide"). 2. @@@@Please give: a short description of the fault, • the precise type and model of the appliances, • the service number (the number after the word "Service" on the data plate), located under the hob or on the Product Description Sheet. The service number is also indicated on the warranty booklet, • your complete address and phone number.

If any repairs are required, please contact an authorized After-sales Service as indicated in the warranty. In the unlikely event that an operation or repair is carried out by an unauthorised technician, always request a certification of the job carried out and insist on the use of original spare parts. Failure to comply with these instructions may compromise the safety and quality of the product. 87 .



[You're reading an excerpt. Click here to read official WHIRLPOOL](#)

[AKT 809/NE user guide](#)

<http://yourpdfguides.com/dref/4911045>