




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL AKZ 151 IX. You'll find the answers to all your questions on the WHIRLPOOL AKZ 151 IX in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual WHIRLPOOL AKZ 151 IX
User guide WHIRLPOOL AKZ 151 IX
Operating instructions WHIRLPOOL AKZ 151 IX
Instructions for use WHIRLPOOL AKZ 151 IX
Instruction manual WHIRLPOOL AKZ 151 IX

AKZ 151
GB IE

PRODUCT DESCRIPTION SHEET

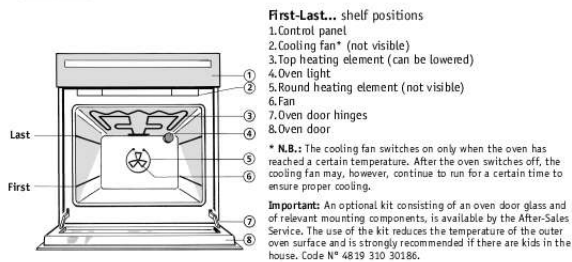


ACCESSORIES

- Grid
- Grill pan set
- Catalytic panels

OVEN FUNCTIONS TABLE

Function symbol	Function	Preset temperature/level	Function description
0	OVEN OFF	-	-
	OVEN LIGHT	-	To switch on the oven light.
	MLTF (Heat Maintenance)	35C	To keep a constant temperature, either 35°C or 60°C.
	FAN	160C	To cook on more than one shelf level at the same temperature.
	GRILL	3	To grill small pieces of meat, toast, etc.
	TURBOGRILL (Grill + Fan)	3	To grill large pieces of meat.

 5019 310 53101



1. Selector knob: to choose the oven functions.
2. Button to select and confirm the different operations (operate by single presses only).
3. Knob to set: time of day, cooking time, the time at which cooking should terminate, the temperatures and the power levels (Function P).

STARTING THE OVEN

When the oven is connected to the power supply for the first time, or re-connected after a power failure, the display shows "5LDP".

To start the oven:

- turn knob 1 to "0".
- press button 2. The display shows "--".

FOR A DESCRIPTION ON HOW TO USE THE OVEN, PLEASE REFER TO THE PROGRAMMER DESCRIPTION SHEET.



[You're reading an excerpt. Click here to read official WHIRLPOOL AKZ 151 IX user guide](http://yourpdfguides.com/dref/4847326)

<http://yourpdfguides.com/dref/4847326>

Manual abstract:

.. @@After the oven switches off, the cooling fan may, however, continue to run for a certain time to ensure proper cooling. Important: An optional kit consisting of an oven door glass and of relevant mounting components, is available by the After-Sales Service. The use of the kit reduces the temperature of the outer oven surface and is strongly recommended if there are kids in the house. Code N° 4819 310 30186. 1 2 3 Last 1. Selector knob: to choose the oven functions. 2. @@3.

@@To keep a constant temperature, either 35°C or 60°C. To cook on more than one shelf level, at the same temperature. To grill small pieces of meat, toast, etc. @@@@ • press button 2. The display shows “-:-”.

@@@@Raising cakes (sponges) Filled pies (with cheese) Tarts Apple strudel Biscuits Cream puffs Savoury Pies Lasagne Filled fruit pies e.g. Pineapple, Peach Meringues Vol-au-vents Soufflés Function Preheating (10 min.) X X X X - Level (from the bottom) 3 2 3 3 1-3 1-3 3 2 2 1-3 1-3 2 Temperature (°C) 150 160 180 200 160 180 180 190 180 80 190 180 Cooking time (minutes) 35 - 45 70 - 80 45 - 50 45 - 50 30 - 40 40 - 50 55 - 60 45 - 55 45 - 50 150 - 180 25 - 30 55 - 65 FOOD COOKING TABLES FOOD MEAT Lamb, Kid, Mutton Roast (Veal, Pork, Beef) (kg. 1) Chicken, Rabbit, Duck Turkey (kg.



[You're reading an excerpt. Click here to read official WHIRLPOOL AKZ 151 IX user guide](#)
<http://yourpdfguides.com/dref/4847326>