




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL AKZ 163 IX. You'll find the answers to all your questions on the WHIRLPOOL AKZ 163 IX in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual WHIRLPOOL AKZ 163 IX  
User guide WHIRLPOOL AKZ 163 IX  
Operating instructions WHIRLPOOL AKZ 163 IX  
Instructions for use WHIRLPOOL AKZ 163 IX  
Instruction manual WHIRLPOOL AKZ 163 IX

AKZ 163  
GB IE

## PRODUCT DESCRIPTION SHEET

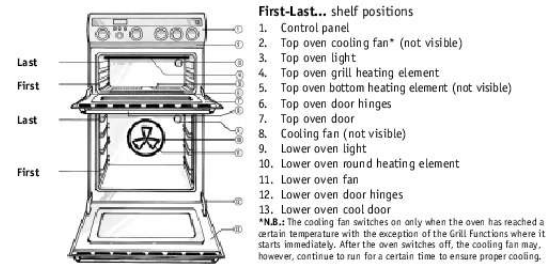


- ACCESSORIES
- Grid
  - Roof shield
  - Grill pan set

### LOWER OVEN FUNCTIONS TABLE

Function symbol	Function	Preset temperature/level	Function description (see details in the user's manual)
0	OVEN OFF	-	-
	OVEN LIGHT	-	To switch on the oven light.
	MLTF (Heat Maintenance)	35C	To keep a constant temperature, either 35°C or 60°C.
	FAN	160C	To cook on more than one shelf level, at the same temperature.

### TOP OVEN FUNCTIONS TABLE

Function symbol	Function	Function description (see details in the user's manual)
0	OVEN OFF	-
	OVEN LIGHT	To switch on the oven light.
	BOTTOM HEATING	To use the last 10-15 minutes of cooking time.
	STATIC	To cook food at one shelf level. Preheating.
	GRILL	To grill small pieces of meat, toast, etc.

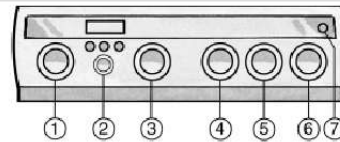

- Lower oven selector knob: to choose the oven functions.
- Lower oven button to select and confirm the different operations (operate by single presses only).
- Lower oven knob to set: time of day, cooking time, the time at which cooking should terminate, the temperatures and the power levels (Function P).
- Top oven grill knob
- Top oven thermostat knob
- Top oven functions selector knob
- Top oven red thermostat knob

### STARTING THE TOP OVEN

- Turn the **functions selector knob** to the required symbol ( or ).
- The oven light switches on.
- Turn the **thermostat knob** clockwise to the required temperature. The red thermostat indicator light switches on.

When the required temperature is reached, the red thermostat indicator light switches off.

### How to use the grill function

- During cooking, leave the oven door open.
- Turn the functions selector knob to the grill symbol .
- The oven light switches on.
- Turn the thermostat knob clockwise to the maximum temperature.
- Turn the grill control knob to one of the following positions LO-1-2-3-R-HI, dependent on the power levels (LO= lower, HI= high).

### STARTING THE LOWER OVEN

When the oven is connected to the power supply for the first time, or re-connected after a power failure, the display shows "SETP".

### To start the oven:

- Turn knob 1 to "0".
- Press button 2. The display shows "--:--".

FOR A DESCRIPTION ON HOW TO USE THE OVEN, PLEASE REFER TO THE PROGRAMMER DESCRIPTION SHEET.

5019 310 53671



[You're reading an excerpt. Click here to read official WHIRLPOOL AKZ 163 IX user guide](http://yourpdfguides.com/dref/4916164)  
<http://yourpdfguides.com/dref/4916164>

**Manual abstract:**

.. shelf positions 1. 2. 3. 4. 5. 6. 7. 8.

9. 10. 11. 12. @@After the oven switches off, the cooling fan may, however, continue to run for a certain time to ensure proper cooling.

Control panel Top oven cooling fan\* (not visible) Top oven light Top oven grill heating element Top oven bottom heating element (not visible) Top oven door hinges Top oven door Cooling fan (not visible) Lower oven light Lower oven round heating element Lower oven fan Lower oven door hinges Lower oven cool door 1. Lower oven selector knob: to choose the oven functions. 2. Lower oven button to select and confirm the different operations (operate by single presses only). 3.

Lower oven knob to set: time of day, cooking time, the time at which cooking should terminate, the temperatures and the power levels (Function P). 4. Top oven grill knob 5. Top oven thermostat knob 6. Top oven functions selector knob ACCESSORIES □ □ Grid Roof shield □ Grill pan set 7. @@To keep a constant temperature, either 35°C or 60°C. @@The oven light switches on. □ Turn the thermostat knob clockwise to the required temperature. The red thermostat indicator light switches on. @@@@□ Turn the functions selector knob to the grill symbol .

□ The oven light switches on. □ Turn the thermostat knob clockwise to the maximum temperature. @@To cook food at one shelf level. Preheating. @@To start the oven: □ Turn knob 1 to □□. □ Press button 2. @@1) Chicken, Rabbit, Duck Turkey (kg. @@Fennel, Cabbage, Asparagus, Celery) TOP OVEN FOOD COOKING TABLES Temperature (°C) 190 190 190 190 190 190 Function Preheating (10 minutes) X X X - Level (from the bottom) 2 2 2 1 2 2-3 Cooking time (minutes) 70 - 90 60 - 80 60 - 70 150 - 180 100 - 120 65 - 75 FOOD Chicken halves Pork roast (1 kg) Fish (1 kg) Pizza Preheating (10 minutes) X X X X Shelf (from the bottom) 1 1 1 1 (fat pan only) Temperature (°C) 200 170 170 250 Cooking Time (minutes approx.) 55-65 100-110 40-55 15-20 - 3 2 2 2 3 190 180 180 190 180 50 - 55 55 - 60 50 - 60 45 - 50 40 - 50 FOOD 12 Toasts Pork chops Spits Bacon rasher Sausages Preheating (10 minutes) X X X X X Shelf (from the bottom) 2 Pan set kit 1 Pan set kit 1 Pan set kit 2 Pan set kit 2 Pan set kit 2 Pan set kit Power level °C 4 4 4 4 4 4 Cooking Time (minutes approx.) 1-3 30-35 35-40 5-10 15-20 NOTE: When cooking meat using fan-assisted and static functions, it is also advisable to use the Browning function (level 1 to 3). FOOD Function Preheating (10 minutes) X X X X - Level (from the bottom) 3 2 3 3 1-3 1-3 3 2 2 1-3 1-3 2 Temperature (°C) 150 160 180 200 160 180 180 190 180 80 190 180 Cooking time (minutes) 35 - 45 70 - 80 45 - 50 45 - 50 30 - 40 40 - 50 55 - 60 45 - 55 45 - 50 150 - 180 25 - 30 55 - 65 SWEETS, PASTRIES, ETC. @@Pineapple, Peach Meringues Vol-au-vents Soufflés .



[You're reading an excerpt. Click here to read official WHIRLPOOL AKZ 163 IX user guide](#)  
<http://yourpdfguides.com/dref/4916164>