




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL AKZ 451/IX/01. You'll find the answers to all your questions on the WHIRLPOOL AKZ 451/IX/01 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual WHIRLPOOL AKZ 451/IX/01
User guide WHIRLPOOL AKZ 451/IX/01
Operating instructions WHIRLPOOL AKZ 451/IX/01
Instructions for use WHIRLPOOL AKZ 451/IX/01
Instruction manual WHIRLPOOL AKZ 451/IX/01

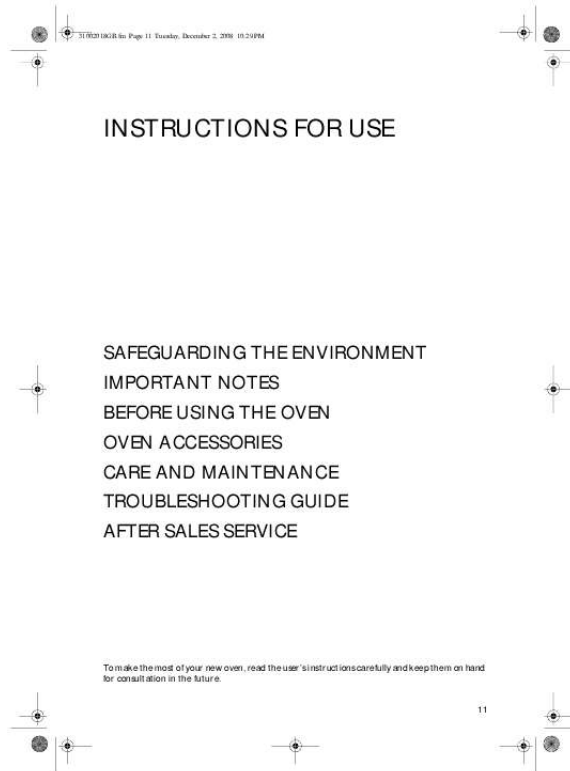

[You're reading an excerpt. Click here to read official WHIRLPOOL AKZ 451/IX/01 user guide](http://yourpdfguides.com/dref/4850033)
<http://yourpdfguides.com/dref/4850033>

Manual abstract:

fm Page 11 Tuesday, December 2, 2008 10:29 PM INSTRUCTIONS FOR USE SAFEGUARDING THE ENVIRONMENT IMPORTANT NOTES BEFORE USING THE OVEN OVEN ACCESSORIES CARE AND MAINTENANCE TROUBLESHOOTING GUIDE AFTER SALES SERVICE To make the most of your new oven, read the user's instructions carefully and keep them on hand for consultation in the future. 11 31002018GB.fm Page 12 Tuesday, December 2, 2008

10:29 PM SAFEGUARDING THE ENVIRONMENT Disposal of packaging materials •The packaging material is 100% recyclable and is marked with the recycle symbol . •Packing materials should therefore not be thrown away with household rubbish but disposed of as directed by local authorities. The symbol on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. Energy saving • Only pre-heat the oven if specified in the cooking table of the Product Description Sheet or in your recipe. • Use dark, black enamelled baking moulds as they absorb heat very well.

Disposal of old appliances • This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. IMPORTANT NOTES Warning: • Not intended for use by young children and infirm persons without supervision. • This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given initial supervision or instruction concerning use of the appliance by a person responsible for their safety. @ @ • The accessible parts of the oven may get very hot during use.

Keep children away. @ @ • The unit gets very hot during use. Do not touch the heating elements in the oven. @ @ Any other use is forbidden. @ @ 12 • Any repairs or servicing must be carried out exclusively by a qualified technician.

• Never expose the oven to atmospheric agents. • Do not put heavy objects on the door because they could damage the oven cavity and hinges. Do not cling to the door. • Never hang anything heavy on the oven door handle. • Do not cover the bottom of the oven with aluminium foil or other objects. • The oven door must close properly. The door seals must be kept clean. • Do not pour water directly into the inside of a hot oven. The enamel coating could be damaged.

31002018GB.

fm Page 13 Tuesday, December 2, 2008 10:29 PM • Fruit juice drippings from the baking tray may leave permanent stains. We recommend the oven be cleaned before reusing it. • Never drag pots and pans across the bottom of the oven to prevent the coating from being scratched. • Residual condensation after cooking could damage the oven and surrounding kitchen units in time. We recommend that you: - set the lowest temperature; - cover food; - remove food from the oven; - dry the wet parts when the oven is cool. • The front panel and the handle of the oven door warm up when the appliance is switched on for a long time at high temperatures. • Never touch the oven with any wet part of the body and do not operate it with bare feet. • Do not pull the appliance or the power supply cable to disconnect them from the electrical supply. • Keep children away from the following elements as they are sources of danger: - the oven and its controls, especially when in operation and immediately afterwards to avoid injury. - packaging (bags, polystyrene, metal parts, etc.

) - an oven to be scrapped. • Make sure that the electrical cables of other appliances used near the oven do not touch hot parts and are not trapped in the oven door. @ @ @ @ Do not obstruct the vent opening. @ @ @ @ @ @ @ @ @ @ They could melt at high temperatures. • Keep an eye on the oven if you are using a lot of fat or oil.

Oil and fat can overheat and catch fire! • Never pull out fully loaded shelves. @ @ Keep the window open during this operation. @ @ @ @ @ @ It can be placed on any of the runners in the oven. @ @ @ @ @ @ Hook it onto the rear wall of the cavity in front of the fan. @ @ @ @ @ @ • After every use, wait for the oven to cool then clean it to prevent the build-up of baked-on food residues.

• With long cooking times or when cooking on different levels, especially food with a high water content (pizzas, stuffed vegetables, etc.) condensation may form on the inside of the door and the seal. When the oven is cool, dry the inside of the door with a cloth or sponge. • Clean the glass of the door with a suitable liquid detergent. • The oven door may be removed to facilitate cleaning. To clean the upper part of the oven the grill heating element can be lowered (only on some models). Exterior of the oven • Clean with a damp cloth. If it is very dirty, add a few drops of washing up detergent to the water. Wipe with a dry cloth. • Do not use corrosive or abrasive detergents, which dull the surface.

In the event that one of these products comes into contact with the oven, immediately clean it using a damp cloth. • Slight differences in colour on the front of the appliance are determined by the different materials used, such as glass, plastic and metal. Ovens with aluminium front panel • Clean using a delicate detergent and a soft window cleaning cloth or a microfibre cloth that does not leave fibres on the surface. Wipe horizontally, without exerting pressure. • Do not use corrosive products, hard sponges or rough cloths. Clean the aluminium surfaces with a dry cloth. Self-cleaning catalytic side panels and rear cavity (if provided) - Cleaning cycle • Heat the oven to 200° C when empty and maintain this temperature for about an hour. • At the end of the cycle and when the oven has cooled, use a damp sponge to remove any food residues. • Never clean the self-cleaning catalytic panels and rear cavity with abrasive products, rough brushes, pan scourers, or oven cleaner sprays, as they will lose their automatic cleaning properties. Accessories • Soak the accessories in water with washing up detergent immediately after use.

Food residues can be easily removed using a brush or sponge. 15 31002018GB.fm Page 16 Tuesday, December 2, 2008 10:29 PM Attention: When carrying out the following operations it is advisable to wear protective gloves. @ @ How to remove the oven door: 1.



[You're reading an excerpt. Click here to read official WHIRLPOOL](#)

[AKZ 451/IX/01 user guide](#)

<http://yourpdfguides.com/dref/4850033>

Open the oven door fully (see fig.

1). 2. @ @2). 3. @ @3).

To remount the door: 1. Insert the hinges into their grooves and lower the door fully. 2. Lower the two catches. 3. Close the oven door fully. Attention: 1 2 3
To lower the grill heating element (certain models only) Do not attempt to clean the oven until it is cool. • Remove the side runner grids. • Pull (4) the grill
heating element slightly forward and lower it (5). 4 5 16 31002018GB.

fm Page 17 Tuesday, December 2, 2008 10:29 PM Changing the rear oven lamp bulb (if provided): 1. Disconnect the oven from the electrical supply. 2. Let
the oven cool before turning the lamp cover left to unscrew it (see fig. 1). 3. Change the bulb (see note). 4. Screw the lamp cover back on. 5.

Reconnect the oven to the electrical supply. Note: use only 25 W/230 V, E-14 type, T300°C bulbs available from After Sales Service. Important: Do not use the
oven until the lamp cover has been repositioned. 1 Changing the side wall lamp (if provided - depends on model): 1. Disconnect the oven from the electrical
supply.

2. Let the oven cool before removing the left side runner grid (see fig. 2). Using a screwdriver prise off the lamp cover (see fig. 3 - 4).

3. Change the bulb (see note). 4. Reposition the lamp cover and press it against the oven wall until it clicks correctly into place. 5. Remount the side runner
grid. 6. Reconnect the oven to the electrical supply. Note: use.



[You're reading an excerpt. Click here to read official WHIRLPOOL](#)

[AKZ 451/IX/01 user guide](#)

<http://yourpdfguides.com/dref/4850033>