



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL AKZ 451/IX/01. You'll find the answers to all your questions on the WHIRLPOOL AKZ 451/IX/01 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual WHIRLPOOL AKZ 451/IX/01**  
**User guide WHIRLPOOL AKZ 451/IX/01**  
**Operating instructions WHIRLPOOL AKZ 451/IX/01**  
**Instructions for use WHIRLPOOL AKZ 451/IX/01**  
**Instruction manual WHIRLPOOL AKZ 451/IX/01**

**AKZ 451**  
GB IE

**PRODUCT DESCRIPTION SHEET**

1. Control panel  
2. Cooling fan (not visible)  
Fan operation switches on only when the oven has reached a certain temperature, and may continue even after the appliance has been turned off, for a few minutes.  
3. Top heating element (can be lowered)  
4. Rear oven lamp  
5. Circular heating element (not visible)  
6. Fan  
7. Catalytic rear wall  
8. Oven door

**ACCESSORIES**

Wire Shelf: Side catalytic panels: Grill pan set:

**CONTROL PANEL**

1. ON/OFF - Function Selector Knob.  
2. Confirm and programme selection button  
3. Pre-set values changing knob (temperature, time, levels)

**Retractable knobs**

- To use this type of knob, press it in the middle.
- The knob comes out.
- Turn it to the required position.

Once cooking is over, turn the knob to 0 and press it again to restore it to its original position.

Oven functions table			
Function	Preset temperature	Adjustable temperature	Description of function
- Oven OFF	-	-	-
LAMP	-	-	To switch on the oven light.
MLTF (Heat Maintenance)	35°C - 60°C	-	<ul style="list-style-type: none"> <li>To keep the temperature steady inside the oven.</li> <li>35°C: to raise dough for bread and pizza.</li> <li>During MLTF 35°C rising function the lamp is off, to maintain a uniform temperature in the oven.</li> <li>60°C: to keep food warm once it is cooked.</li> <li>It is advisable to use the first level.</li> </ul>
FAN/THERMO-VENTILATED	160°C	50°C - 250°C	<ul style="list-style-type: none"> <li>To cook (without preheating) foods that require the same cooking temperature on one or more levels (e.g. fish, vegetables, sweets), without transferring odours from one foodstuff to the other.</li> </ul>
GRILL	3	-	<ul style="list-style-type: none"> <li>Use the grill function to cook sirloin steaks, kebabs, sausages, vegetables au grain and for making toast.</li> <li>The function allows various settings (1 min. - 5 max.). The default position is 3).</li> <li>Pre-heat the oven for 5 min. with the door closed.</li> <li>For best results, leave the oven door open when grilling. Arrange food on the wire shelf. When cooking meat, to avoid spatters of fat and smoke, pour a little water into the drip tray.</li> <li>It is advisable to turn the food during cooking.</li> </ul>
TURBOGRILL	3	-	<ul style="list-style-type: none"> <li>This function is ideal for cooking large pieces of meat (roast beef, roast joints).</li> <li>The function allows various settings (1 min. - 5 max.). Preheat the oven for 3/5 min.</li> <li>During cooking the oven door can be kept closed or open a little. When cooking meat, to avoid spatters of fat and smoke, pour a little water into the drip tray.</li> <li>It is advisable to turn the food while it is cooked.</li> </ul>

5019 310 56716

Whirlpool is a registered trademark of Whirlpool USA  
© Copyright Whirlpool Europe S.r.l. All rights reserved



[You're reading an excerpt. Click here to read official WHIRLPOOL AKZ 451/IX/01 user guide](http://yourpdfguides.com/dref/4850034)  
<http://yourpdfguides.com/dref/4850034>

