



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL ARC 4030/IX. You'll find the answers to all your questions on the WHIRLPOOL ARC 4030/IX in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual WHIRLPOOL ARC 4030/IX
User guide WHIRLPOOL ARC 4030/IX
Operating instructions WHIRLPOOL ARC 4030/IX
Instructions for use WHIRLPOOL ARC 4030/IX
Instruction manual WHIRLPOOL ARC 4030/IX



INSTRUCTIONS FOR USE

BEFORE USING THE REFRIGERATOR
SAFEGUARDING THE ENVIRONMENT
PRECAUTIONS AND GENERAL RECOMMENDATIONS
HOW TO OPERATE THE REFRIGERATOR COMPARTMENT
HOW TO OPERATE THE "EXTRA-COLD" COMPARTMENT
HOW TO OPERATE THE FREEZER COMPARTMENT
HABITUAL NOISES
CARE AND MAINTENANCE
TROUBLESHOOTING GUIDE
AFTER-SALES SERVICE
INSTALLATION
ELECTRICAL CONNECTION



[You're reading an excerpt. Click here to read official WHIRLPOOL ARC 4030/IX user guide](http://yourpdfguides.com/dref/4857995)
<http://yourpdfguides.com/dref/4857995>

Manual abstract:

fm Page 14 Monday, October 14, 2002 9:51 AM INSTRUCTIONS FOR USE BEFORE USING THE REFRIGERATOR SAFEGUARDING THE ENVIRONMENT PRECAUTIONS AND GENERAL RECOMMENDATIONS HOW TO OPERATE THE REFRIGERATOR COMPARTMENT HOW TO OPERATE THE "EXTRA-COLD" COMPARTMENT HOW TO OPERATE THE FREEZER COMPARTMENT HABITUAL NOISES CARE AND MAINTENANCE TROUBLESHOOTING GUIDE AFTER-SALES SERVICE INSTALLATION ELECTRICAL CONNECTION 14 3gb33004.fm Page 15 Monday, October 14, 2002 9:51 AM FREEZER COMPARTMENT 1. Fast freezing compartment 2. Ice cube trays 3. Shelf 4. Freezer door trays (if fitted) 5. Freezer control panel REFRIGERATOR COMPARTMENT 6. Extra-Cold Compartment 7. Refrigerator thermostat knob 8. Refrigerator inside light 9. Adjustable glass shelves 10. Crisper drawer 11. Air circulation system with anti-odour filter 12. Egg tray 13. Door trays 14.

Bottle rack 15. Can holder (if provided) 16. Adjustable feet 15 3gb33004.fm Page 16 Monday, October 14, 2002 9:51 AM BEFORE USING THE REFRIGERATOR Your new appliance is a combined ventilated, nofrost fridge-freezer exclusively for domestic use. The great advantage of this appliance is that the refrigerator and freezer compartments are ventilated, therefore there is no ice or frost formation on the walls, thanks to the process described below. The cold is produced by an evaporator and distributed to the single compartments by means of a fan. The air, after circulating in the compartments, is absorbed again by the evaporator, which also retains any humidity in the air. This prevents frost from forming on the compartment walls, as in traditional appliances, therefore there is no need to defrost the appliance. The humidity absorbed by the evaporator is transformed into water, which is automatically routed to a container located on the compressor, from where it evaporates. The ventilated refrigeration system guarantees optimal food storage, maintaining the original characteristics longer. To get the most out of your new appliance, read the user handbook thoroughly. The handbook contains a description of the appliance and useful tips for storing food. Keep this handbook for future consultation. 1. @@@@ @@@@.

Installation of the appliance and electrical connections must be carried out by a qualified electrician, in accordance with the manufacturer's instructions and local regulations. SAFEGUARDING THE ENVIRONMENT 1.Packing The packaging material is entirely recyclable, and marked with the recycling symbol. Follow local regulations for scrapping. Keep the packaging materials (plastic bags, polystyrene parts, etc.) out of reach of children, as they are potentially dangerous. 2.Appliance The appliance is made using recyclable materials. Disposal must be carried out in accordance with local environmental regulations for waste disposal. Make the appliance unusable by cutting off the power cord.

The appliance must be delivered to an authorised collection centre for the recovery of refrigerant gas. Information: This appliance does not contain CFCs (replaced with R134a) or HFCs (replaced with R600aIsobutane). For more information, refer to the identification data plate affixed to the appliance. 16 3gb33004.fm Page 17 Monday, October 14, 2002 9:51 AM PRECAUTIONS AND GENERAL RECOMMENDATIONS • Use the refrigerator compartment only for storing fresh food and beverages and use the freezer compartment only for storing frozen food, freezing fresh food and making ice cubes.

• Do not cover or obstruct the air vents of the appliance. • Do not store liquids in glass containers in the freezer compartment - danger of bursting. • Do not eat ice cubes or ice lollies immediately after taking them out of the freezer compartment - risk of "cold" burns. • Do not allow children to play or hide inside the appliance - risk of becoming trapped and suffocating. • Do not ingest the contents (non-toxic) of the ice packs (if provided). • Before servicing or cleaning the appliance, unplug it from the mains or disconnect the electrical power supply. • The power cable may only be replaced by an authorised person. • After installation, make sure that the refrigerator is not standing on the power supply cable. Declaration of conformity This appliance is intended to come into contact with foodstuffs and conforms to D.L. 108 of 25.01.1992 (European Directive 89/109/EEC). Information Appliances with Isobutane (R600a). Isobutane is a natural gas with low environmental impact.

Caution is required, however, since isobutane is flammable. Therefore, it is essential to ensure that refrigerant pipelines are not damaged. HOW TO OPERATE THE REFRIGERATOR COMPARTMENT The refrigerator compartment is designed for the storage of fresh food and beverages. Defrosting of the refrigerator compartment is completely automatic. The refrigerator can operate at ambient temperatures between +16°C and +43°C. Optimal performance is obtained at temperatures between +18°C and +43°C. Switching on the appliance • Plug in the appliance. • The appliance will switch on automatically. • The inside light switches on when the refrigerator door is opened. Using the refrigerator • Adjusting the temperature.

For correct operation and optimum storage of food, adjust the temperature in the refrigerator and freezer compartments separately. Refrigerator thermostat To adjust the temperature in the refrigerator compartment, turn the thermostat knob to the desired position. TYPE OF USE Small amounts of food stored. The door is seldom opened. Medium Normal use.

Maximum Large amounts of food stored. The door is opened frequently. • After being switched on, the refrigerator needs approximately 2 hours to reach the correct temperature to store a typical volume of food in the refrigerator compartment. Moisture control Some foods, such as fruit and vegetables, lose moisture when stored in cold, dry places. The crisper drawer maintains the right temperature and moisture level for storing fruit and vegetables.

Using the Control Device, it is possible to adjust the airflow inside the crisper drawer. • We recommend you keep the Control Device closed when storing vegetables and open when storing fruit. @@ This will prevent odours from mixing. @@@@ @@@@ Pull the drawer out fully. @@@@ @2. 3.

@@ Medium level: to be used in normal conditions. @@ Fast Freezing: the three LEDs are alight. Select the Fast Freeze function for colder temperatures. @@ Thanks to this system, appliance operation is constantly monitored.

@@ • This system controls door closure. If a door is open, close it. The acoustic alarm is deactivated. @@ The acoustic alarm will sound if the internal temperature increases. Do not place hot food in the appliance. @@ The LEDs blink until the ideal internal temperature is reached. @@@@ @@@@ Contact the After-sales Service as soon as possible. • After approx. two hours, the acoustic alarm also signals the malfunction. Press the "Alarm" button. @@@@ The amount of fresh food that can be frozen in 24 hours, at an ambient temperature of + 25°C, is indicated on the data plate.



[You're reading an excerpt. Click here to read official WHIRLPOOL ARC 4030/IX user guide](http://yourpdfguides.com/dref/4857995)
<http://yourpdfguides.com/dref/4857995>

How to proceed: 1. 24 hours before freezing fresh food, press the fast freeze button. 2. Wrap and seal the food in aluminium foil, cling film, air and water-tight plastic bags, polythene containers with lids, freezer containers.

3. Place food in the upper part of the freezer, leaving enough space for air to circulate around packs. 4. For more efficient freezing, use the fast freeze function for the next 24 hours. 5.

When freezing is complete, press the fast freeze button again. Note: • In the event of a power failure, the freezer compartment maintains the correct storage temperature for about 9/10 hours. • Do not open the freezer compartment door during a power failure. Important: The table alongside shows the recommended maximum storage time for frozen fresh foods. When purchasing frozen food products: • Ensure that the packaging is not damaged (frozen food in damaged packaging may have deteriorated). If the package is swollen or has damp patches, it may not have been stored under optimal conditions and defrosting may have already begun. • When shopping, leave frozen food purchases until last and transport the products in a thermally insulated cool bag. • Place the items in the freezer compartment as soon as you get home. Important: • Do not place hot food in the freezer. • Wrap foods in aluminium foil or cling film or place them in specific containers.

• Ensure all packs placed in the freezer have a label indicating the date of freezing and content. • If food has defrosted even partially, do not re-freeze it. Consume within 24 hours. • Avoid, or reduce temperature variations to the minimum. • Respect the best-before date on the package. • Always observe the storage information on the package. MONTHS FOOD Making ice cubes Bend the ice trays slightly to remove ice cubes. If your appliance is provided with the "Twist-Ice" feature, proceed as follows: • Lift the ice cube tray and take it out. • Fill the ice cube tray with water, being careful not to exceed the maximum level (indicated by the arrow). • To remove the ice cubes just turn the lever with one twist clockwise.

The ice cubes conveniently fall into the ice bucket. Important: Do not leave water in the ice bucket. 20 3gb33004.fm Page 21 Monday, October 14, 2002 9:51 AM HABITUAL NOISES Some noises are normal (wheats plate on the inside of the appliance), • your full address, • your telephone number and area code.

Note: The direction of door opening can be changed.

If this operation is performed by After-sales Service it is not covered by the warranty. 22 3gb33004.fm Page 23 Monday, October 14, 2002 9:51 AM INSTALLATION • Install the appliance away from heat sources. • Install the appliance in a dry, well-ventilated place. • Ensure that the appliance is level. Adjust the front feet if necessary. • Leave at least 5 cm clearance above the appliance. • The sides of some models are extended at the rear so the appliance can be placed directly against the rear wall. Otherwise, fit the spacers (if supplied) on the upper part of the condenser at the rear of the appliance. For models without spacer walls, the distance between the unit and the wall must be at least 4.5 cm. • Clean the inside (see the chapter "Care and Maintenance").

• Fit the accessories supplied. Electrical connection • Electrical connections must be made in accordance with local regulations. • Ensure that the voltage indicated on the appliance data plate corresponds to the domestic supply voltage.

• Regulations require that the appliance is earthed. @@@@2. Fit replacement 13A fuse into fuse cover. 3. Refit both into plug. Important: The fuse cover must be refitted when changing a fuse and if the fuse cover is lost the plug must not be used until a correct replacement is fitted. Correct replacement are identified by the colour insert or the colour embossed in words on the base of the plug. Replacement fuse covers are available from your local electrical store. Socket outlet / plug If the fitted plug is not suitable for your socket outlet, please contact Whirlpool Service on 0870 600 8989 for further instruction.

Please do not attempt to change plug yourself.

This procedure needs to be carried out by a qualified Whirlpool technician in compliance with the manufactures instructions and current standard safety regulations. For the Republic of Ireland only The information given in respect of Great Britain will frequently apply, but a third type of plug and socket is also used, the 2-pin, side earth type. In this case, the wire which is coloured GREEN AND YELLOW must be connected to the EARTH contact, and the two wires to the two pins, irrespective of colour. The supply to the socket must be fitted with a 16 amp fuse. 24 .



[You're reading an excerpt. Click here to read official WHIRLPOOL](http://yourpdfguides.com/dref/4857995)

[ARC 4030/IX user guide](http://yourpdfguides.com/dref/4857995)

<http://yourpdfguides.com/dref/4857995>