



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL ARC 6706/IX. You'll find the answers to all your questions on the WHIRLPOOL ARC 6706/IX in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual WHIRLPOOL ARC 6706/IX
User guide WHIRLPOOL ARC 6706/IX
Operating instructions WHIRLPOOL ARC 6706/IX
Instructions for use WHIRLPOOL ARC 6706/IX
Instruction manual WHIRLPOOL ARC 6706/IX

INSTRUCTIONS FOR USE

BEFORE USING THE APPLIANCE
SAFEGUARDING THE ENVIRONMENT
PRECAUTIONS AND GENERAL
RECOMMENDATIONS
INSTALLATION
HOW TO STORE FOODS IN REFRIGERATOR
COMPARTMENT
HOW TO DEFROST THE FREEZER
COMPARTMENT (DEPENDING ON THE
MODEL)
HOW TO FREEZE FRESH FOOD
CARE AND MAINTENANCE
TROUBLESHOOTING GUIDE
AFTER-SALES SERVICE
ELECTRICAL CONNECTION

14



[You're reading an excerpt. Click here to read official WHIRLPOOL
ARC 6706/IX user guide
http://yourpdfguides.com/dref/4857834](http://yourpdfguides.com/dref/4857834)

Manual abstract:

The handbook contains a description of the appliance and useful tips for storing food. Keep this handbook for future consultation. 1. After unpacking, make sure that the appliance is undamaged and that the door closes properly. Any damage must be reported to your dealer within 24 hours after delivery of the appliance. 2. Wait at least two hours before switching the appliance on in order to ensure the refrigerant circuit is fully efficient. 3. Installation of the appliance and electrical connections must be carried out by a qualified electrician, in accordance with the manufacturer's instructions and local safety regulations 4. Clean the inside of the appliance before using it.

SAFEGUARDING THE ENVIRONMENT 1. **Packing** The packaging material is entirely recyclable, and marked with the recycling symbol. Follow local regulations for scrapping. Keep the packaging materials (plastic bags, polystyrene parts, etc.) out of reach of children, as they are potentially dangerous. 2. **Scrapping** The appliance is manufactured using recyclable material. This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). @@@@ Disposal must be carried out in accordance with local environmental regulations for waste disposal. Deliver the appliance immediately to an authorized dump; do not leave it unattended even for a few days, since it is potentially dangerous for children.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. Information: This appliance does not contain CFCs (replaced with R134a) or HFCs (replaced with R600a). Appliances with Isobutane (R600a): isobutane is a naturally occurring, low environmental impact gas. Caution is required, however, because isobutane is flammable. Therefore, it is essential to ensure that refrigerant pipelines are not damaged. Declaration of conformity • This appliance is designed to store food and is manufactured in conformity with EEC directives 90/128/CEE, 02/72/CEE and No. 1935/2004. • This appliance is designed, manufactured, and retailed in compliance with: - the safety objectives of the Low Voltage Directive 73/23/EEC; - the protection requirements of the "EMC" Directive 89/336/EEC, amended by Directive 93/68/EEC; • The electrical safety of the appliance can only be guaranteed if the product is connected to an approved earth connection. 15 **PRECAUTIONS AND GENERAL RECOMMENDATIONS** • Use the refrigerator compartment only for storing fresh food and beverages and use the freezer compartment only for storing frozen food, freezing fresh food and making ice cubes. @@ • Do not store glass containers with liquids in the freezer since they may burst.

• Do not eat ice cubes or ice lollies immediately after taking them out of the freezer since they may cause cold burns. • Before carrying out any maintenance or cleaning, always unplug the appliance or disconnect the power supply. • Make sure that your appliance is not near a heat source. • Do not store or use gasoline or other flammable vapours and liquids in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion. • To ensure proper ventilation leave a space on both sides and above the appliance. • Ensure that the vent outlets on the appliance casing or housing unit are unobstructed in order to allow correct air circulation. • All appliances equipped with an ice maker or water dispenser must be connected to a mains water supply that delivers potable water only (with water pressure between 1.7 and 8.1 bar (25 and 117 PSI)).

Ice makers and/ or water dispensers not directly connected to a mains water supply must be filled with potable water only. • Install and level the appliance on a floor strong enough to take its weight and in an area suitable for its size and use. • Install the appliance in a dry and wellventilated place The appliance is set for operation at specific ambient temperature ranges, according to the climatic class indicated on the data plate: The appliance may not work properly if it is left for a long period at a temperature above or below the indicated range. Climatic class SN N ST T Amb. T.

(°C) From 10 to 32 From 16 to 32 From 18 to 38 From 18 to 43 Amb. T. (°F) From 50 to 90 From 61 to 90 From 64 to 100 From 64 to 110 • Be careful not to damage the floors when you move the appliance (e.g. parquet flooring).

• Do not use mechanical devices or any means other than those recommended by the manufacturer to speed up the defrosting process. • Do not damage the refrigerant circuit. • Do not use electrical appliances inside the freezer compartments, unless such appliances are specifically recommended by the manufacturer. • This appliance is not designed for use by young children or the infirm. • To avoid the risk of children being trapped and therefore suffocating, do not allow them to play or hide inside the appliance. • The power cable may only be replaced by an authorized person. • Do not use extension leads or adapters. • It must be possible to disconnect the appliance from the mains by unplugging it or by means of a two-pole switch fitted upline of the socket. • Ensure that the voltage indicated on the appliance data plate corresponds to the domestic supply voltage • Do not ingest the contents (non-toxic) of the ice packs (if provided). 16 **INSTALLATION Location** • Install the appliance in a dry, well-ventilated place.

Ensure that the appliance is level. Adjust the front feet if necessary. • Make sure that your appliance is not near a heat source.

@@@@@ • Fit the accessories supplied. • Remove the compressor locking pin (on selected models only). @@@@ Regulations require that the appliance is earthed. @@@@ • Do not place hot food in the refrigerator or freezer. • Store liquids in closed containers. @@@@ It's ideal to store bottles. @@@@ • The shelves are made of highly resistant hardened glass.

@@@ • To remove the shelf, pull it forward to the stop. @@ The locks can be pressed separately. • Pull the pins outward to remove the rails. • Remove the rails as in the picture and place them where you wish. • To place the rails observe the inscription " " written on the rail.

• After that, place the shelf on them. 1 2 18 V 3 4 5 **HOW TO DEFROST THE FREEZER COMPARTMENT (DEPENDING ON THE MODEL)** In "No-Frost" appliances, defrosting of freezer is completely automatic. In other appliances, defrost the freezer compartment once or twice a year, or when the ice on the walls reaches a thickness of about 3mm. If possible, defrost the freezer when it is nearly empty. • Disconnect the appliance from the mains power supply (refrigerator compartment switches off too).

• Remove the food from the freezer, wrap in a paper and group together in a cool place or in a portable cooler.



[You're reading an excerpt. Click here to read official WHIRLPOOL](http://yourpdfguides.com/dref/4857834)

[ARC 6706/IX user guide](http://yourpdfguides.com/dref/4857834)

<http://yourpdfguides.com/dref/4857834>

• Remove the ice-cube tray. • Remove the baskets. • Pull out the defrost water drain from the base of the freezer compartment. • Leave the freezer compartment door open. Place a shallow container below the drain channel to collect the defrost water. • Clean the freezer compartment using a sponge dampened in a solution of warm water and neutral detergent. Do not use abrasive products. • Rinse the interior and dry thoroughly. • Reconnect the appliance to the power supply.

• Refit the drain in place and reposition the baskets. Note: • Do not use sharp or pointed metal instruments to scrape off ice; do not heat the freezer compartment artificially. Any damage to the appliance resulting from failure to observe these instructions is not covered by the guarantee. • Any increase in temperature of frozen food during defrosting can shorten its storage life. 19 HOW TO FREEZE FRESH FOOD You can use the freezer compartment to freeze food. The amount of fresh food that can be frozen in 24 hours, at an ambient temperature of +25°C, is indicated on the data plate. How to proceed: • Wrap and seal the food in: aluminium foil, cling film, watertight plastic bags, polythene containers with lids or special freezer containers. • Place food in the top compartment, leaving enough space for air to circulate around packs. To speed up the freezing process and increase the compartment capacity, remove the top basket/s and the ice pack storage drawer (if provided). Put the already frozen food into the other drawers and the fo removed correctly.

• Periodically clean the condenser (radiator) at the rear of the appliance and the plinth with a vacuum cleaner or brush. Prolonged disuse 1. Empty the refrigerator and freezer compartments. 2. Disconnect the appliance from the power supply. 3. Defrost the freezer compartment, and clean and dry both compartments. 4. Leave the doors open to prevent formation of unpleasant odours. Antibacterial filter (depending on the model) assures the higher level of hygiene in your refrigerator through continuous purifying of circulating air of bacteria.

After half a year of using of filter one should be change it for a new one. 1. Remove the filter together with the container. 2. Replace and fit the filter container with a new one. Note: This type of filter is available from our After-sales Service. Some noises are normal when the appliance is operating. 22 TROUBLESHOOTING GUIDE Defect Probably cause Lack of power supply. 1. The appliance is not working Burn fuse (safety device).

Thermostat knob set to "Off" or "0". Doors aren't closed properly or gasket uncorrectly adhered. 2. Temperature inside the compartments too high. Improper set thermostat knob. Improper appliance installed. 3. Water collects at the bottom of Drain of defrost water is blocked. the refrigerator or freezer compartment (depends on model). Improper setting food.

Lack of power supply. Solution Check electric set. Check properly inserted plug in the socket. In case of lack of power supply. You need call for electrician. Replace fuse (safety device). Set the temperature in chosen position according to product sheet. Check if it is possibility to closure doors. Check if gasket is clear and undamage. Set thermostat knob in chosen position according to product sheet.

Check if the appliance is installed near heat source. Clear drain. (it is placed over the compressor or in the middle of drip channel of refrigerator). Food shouldn't touch back wall of cabinet. See point 1. Disconnect the appliance from mains power supply. Remove the bulb cover. Check the bulb and if necessary replace it. Replace using maximum 15W bulb. In some models a special bulb is used.

Bulb change instruction is put in the chart. Check level of appliance (adjustment front stems) Check if the appliance isn't in contact with other furniture or objects. 4. The inside light is not working Bulb burnt out. 5. The appliance is excessively noisy. The appliance is wrong set. 6. Noise from expanding 7. The front edge of the appliance maybe hot.

Noises due to expansion in the refrigerant circuit. Normal effect correctly. Normal effect – prevent the formation of condensation water. AFTER-SALES SERVICE Before contacting After-Sales Service: 1. See if you can solve the problem yourself with the help of the "Troubleshooting guide".

2. Switch the appliance on again to see if the problem has been solved. @. @. 3. @. @. @. @. @. 23 ELECTRICAL CONNECTION 1) For Great Britain only Warning - this appliance must be earthed Fuse replacement If the mains lead of this appliance is fitted with a BS 1363A 13amp fused plug, to change a fuse in this type of plug use an A.S.

T.A. approved fuse to BS 1362 type and proceed as follows: 1. Remove the fuse cover (A) and fuse (B). 2. Fit replacement 13A fuse into fuse cover. 3. Refit both into plug. Important: The fuse cover must be refitted when changing a fuse and if the fuse cover is lost the plug must not be used until a correct replacement is fitted. Correct replacement are identified by the colour insert or the colour embossed in words on the base of the plug.

Replacement fuse covers are available from your local electrical store. 2) For the Republic of Ireland only The information given in respect of Great Britain will frequently apply, but a third type of plug and socket is also used, the 2-pin, side earth type. 3) Socket outlet / plug (valid for both countries) If the fitted plug is not suitable for your socket outlet, please contact Whirlpool Service for further instruction. Please do not attempt to change plug yourself. This procedure needs to be carried out by a qualified Whirlpool technician in compliance with the manufactures instructions and current standard safety regulations. 24.



[You're reading an excerpt. Click here to read official WHIRLPOOL ARC 6706/IX user guide](http://yourpdfguides.com/dref/4857834)
<http://yourpdfguides.com/dref/4857834>