



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL ART 836-2/G. You'll find the answers to all your questions on the WHIRLPOOL ART 836-2/G in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual WHIRLPOOL ART 836-2/G
User guide WHIRLPOOL ART 836-2/G
Operating instructions WHIRLPOOL ART 836-2/G
Instructions for use WHIRLPOOL ART 836-2/G
Instruction manual WHIRLPOOL ART 836-2/G

33057-GB.fm5 Page 12 Monday, January 18, 1999 7:21 PM

GB	TABLE OF CONTENTS	
	BEFORE USING THE APPLIANCE	PAGE 13
	SAFEGUARDING THE ENVIRONMENT	PAGE 13
	PRECAUTIONS AND GENERAL RECOMMENDATIONS	PAGE 14
	HOW TO OPERATE THE REFRIGERATOR COMPARTMENT	PAGE 14
	HOW TO OPERATE THE FREEZER COMPARTMENT	PAGE 15
	HOW TO DEFROST THE FREEZER COMPARTMENT	PAGE 17
	CARE AND MAINTENANCE	PAGE 18
	TROUBLE-SHOOTING GUIDE	PAGE 19
	AFTER SALES SERVICE	PAGE 19
	INSTALLATION	PAGE 20
	ELECTRICAL CONNECTION	PAGE 21

12



[You're reading an excerpt. Click here to read official WHIRLPOOL ART 836-2/G user guide](http://yourpdfguides.com/dref/4838082)
<http://yourpdfguides.com/dref/4838082>

Manual abstract:

fm5 Page 12 Monday, January 18, 1999 7:21 PM GB TABLE OF CONTENTS PAGE BEFORE USING THE APPLIANCE SAFEGUARDING THE ENVIRONMENT PRECAUTIONS AND GENERAL RECOMMENDATIONS HOW TO OPERATE THE REFRIGERATOR COMPARTMENT HOW TO OPERATE THE FREEZER COMPARTMENT HOW TO DEFROST THE FREEZER COMPARTMENT CARE AND MAINTENANCE TROUBLE-SHOOTING GUIDE AFTER SALES SERVICE INSTALLATION ELECTRICAL CONNECTION 13 13 PAGE PAGE 14 PAGE 14 PAGE 15 PAGE 17 18 19 19 20 21 PAGE

PAGE PAGE PAGE PAGE 12 33057-GB.fm5 Page 13 Monday, January 18, 1999 7:21 PM BEFORE USING THE APPLIANCE Your new appliance is a combined fridge-freezer exclusively for domestic use. The freezer compartment can be used for freezing fresh and cooked food, making ice cubes, and storing frozen food. Defrosting the freezer is a manual procedure. The refrigerator compartment, which has an automatic defrost feature, is used for the storage of fresh food and beverages. To make optimum use of your new appliance, read this user handbook thoroughly, as it contains a description of the appliance and useful tips for storing food. Keep this handbook for future consultation. 1. After unpacking the appliance, make sure that the doors shut properly. Any damage must be reported to your retailer within 24 hours after delivery of the appliance.

2. Wait at least two hours without moving the appliance before connecting it to the power supply. 3. Appliance installation and electrical connections must be carried out by a qualified technician in accordance with the manufacturer's instructions and local regulations. SAFEGUARDING THE ENVIRONMENT 1. Packing The packaging material is 100% recyclable (marked with the recycle symbol). Follow local regulations for disposal. The packaging material (plastic bags, polystyrene parts, etc.) is potentially dangerous and must be kept out of reach of children. 2.

Product The appliance is made using recyclable materials. When scrapping, follow local waste disposal regulations. Make the appliance unusable by cutting off the power cord. Dispose of this appliance correctly. @@@@Do not cover or obstruct the air vents of the appliance. @@Do not eat ice cubes or ice lollies immediately after taking them out of the freezer compartment - risk of "cold" burns. To avoid the risk of children becoming trapped and therefore suffocating, do not allow them to play or hide inside the appliance. Do not ingest the contents (non-toxic) of the ice packs (if provided). Before carrying out maintenance or cleaning, always unplug the appliance or switch the power supply off. ••The power cable can only be replaced by an authorized person.

After installation make sure that the appliance is not resting on the supply cable. This appliance is intended to come into contact with foodstuffs and conforms to D.L. 108 of 25.01.1992 (European Directive 89/109/EEC). ••••Declaration of conformity •••Information Appliances with isobutane (R600a) Isobutane is a natural gas having low environmental impact. Caution is required, however, because Isobutane is inflammable. Therefore, ensure that the pipelines of the refrigerant circuit do not get damaged. HOW TO OPERATE THE REFRIGERATOR COMPARTMENT This appliance has two motors which allow independent operation and control of the refrigerator and freezer compartments.

Defrosting of the refrigerator compartment is completely automatic. The refrigerator can operate at ambient temperatures between +10°C and +38°C. Optimal performance is obtained at temperatures between +16°C and +32°C. Important: •There is no need to adjust the compartment temperature using the thermostat knob or set the temperature using the button (in electronic models), as the temperature is factory set (+5° for electronic models) to ensure the correct storage temperature for fresh foods at ambient temperatures between +20°C and +25°C. •After being switched on, the refrigerator needs approx. 30 minutes to reach the correct temperature to store a typical volume of food in the refrigerator compartment. Switching on the appliance Press the refrigerator compartment "ON" button (1). •The inside light switches on when the refrigerator door is opened. •An acoustic alarm (only available on electronic models) sounds when the door has been left open for more than 1 minute; it will switch off when the door is closed. •Green LED (2) switches on, indicating operation of the refrigerator compartment.

. 14 33057-GB.fm5 Page 15 Monday, January 18, 1999 7:21 PM HOW TO OPERATE THE REFRIGERATOR COMPARTMENT To adjust the temperature, follow the instructions in the accompanying chart. To switch off the refrigerator compartment: Press the refrigerator compartment "ON" button again (1). •••Do not place hot food in the refrigerator. Store liquids in closed containers. Storing vegetables with high water content can cause condensate formation in the crisper: this will not affect the refrigerator's efficiency. Using the refrigerator compartment Position the food as shown in the figure. A Cooked food B Fish, meat C Fruit and vegetables D Bottles E Butter F Dairy products Notes: •The space between the shelves and the rear wall of the refrigerator compartment must be unobstructed to allow air circulation. •Do not place the food in direct contact with the rear wall of the refrigerator compartment.

HOW TO OPERATE THE FREEZER COMPARTMENT Press the freezer compartment "ON" button (4). 1. @@@@2. @@3. @@@@•The freezer door has been left open for a long time. @@•The freezer compartment temperature is too high. @@•After switching on, the freezer compartment takes approx. @@@@@@@@2. @@3. @@@@@@@@4.

@@@@@@@@@Important: For the periods of storage of frozen fresh foods, refer to the adjacent table. When purchasing frozen food products: •ensure that the packaging is not damaged (frozen food in damaged packaging may have deteriorated). Avoid packages that are swollen or show evidence of damp areas indicating that the food may have thawed partially during its period of storage. •When shopping, leave frozen food purchases till last and transport the products in a thermally insulated bag. •Place the items in the freezer compartment as soon as you get home. •If food has thawed, even partially, do not re-freeze it. Consume within 24 hours. •Avoid, or reduce temperature variations to the minimum. •Respect the best-before date on the package. 16 •Always observe the storage information on the package.

MONTHS FOOD 33057-GB.fm5 Page 17 Monday, January 18, 1999 7:21 PM HOW TO OPERATE THE FREEZER COMPARTMENT Making ice cubes • Fill the ice cube tray 3/4 with water and place it at the bottom of the freezer compartment. To speed up the ice making process, place the tray at the bottom of the first drawer (as shown in the figure) and not on the ice pack rack (if provided). Do not use sharp or pointed instruments to detach the ice tray if it is stuck to the shelf.



[You're reading an excerpt. Click here to read official WHIRLPOOL ART 836-2/G user guide](http://yourpdfguides.com/dref/4838082)
<http://yourpdfguides.com/dref/4838082>

• HOW TO DEFROST THE FREEZER COMPARTMENT Defrost the freezer compartment once or twice a year, or when the frost build-up on the walls reaches a thickness of about 3 mm. Defrost the appliance when there is very little food stored inside. 1. 24 hours before defrosting, press the fast freeze button (7) (for about 2 seconds in electronic versions). The yellow LED (8) switches on.

This action brings the foods to the lowest possible temperature. 2. Remove the food from the freezer compartment, wrap in sheets of newspaper and group together in a cool place or in a portable cooler. 3. Disconnect the appliance from the mains supply. 4. Remove the ice cube tray. 5. Remove the baskets. 6. Pull out the defrost water drain from the base of the freezer compartment. 7. Leave the freezer compartment door open. Place the lower basket, which has a hole in the rear part, under the drain to collect the defrost water. Note: Do not use sharp or pointed metal instruments to scrape off ice; do not heat the freezer compartment artificially.

Any damage to the appliance resulting from failure to observe these instructions is not covered by the guarantee. 8. Clean the freezer compartment using a sponge dampened in a solution of warm water and neutral detergent. Do not use abrasive products. 9.

Rinse the interior and dry thoroughly. 10. Reconnect the appliance to the mains. 11. Refit the drain in place and reposition the baskets. 12. Before putting the foods back in the freezer compartment, press the fast freeze button (7) again (for about 2 seconds in electronic models). The yellow LED (8) switches on.

Note: The temperature rise of frozen food during defrosting may shorten its storage life. 17 33057-GB.

fn5 Page 18 Monday, January 18, 1999 7:21 PM CARE AND MAINTENANCE Before cleaning, unplug the appliance from the mains. • Clean the inside of the freezer compartment when defrosting. • Periodically clean the inside of the refrigerator compartment with a sponge dampened in warm water and/or neutral detergent. Rinse and dry with a soft cloth. Do not use abrasives. • Clean the outside with a soft cloth dampened with water. Do not use abrasive products or scouring pads, stain removers (e.g. acetone, trichloro-ethylene) or vinegar. • Defrosting of the refrigerator compartment is completely automatic. Some models are provided with a drain hole. persons and animals or damage to property resulting from failure to observe these regulations. @@@@2.

@@@3. @@ approved fuse to BS 1362 type and proceed as follows: 1.

Remove the fuse cover (A) and fuse (B). 2. Fit replacement 13A fuse into fuse cover. 3. Refit both into plug.

Important: The fuse cover must be refitted when changing a fuse and if the fuse cover is lost the plug must not be used until a correct replacement is fitted. Correct replacement are identified by the colour insert or the colour embossed in words on the base of the plug. Replacement fuse covers are available from your local electrical store. For the Republic of Ireland only The information given in respect of Great Britain will frequently apply, but a third type of plug and socket is also used, the 2-pin, side earth type. In this case, the wire which is coloured GREEN AND YELLOW must be connected to the EARTH contact, and the two wires to the two pins, irrespective of colour. The supply to the socket must be fitted with a 16 amp fuse. Connection to a rewirable plug If the fitted plug is not suitable for your socket outlet, then it should be cut off and disposed of in order to avoid a possible shock hazard should it be inserted into a 13A socket elsewhere. A suitable alternative plug should then be fitted to the cable. 21 .



[You're reading an excerpt. Click here to read official WHIRLPOOL](#)

[ART 836-2/G user guide](#)

<http://yourpdfguides.com/dref/4838082>