



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL AWE 2316/1. You'll find the answers to all your questions on the WHIRLPOOL AWE 2316/1 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual WHIRLPOOL AWE 2316/1**  
**User guide WHIRLPOOL AWE 2316/1**  
**Operating instructions WHIRLPOOL AWE 2316/1**  
**Instructions for use WHIRLPOOL AWE 2316/1**  
**Instruction manual WHIRLPOOL AWE 2316/1**

## CONTENTS

DEFINITION OF USE  
BEFORE USING THE WASHING MACHINE  
PRECAUTIONS AND GENERAL RECOMMENDATIONS  
DESCRIPTION OF THE WASHING MACHINE  
BEFORE THE FIRST WASH CYCLE  
PREPARATION OF THE WASHING  
DETERGENTS AND ADDITIVES  
CLEANING THE FILTER/  
DRAINING RESIDUAL WATER  
CARE AND MAINTENANCE  
TROUBLESHOOTING GUIDE  
AFTER-SALES SERVICE  
TRANSPORT AND HANDLING  
INSTALLATION  
ELECTRICAL CONNECTION



[You're reading an excerpt. Click here to read official WHIRLPOOL AWE 2316/1 user guide](http://yourpdfguides.com/dref/4847916)  
<http://yourpdfguides.com/dref/4847916>



Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

5. General recommendations • Do not leave the washing machine connected when not in use. Turn off the tap. • Before cleaning or carrying out maintenance switch off the washing machine and disconnect it from the mains supply. 6. EC Declaration of Conformity • This washing machine has been designed, constructed and distributed in compliance with the safety requirements of EC Directives: 2006/95/EC Low Voltage Directive 2004/108/EC Electromagnetic Compatibility Directive GB 3 Black process 45.0° 100.0 LPI IFU-TL HR GB.fm Page 4 Friday, November 7, 2008 2:30 PM DESCRIPTION OF THE WASHING MACHINE 1. Lid 2.

Detergent dispenser 3. Drum 4. Pump access behind filter 5. After-Sales Service sticker (behind the filter cover) 6. Mobility lever (depending on model) • To move the washing machine: pull the handle out a little bit by hand and pull it out to the stop with the foot. 7. Adjustable feet 1 2 3 4 5 6 7 BEFORE THE FIRST WASH CYCLE To remove any residual water used in testing by the manufacturer, we recommend that you carry out a short wash cycle without laundry. 1. Open the tap. 2.

Close the drum flaps. 3. @@4. Close the lid. 5.

Select and start a short programme (see separate programme chart). @@@@ • Colour Separate whites and coloureds. Wash new coloured items separately.

@@@@@ Use the special programme for handwash fabrics. @@@@ • To remove red wine, coffee, tea, grass and fruit stains etc.

@ • Particularly stubborn stains should be treated before the wash. Dyeing and bleaching • Only use dyes and bleaches that are suitable for washing machines. • Follow the manufacturer's instructions. • Plastic and rubber parts of the machine may be stained by dyes or bleaches. GB 5 Black process 45.0° 100.0 LPI IFU-TL HR GB.fm Page 6 Friday, November 7, 2008 2:30 PM Loading the laundry 1. Open the machine lid by pulling it upwards. 2.

Open the drum by pushing the drum flap release (pictures "1a" or "1b" - depending on the model; models as shown on "1a" have a fixed drum flap release which will not compress when pushed). 3. Place the items of laundry into the drum one by one. Do not exceed the maximum load of the programmes indicated in the separate programme chart. Notes: - Overloading the machine will result in unsatisfactory washing results and creased laundry. - Take care that the laundry does not overhang the drum; ull; Wash your laundry in the desired programme (Cotton, Synthetics), adding an appropriate amount of chlorine bleach to the SOFTENER chamber (close the lid carefully). • Immediately after end of programme, start the "Rinse and Spin" programme to eliminate any residual bleach smell; if you want, you can add softener. • Never put both chlorine bleach and softener into the softener chamber at the same time. Using starch powder If you want to use starch powder, proceed as follows: • Wash your laundry in the desired wash programme. • Prepare the starch solution according to the starch manufacturer's instructions.

• Fill the prepared starch solution (maximum 100 ml) into the softener chamber of the detergent dispenser. • Close the lid and start programme "Rinse and Spin". GB 8 Black process 45.0° 100.0 LPI IFU-TL HR GB.

fm Page 9 Friday, November 7, 2008 2:30 PM CLEANING THE FILTER/ DRAINING RESIDUAL WATER The washing machine is provided with a self-cleaning pump. The filter keeps objects like buttons, coins, safety pins etc. which haidual heavy items are loaded (e.g. bathrobes), this system may reduce the spin speed automatically or even interrupt the spin completely in order to protect the washing machine.

• Heavy items prevented spinning; add smaller articles of laundry and repeat spin cycle. • Excessive foam formation prevented spinning; select and start "Rinse & Spin" programme. Avoid excessive detergent dosing (see "Detergents and Additives"). • "Variable spin" button (if available on your model) has been set to a low spin speed, or "No spin" option (if available on your model) has been activated. Programme time is some longer/shorter than initially displayed (only for appliances having a display which indicates the remaining programme time) Normal capacity of the appliance to adapt to factors that can have an effect on the wash programme time, e.g.: excess of foam formation, load imbalance due to heavy items of laundry, prolonged heating time resulting from reduced inlet water temperature. Due to such influences, the programme time is recalculated and updated if necessary. On certain displays (depending on the model), an animation appears during such update periods. GB 12 Black process 45.

0° 100.0 LPI IFU-TL HR GB.fm Page 13 Friday, November 7, 2008 2:30 PM Description of red indications Red indication lamp lights up Indication on big display (if fitted on your machine) Description Causes Solutions Appliance has no or insufficient water supply. The "Start/Pause" light flashes. Check whether: • Water tap is fully open and water supply pressure is sufficient. • Kinks are present in water inlet hose. • Mesh filter of water supply hose is blocked (see "Care and Maintenance"). • Water hose is frozen up. @@@@ • Waste water is not pumped out. @@@@ • The drain hose is frozen up.

@@@@@ If fault persists, notify our After-Sales Service. @@ "Water level too high" (after programme cancellation or false operating). Switch off appliance and then switch it on again, select programme "Drain" and start within 15 sec. "Waterstop fault" Switch off appliance, pull out mains plug and turn water tap off. Tilt appliance forward carefully to allow collected water to flow out from the bottom.

Then: • Plug in the appliance again. • Turn the water tap on (if water immediately flows into the appliance without the appliance being started, there is a failure; turn off the tap and notify After-Sales Service). • Select and start the desired programme again. "Overfoaming" Too much foam interrupted the wash programme. • Select and start "Rinse & Spin" programme .

• Afterwards select and start desired programme again, using less detergent. If faults persist, unplug the appliance, turn off the water tap and contact our After-Sales Service (see next chapter). from "F02" to "F35" (except "F09") "F09" "FA" "Service" "Fod" If your washing machine has no time display, check which of the previously described situations could be the origin of the fault and follow the corresponding instructions.



[You're reading an excerpt. Click here to read official WHIRLPOOL](http://yourpdfguides.com/dref/4847916)

[AWE 2316/1 user guide](http://yourpdfguides.com/dref/4847916)

<http://yourpdfguides.com/dref/4847916>

GB 14 Black process 45.0° 100.0 LPI IFU-TL HR GB.fm Page 15 Friday, November 7, 2008 2:30 PM AFTER-SALES SERVICE Before contacting After-Sales Service: 1. Try to remedy the problem yourself (see "Troubleshooting Guide"). 2. Restart the programme to check whether the problem has solved itself.

3. If the machine continues to function incorrectly, call After-Sales Service. Specify: • The nature of the problem. • The exact model of the washing machine. • The service code (number after the word SERVICE). The After-Sales Service sticker is situated behind the filter cover or on the rear of the machine. • Your full address. • Your telephone number and area code. As a priority, you should contact the After-Sales Service of the retailer who supplied you with the washing machine. TRANSPORT AND HANDLING 1.

Unplug the washing machine. 2. Turn off the tap. 3. Remove the water supply and drain hose.

4. Eliminate all water from the hoses and the washing machine (see "Cleaning the Filter/ Draining Residual Water"). Wait for the water to cool so as to avoid any accidents. 5. To facilitate moving the machine, pull the handle situated at the bottom front (if available on your model) out a little by hand and pull it out to the stop with the foot.

Afterwards push the handle back into the original stable position. 6. Fix the transport bracket again for transportation. 7. Transport the washing machine upright. IMPORTANT: Do not use the washing machine while the handle is pulled out. GB 15 Black process 45.0° 100.0 LPI IFU-TL HR GB.fm Page 16 Friday, November 7, 2008 2:30 PM INSTALLATION Removal of transport bracket The washing machine is fitted with a transport bracket to avoid any possible damage during transport.

IMPORTANT: Before using the washing machine, the transport bracket at the back MUST be removed. 1. Unscrew the two screws "A" and the four screws "B" with a flat screwdriver or a No. 8 hex nut box spanner. 2. Remove the transport bracket. 3. Replace the four outer screws "B" on the machine and tighten them. 4. Clip the two seals "C" supplied into the openings "D" of the washing machine.

Note: do not forget to replace and tighten the four outer screws. A D B 1 1 1 2 C 4 D 4 GB 16 Black process 45.0° 100.0 LPI IFU-TL HR GB.fm Page 17 Friday, November 7, 2008 2:30 PM Install the washing machine on a level surface, near to electrical, water and drain connections.

If the floor is uneven, adjust the feet (do not insert pieces of wood, cardboard etc. under the feet): 1. Loosen the locknut using the wrench provided. 2. Adjust the height of the feet by hand.

3. Retighten the locknut by turning it anti-clockwise. Make sure that the feet are resting correctly on the floor and that the washing machine is perfectly level and stable (use a spirit level). The washing machine can be installed in an area 40 cm wide and 63 cm deep. @@@@2. Make sure there are no kinks in the hose. 3. @@@@Periodically check the hose for brittleness and cracks. Replace it if necessary by a new hose available through our After-Sales Service or your specialist retailer. The washing machine can be connected without a nonreturn valve.

A 1 2 3 GB 17 Black process 45.0° 100.0 LPI IFU-TL HR GB.fm Page 18 Friday, November 7, 2008 2:30 PM Water stop anti-flooding system (see inlet hose type as shown on the right - depending on model) • Screw the hose to the water supply tap. Turn the tap fully on and check the water-tightness of the connection. • The washing machine must not be connected to the mixing tap of a non-pressurized water heater! @@@@Unhook the drain hose from the left clip, see arrow "A" on picture. Important: Do NOT loosen the drain hose from the right connection, see arrow "B" on picture. Otherwise, there is the risk of leakage and of scalding with hot water. 2. Fix the "U" bend ("C") at the very end of the drain hose.

3. Connect the drain hose to the siphon or hook it over the edge of a sink with the "U" bend and fix it properly. Small hand basins are not suitable. The edge of the sink must be no more than 100 cm from the floor. A B If you need to add an extension, use a flexible hose of the same size and secure the unions with screw-on hose clips.

Maximum overall drain hose length: 2.50 m. Maximum drain height ("U" bend): 100 cm. Minimum drain height: 55 cm. Important: Make sure there are no kinks in the drain hose and take precautions against it falling while the washing machine is running.

C GB 18 Black process 45.0° 100.0 LPI IFU-TL HR GB.fm Page 19 Friday, November 7, 2008 2:30 PM ELECTRICAL CONNECTION Do not use extension leads or multi sockets. Electrical connections must be made in accordance with local regulations. 1) Warning - this washing machine must be earthed This washing machine is normally supplied with a mains lead having a plug fitted in the factory which has been checked for correct earth continuity. If the fitted plug is not suitable for your socket outlet, or if the machine's mains lead is not fitted with a plug, you should fit a suitable new, good quality plug by following the instructions in (2) below. Any unsuitable plug should be cut off and disposed of in order to avoid a possible shock hazard should it be inserted into a socket. 2) CONNECTION TO A REWIRABLE PLUG - to be carried out only by a qualified electrician The wires in the mains lead are coloured in accordance with the following code: BLUE - "NEUTRAL" ("N") BROWN - "LIVE" ("L") GREEN AND YELLOW - "EARTH" ("E") To fit a new plug, proceed as follows: 2.1 Polarized Plugs (e.

g. 3 pin, 13 amp plug conforming to BS 1363A) a. The GREEN AND YELLOW wire must be connected to the terminal in the plug which is marked with the letter "E" or by the Earth symbol or coloured green and yellow. b. The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured blue. c. The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured brown. 2.2) Non-polarized plugs (e.g. 2 pin with side earth contact) The wire which is coloured GREEN AND YELLOW must be connected to the earth contact. The other two wires should be connected to the two pins, irrespective of colour. FUSE REPLACEMENT If the mains lead of this washing machine is fitted with a BS 1363A 13 amp fused plug, replace the fuse only with an A.S.T.

A. approved type conforming to BS 1362 and proceed as follows: Remove the fuse cover (A) and the fuse (B). Fit the replacement 13 A fuse into the fuse cover. Refit both into the plug. For all other types of plug, the supply socket should be protected by a 16 A fuse or circuit breaker at the distribution board.

GB 19 Black process 45.0° 100.0 LPI .



[You're reading an excerpt. Click here to read official WHIRLPOOL AWE 2316/1 user guide](http://yourpdfguides.com/dref/4847916)  
<http://yourpdfguides.com/dref/4847916>