




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL AWE 2316/1. You'll find the answers to all your questions on the WHIRLPOOL AWE 2316/1 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual WHIRLPOOL AWE 2316/1**  
**User guide WHIRLPOOL AWE 2316/1**  
**Operating instructions WHIRLPOOL AWE 2316/1**  
**Instructions for use WHIRLPOOL AWE 2316/1**  
**Instruction manual WHIRLPOOL AWE 2316/1**

GB

- A. Programme selector
- B. Programme sequence indicator
- C. "Start/Pause" button
- D. "Reset" button
- E. "Door open" indication

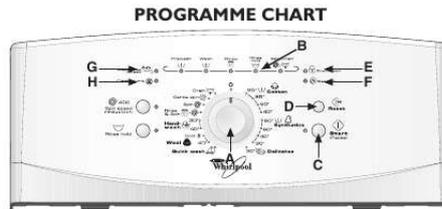

**Whirlpool**

This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately:

- E. "Service" indication
- G. "Water tap closed" indication
- H. "Clean pump" indication

1) Do not use liquid detergent.  
2) For improved garment care, spin speed is restricted to 400 rpm in this programme.

Programme	Care Labels	Max. Load kg	Type of wash / Notes <i>- for temperature selection, respect the manufacturer's recommendations on the care label</i>	Detergents and Additives			Special options		Max. Spin Speed rpm
				Pre-wash	Main Wash	Softener	Spin speed reduction	Rinse hold	
<b>Cotton with rewash</b> 95 °C	95°C	5.0	Heavily soiled whites such as bed linen, table linen, underwear and towels made of cotton and linen.	Yes	Yes <sup>1)</sup>	*	*	*	max.
<b>Cotton</b> 40 - 60 - 95 °C	40 - 60 - 95°C	5.0	Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	-	Yes	*	*	*	max.
<b>Synthetics with prewash</b> 60 °C	60°C	2.5	Normally to heavily soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	Yes	Yes <sup>1)</sup>	*	*	*	max.
<b>Synthetics</b> 30 - 40 - 60 °C	30 - 40 - 60°C	2.5	Normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	-	Yes	*	*	*	max.
<b>Delicates</b> 30 °C	30°C	1.5	Curtains and delicate clothing, dresses, skirts, shirts and blouses.	-	Yes	*	*	*	max.
<b>Quick wash</b> 30 °C	30°C	3.0	Shortly worn outer clothing made of cotton, polyester, polyamide and blends with cotton.	-	Yes	*	*	*	max.
<b>Wool</b> Cold - 40 °C	* - 40°C	1.0	Only woollens with a felt-free finish, labelled with the woolmark and identified as machine washable.	-	Yes	*	*	*	max.
<b>Handwash</b> 30 - 40 °C	30 - 40°C	1.0	Textiles made of linen, silk, wool and viscose marked as "handwashable".	-	Yes	*	-	*	400 <sup>2)</sup>
<b>Rinse &amp; Spin</b>		5.0	Same as the last rinse and the final spin in the "Cotton" programme.	-	-	*	*	*	max.
<b>Spin</b>		5.0	In this programme spinning is intensive. Same as the spin cycle in the "Cotton" programme.	-	-	-	*	-	max.
<b>Gentle Spin</b>		1.0	In this programme spinning is gentle. Same as the spin cycle in the "Wool" programme.	-	-	-	*	-	max.
<b>Drain</b>		-	Drain only - no spinning. Alternative method of terminating programme after "Rinse Hold".	-	-	-	-	-	-

N.B. This machine is controlled by sensors. Please avoid excessive detergent dosing.

\*: optional / Yes: dosing required

Whirlpool is a registered trademark of Whirlpool USA.

5019 312 10690



[You're reading an excerpt. Click here to read official WHIRLPOOL AWE 2316/1 user guide](http://yourpdfguides.com/dref/4916770)  
<http://yourpdfguides.com/dref/4916770>

**Manual abstract:**

Programme selector B. Programme sequence indicator PROGRAMME CHART B G H D A E F This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately: F. "Service" indication G. "Water tap closed" indication H. "Clean pump" indication I) C. "Start/Pause" button D. "Reset" button E. "Door open" indication Do not use liquid detergent. @@Load kg Type of wash / Notes Detergents and Additives Special options PreMain Softener Spin speed Rinse Wash wash reduction hold X00 Yes Yes 1) □ □ □ Max. @@@@made of cotton and linen.

Normally to heavily soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton. Normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton. Curtains and delicate clothing, dresses, skirts, shirts and blouses.

Shortly worn outer clothing made of cotton, polyester, polyamide and blends with cotton. Only woollens with a felt-free finish, labelled with the woolmark and identified as machine washable. Textiles made of linen, silk, wool and viscose marked as "handwashable". @@In this programme spinning is intensive. Same as the spin cycle in the "Cotton" programme.

In this programme spinning is gentle. Same as the spin cycle in the "Wool" programme. Drain only - no spinning. @@max. max. 400 2) max. max. max. – N.B.

This machine is controlled by sensors. @@@@The indication lamp next to the "Start/Pause" button lights up. The programme sequence indicator shows the current programme phase, running from left to right through Wash, Rinse, Spin/Drain. When the programme phase is finished, the corresponding indication goes out. • Note: If there is a power interruption or if the appliance is disconnected during the cycle, the programme will run again from the point where it was interrupted. @@@@Clean pump" Waste water is not pumped out. @@1. Turn the programme selector to the "Off/O" position. 2. Close the water tap.

3. Open the lid and drum and unload the machine. 4. @@CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START 1. Press the "Start/Pause" button to pause the programme.

The light flashes. 2. @@3. Press the "Start/Pause" button again. @@Do not add detergent for this programme.

@@Press the "Reset" button for at least 3 seconds. Any existing water is drained out before the door can be opened. Prewash cycle increases programme duration by approximately 20 min. Consumption values were measured in normalized conditions in compliance with standard IEC/EN 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash. \* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out. @@@@2. @@Close the lid. 4. Turn the programme selector to the desired programme and temperature.

The lamp next to the "Start/Pause" button flashes. @@The option will be applied as long as the corresponding programme phase has not been executed yet. "Spin speed reduction" button X00 • Reduces the predetermined automatic maximum spin speed to treat your laundry more gently. "Rinse hold" button • The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing. • This option is particularly recommended for the "Synthetics" and "Delicates" programmes. • It is useful if you want to postpone spinning to a later time, or if you want to drain only. @@@@• If you do not wish to spin the clothes, turn the programme selector knob to the "Drain" programme and press the "Start/Pause" button. Whirlpool is a registered trademark of Whirlpool USA. 5019 312 10690 .



[You're reading an excerpt. Click here to read official WHIRLPOOL AWE 2316/1 user guide](http://yourpdfguides.com/dref/4916770)  
<http://yourpdfguides.com/dref/4916770>