



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL AWG 308/4. You'll find the answers to all your questions on the WHIRLPOOL AWG 308/4 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual WHIRLPOOL AWG 308/4**  
**User guide WHIRLPOOL AWG 308/4**  
**Operating instructions WHIRLPOOL AWG 308/4**  
**Instructions for use WHIRLPOOL AWG 308/4**  
**Instruction manual WHIRLPOOL AWG 308/4**

---

ISTRUZIONI DI MONTAGGIO DELLE LAVATRICI INTEGRABILI	IT
ASSEMBLY INSTRUCTIONS FOR BUILT-IN WASHING MACHINES	EN
MONTAGEANLEITUNG FÜR EINBAUBAREWASCHMASCHINEN	DE
INSTRUCTIONS DE MONTAGE DES LAVE-LINGE INTÉGRABLES	FR
INSTRUCCIONES DE INSTALACIÓN DE LAS LAVADORAS INTEGRABLES	ES
INSTRUÇÕES DE MONTAGEM DAS MÁQUINAS DE LAVAR ROUPA INTEGRÁVEIS	PT
MONTAGEINSTRUCTIES VAN INTEGREERBARE WASMACHINES	NL
MONTERINGSANVISNING FOR INTEGRERBARE VASKEMASKINER	DK
MONTERINGSANVISNINGAR FÖR INBYGGNADSBARA TVÄTTMASKINER	SE
ANKASTRE ÇAMAŞIR MAKİNELERİ İÇİN MONTAJ TALİMATLARI	TR

---



[You're reading an excerpt. Click here to read official WHIRLPOOL AWG 308/4 user guide](http://yourpdfguides.com/dref/4919208)  
<http://yourpdfguides.com/dref/4919208>

**Manual abstract:**

The panel may be attached to the left- or right-hand side of the washing machine (fig. 3). Should you wish to use the magnetic lock instead of the pushpull lock, remove the push-pull lock support and fit the supplied magnetic lock support. Important! Before fitting the panel (removing all the hinge and locking elements from the front) make sure the washing machine is totally disconnected from the mains power supply. Warning - To fix the panel on the right-hand side (direction of opening opposite to that of the door) dismount the push-pull lock (or the magnet lock) from the front of the machine and the rubber pad (fig. 3-A) and fit them on the opposite side (fig. 3-B). E.g.: for a 100 mm high baseboard, the maximum height of the panel is 720 mm. If the height of the baseboard must be increased, the height of the wooden panel must be reduced.

4 Place the template of the inner side of the panel and match the height of the baseboard with the lower edge of the panel (fig. 4) using the graduated scale. 5, the hook for the pushpull lock (fig. 5), or the metal plate if you decide to use the magnetic lock (fig. 6), and the holes for fixing the hinges (fig.

6). For the chipboard panel, simply drill the upper coating – fig. 6. 3) Screw the two hinges to the panel (fig. 7).

8. 9). Position the washing machine in the cabinet and, if necessary, adjust the feet to level it and lock them with the relative locknut. To prevent the vibrations generated by the washing machine from being transmitted to the cabinet, make sure the sides and top do not touch the cabinet. There must be a gap of at least 2 mm. The cover must be installed in such a way as to make it impossible to touch live components and a tool must be required to remove it. Adjusting the hinges Positioning the washing machine in the cabinet 5 Applying the baseboard It must be possible to remove the continuous

kitchen baseboard to allow the drain pump to be cleaned if necessary. In this case, the kitchen baseboard can be fixed to the washing machine baseboard with 4 screws, respecting the 4 reference marks (see fig. 9-10-11).



[You're reading an excerpt. Click here to read official WHIRLPOOL](#)

[AWG 308/4 user guide](#)

<http://yourpdfguides.com/dref/4919208>