



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL AWG 5061/B1. You'll find the answers to all your questions on the WHIRLPOOL AWG 5061/B1 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual WHIRLPOOL AWG 5061/B1
User guide WHIRLPOOL AWG 5061/B1
Operating instructions WHIRLPOOL AWG 5061/B1
Instructions for use WHIRLPOOL AWG 5061/B1
Instruction manual WHIRLPOOL AWG 5061/B1



WASHING MACHINE USER MANUAL
Инструкция за експлоатация на перална машина



[You're reading an excerpt. Click here to read official WHIRLPOOL AWG 5061/B1 user guide](http://yourpdfguides.com/dref/4911404)
<http://yourpdfguides.com/dref/4911404>

Manual abstract:

@@@Remove the plug by holding. Do not plug the power supply with wet hands. Never touch the machine with wet hands or feet. Never open the detergent drawer while the device is running. @@Since the machine can reach high temperatures while running, do not touch the drain hose and water during draining. In case of any failure, first unplug the device and close the water tap. Do not attempt to repair. Please apply to the nearest authorized service station. Do not forget that the packing material of your machine may be hazardous for children. Do not let your children play with the washing machine. Keep your pet away from your machine. Your machine should only be used by adults within the information written in this manual. Your machine is designed for use in house environment. Warranty will be invalid if you use it for commercial purposes. Never use or store flammable materials nearby the appliance. To clean the appliance do not use inflammable cleaning agents. The appliance should not be put on a carpet which can block the air ventilation on the bottom side. **RECOMMENDATIONS** The detergent or softener in contact with air for a long time will dry and stick to your detergent drawer. To avoid this put your detergent and softener into the detergent drawer just before washing. It is recommended that you use pre-washing program for only very dirty clothes. Please do not exceed the maximum loading capacity. 2 o m w w w PD F -X C h a n g e PD F -X C h a n g e ! W N O y b u t o k C l i c m C l i c k t o b u y N O . c W w ! . d o w o . d o c u - t r a c k c u - t r a c k . c If you will not use your machine for a long time, unplug your machine, close the water supply and leave the door open in order to keep the inside of the machine dry and for prevention from unpleasant odour. As a result of the quality control procedures, a certain amount of water may remain in your machine. This is not harmful for your machine. **SECTION 2: INSTALLATION** You must pay attention to the following issues before using your washing machine. **REMOVAL OF TRANSPORTATION SCREWS** Transportation screws, which are located at the back side of the machine, must be removed before running the machine.

Loosen the screws by rotating counterclockwise by a suitable wrench. (DIAGRAM-1) Remove the screws by pulling them. (DIAGRAM-2) To the holes where the transport screws have been removed, insert the plastic transport screw taps found in the accessories bag. (DIAGRAM-3) The transportation screws, that have been removed from the machine should be kept in hand for any other transportation necessities. **DIAGRAM-2 DIAGRAM-1 DIAGRAM-3 ADJUSTMENT OF FEET** Do not install your machine on rugs or similar surfaces. For your machine to work silently and without any vibration, it should be settled on a flat, non-slippery and tough ground. 3 o m w w w PD F -X C h a n g e PD F -X C h a n g e ! W N O y b u t o k C l i c m C l i c k t o b u y N O . c W w ! . d o w o . d o c u - t r a c k c u - t r a c k .

c You can adjust the balance of your machine from its feet. First, loosen the plastic adjustment nut. Adjust by rotating the feet upwards or downwards. After the balance has been reached, tighten the plastic adjustment nut again by rotating it upwards. @@@@@@If you have no such sockets and fuses in your house, let it be made by a qualified electrician.

Our company will not be responsible for any damages that may occur as a result of usage without grounding. Insert the machine's plug to a grounded socket which you can easily reach. **WATER SUPPLY CONNECTION** Depending on the features your machine, may be with single water inlet (cold) or double water inlet (cold/hot). The white headed hose is for cold water inlet and red headed hose is for hot water inlet (valid for machines with hot&cold water inlet). To prevent leakage from the connection joints, 1 (valid for cold water inlet) or 2 (valid for machines with hot&cold water inlet) seals are included in the hose packing.

Fit these seals at the end of water inlet hoses on the tap side. Connect the white headed hose to the water inlet valve with white filter and connect the red headed hose to the water inlet valve with red filter (latter is valid in machines with hot&cold water inlet). Tighten the plastic parts of the connections with your hand. Please call a qualified plumber for safer connections. 4 o m w w w PD F -X C h a n g e PD F -X C h a n g e ! W N O y b u t o k C l i c m C l i c k t o b u y N O . c W w ! . d o w o . d o c u - t r a c k c u - t r a c k . c Water pressure of 1-10 bars from your tap will enable your machine to work more efficiently. (1 bar pressure means water flow of more than 8 liters in 1 minute from a fully opened tap).

After connections are completed, check for the non-leakage of the connection joints by turning on your tap completely. Be sure that water inlet hoses are not folded, broken or crushed. Mount the water inlet hoses to a 3/4, geared water tap. Cold water inlet (White filter valve) **WATER DRAIN CONNECTION** Be sure that water inlet hoses are not folded, twisted, crushed or elongated by stretching. Water drain hose should be mounted at a height of minimum 60 cm, maximum 100 cm from the ground. The end of the water drain hose may directly be fitted to the dirty water outlet hole or a special apparatus mounted on the outlet bracket of the wash-stand. Never attempt to extend the water drain hose by adding extra parts. 5 o m w w w PD F -X C h a n g e PD F -X C h a n g e ! W N O y b u t o k C l i c m C l i c k t o b u y N O . c W w ! . d o w o .

d o c u - t r a c k c u - t r a c k . c **SECTION 3: TECHNICAL SPECIFICATIONS** AWG 5061/B1 Maximum dry laundry capacity (kg) Recommended loading (kg) Height (cm) Width (cm) Depth (cm) Maximum spin cycle (rpm) 5 4,5 85 59,6 51 600 (*) Maximum spin cycles depend on the model you've chosen 6 o m w w w PD F -X C h a n g e PD F -X C h a n g e ! W N O y b u t o k C l i c m C l i c k t o b u y N O . c W w ! . d o w o . d o c u - t r a c k c u - t r a c k .

c **SECTION 4: CONTROL PANEL** 1 2 3 4 5 6 1-Detergent drawer 2-Start/pause light 3-Function indicator lights 4-Program ready light 7 8 5-Program knob 6-Start/pause button 7-Function buttons 8-Program end light 7 o m w w w PD F -X C h a n g e PD F -X C h a n g e ! W N O y b u t o k C l i c m C l i c k t o b u y N O . c W w ! . d o w o . d o c u - t r a c k c u - t r a c k . c **START/PAUSE BUTTON** Used to start a selected program or pause during running.

WARNING! It is required for the program knob to be brought to O(off) position before selecting the program or changing a continuing program. **FUNCTION INDICATOR LIGHTS** When the start/pause button or any function button is pressed, the corresponding light turns on. The light turns off when the function button or start/pause button is re-pressed, or when the process the selected function is completed. The function indicator lights are also used in failure detection system mentioned in section 9.



[You're reading an excerpt. Click here to read official WHIRLPOOL AWG 5061/B1 user guide](http://yourpdfguides.com/dref/4911404)
<http://yourpdfguides.com/dref/4911404>

8 o m w w w P D F - X C h a n g e P D F - X C h a n g e ! W N O y b u t o k C l i c m C l i c k t o b u y N O . c W w ! . d o w o . d o c u - t r a c k c u - t r a c k . c
FUNCTION BUTTONS Extra rinse You can have one more rinsing done in addition to the rinses which your machine has made in all washing programs by
using this function. No spin This program is recommended to be used for your sensitive clothes on which no spinning should be done.

By pressing this function button, you can cancel the spinning process which is included in the program. 9 o m w w w P D F - X C h a n g e P D F - X C h a n g e
! W N O y b u t o k C l i c m C l i c k t o b u y N O . c W w ! . d o w o . d o c u - t r a c k c u - t r a c k . c WARNING! Functions vary depending on the model you have
chosen. If you forgot to use additional function and your machine starts to wash push the additional function button if the indicator light is on. Additional
function will be activated. If the indicator light is not on, additional function will not be activated. PROGRAM KNOB With the program knob, you can select
the program with which you desire to wash your clothes.

You can adjust the program selection process by turning the program knob in both directions. You must be careful that the adjustment sign of the program
knob is exactly on the program you want to select. When you bring the program knob to O(off) position, while your machine is running, your program will
remain incomplete. 10 o m w w w P D F - X C h a n g e P D F - X C h a n g e ! W N O y b u t o k C l i c m C l i c k t o b u y N O . c W w ! .

d o w o . d o c u - t r a c k c u - t r a c k . c SECTION 5: WASHING YOUR LAUNDRY Plug the machine. @@Never wash your white and coloured clothes
together. @@@@Zip and button your clothes.

@@@@Fill your clothes in your machine in a well-spread manner. Place each cloth separately. @@@@@@@@@@Washed without heating the tap
water. Dirty or very dirty, stain, cotton, coloured and linen textile Dirty, synthetic or synthetic mixture textile Baby laundry Slightly dirty, synthetic or
synthetic mixture textile EXPLANATIONS COTTON 90 COTTON 60 (PREWASH) COTTON 60 COTTON 40 ECO WASH COTTON 30 QUICK WASH
COTTON COLD MIX WASH SYNTHETIC 60 BABY WASH SYNTHETIC 40 2 1+2 2 2 2 2 2 2 5 5 5 5 5 2,5 5 Underwears, sheet, table cloth, t-shirt, shirt,
towel 2 2 2 2 5 3 3 3 Nylon socks, blouse eamount of water. Take off the leftover detergent avoid to drop into your machine. @@Remove the siphon plug and
clean the residues of the softener thoroughly. Fit the cleaned siphon plug in its location. @@@@@@@@@@Adjust the program knob to "Draining" program.
The program ready light will be on. Run the program by pressing the start/pause button.

@@@@@@@@These pieces cause formation of rust stains in the drum. @@@@@@@@@@@@@@@@@@If the type of your cloth is suitable, wash it with lye.
@@@@@@@@Rub with detergent and wash with diluted lye. Grease and oil stains: First wipe the residues. Rub the stain with detergent and then wash
with lukewarm soapy water. Mustard: First apply glycerine to the stained area. Rub with detergent and then wash. @@@@@@@@@@The stain should be
washed with detergent, and if it does not disappear, it should be wiped with oxygenated water (in proportion of 3%). Ink: Hold the stained area under cold
water and wait until the inky water completely runs off. Then rub with water diluted with lemon juice and detergent, wash after waiting for 5 minutes.

Fruit: Stretch the stained area of your clothes on the top of a container and pour cold water on it. Do not pour hot water on the stain. Wipe with cold water
and apply glycerine. Wait for 1-2 hours and rinse after wiping with a few drops of white vinegar. Grass stain: Rub the stained part with detergent.
If the type of fabric is suitable for use of lye, wash it with lye. Rub your woolen clothes with alcohol. (For coloured ones, a mixture of 1 unit pure alcohol and 2
units of water). Oil Paint: The stain should be eliminated before it dries by applying thinner on it. Then it should be rubbed with detergent and washed.

Burnt stain: If your cloth is suitable for use of lye, you can add lye into your washing water. For woolen fabric, a cloth damped in oxygenated water should be
covered on the stain and it should be ironed with a dry cloth on it. It should be washed after rinsing well. SECTION 8: AVOIDING MINOR FAULTS All
repairing which must be done on the machine should be done by authorized service. When a repairing is required for your machine or you are unable to
eliminate the failure with the help of the information given below: Unplug the machine. Close the water tap. Apply to the nearest authorized service station.

21 o m w w w P D F - X C h a n g e P D F - X C h a n g e ! W N O y b u t o k C l i c m C l i c k t o b u y N O . c W w ! . d o w o .

d o c u - t r a c k c u - t r a c k . c FAILURE PROBABLE CAUSE It is unplugged. Your fuse is defected. The electric power is off. Start/pause button has not been
pressed. The program knob is in O(off) status. The door is not shut properly. Water tap is closed. The water inlet hose may be bent. The water inlet hose is
obstructed.

The valve inlet filter is obstructed. The door is not shut properly. The drain hose is obstructed or bent. The pump filter is obstructed. The clothes are not
placed inside the machine in a wellbalanced manner.

The feet of your machine are not adjusted. Transportation screws are not removed. Your machine does not operate. Your machine does not receive water.
METHODS OF ELIMINATION Insert the plug into the socket.

Change your fuse. Check the electric power. Press the start/pause button. Bring the program knob on the desired status. Shut the door properly. You should
hear the click. Open water tap. Check the water inlet hose. Clean the filters of water inlet hose. (*) Clean the valve inlet filters.

(*) Shut the door properly. You should hear the click. Check the drain hose. Clean the pump filter. (*) Spread the clothes inside the machine in an orderly and
wellbalanced manner. Adjust the feet. (**) Remove transportation screws. (**) Your machine is not draining water. Your machine is vibrating. (*) See the
section concerning the maintenance and cleaning of your machine.

(**) See the section concerning installations your machine. 22 o m w w w P D F - X C h a n g e P D F - X C h a n g e ! W N O y b u t o k C l i c m C l i c k t o b u y N
O . c W w ! . d o w o . d o c u - t r a c k c u - t r a c k . c

c FAILURE PROBABLE CAUSE There is a small amount of clothes in the device. Excessive amount of clothes are filled in the machine or the clothes are not
placed in a well-balanced manner. Your machine touches a ripid object. Your machine is vibrating. Too much detergent has been used.

Excessive foam in the detergent drawer. METHODS OF ELIMINATION It does not prevent operation of the machine. Do not exceed the recommended
quantity of clothes and spread your clothes in the machine in a wellbalanced manner. Prevent your machine's leaning on a tough place .



[You're reading an excerpt. Click here to read official WHIRLPOOL
AWG 5061/B1 user guide
http://yourpdfguides.com/dref/4911404](http://yourpdfguides.com/dref/4911404)

@@Use only the detergents produced for full automatic machines. Select a suitable program. @@@@Distribution of the clothes in your machine is not wellbalanced. @@No failure. The water is at the lower part of the drum. @@@@After your clothes are distributed, passage to spinning process will be realized.

In the next washing process, place your clothes into the machine in a wellbalanced manner. SECTION 9: AUTOMATIC FAILURE DETECTION SYSTEM Your machine is equipped with systems which will both take the necessary precautions and warn you in case of any failure by controlling it self constantly during the washing processes. FAILURE CODE FAILURE INDICATOR PROBABLE FAILURE Err 01 The start/pause light blinks. The door is not shut properly. THE PROCESS TO BE DONE Shut the door properly so that you hear the click. If the problem persists, turn off the machine unplug and apply to the nearest authorized service immediately. 25 o m w w w PDF -X C h a n g e PDF -X C h a n g e ! W N O y b u t o k C l i c m C l i c k t o b u y N O . c W w ! . d o w o . d o c u - t r a c k c u - t r a c k . c

FAILURE CODE FAILURE INDICATOR PROBABLE FAILURE Err 02 The program ready light blinks. The water level in your machine is below heater. The pressure of your water supply may be low or locking. Err 03 The start/pause light and program ready light blinks . The pump has failed or the pump filter is obstructed.

THE PROCESS TO BE DONE Turn on the tap to the end. Water may be cut, check it. If the problem is still continuing, your machine will automatically stop after a while. Unplug your machine, turn off the tap and apply to the nearest authorized service. Clean the pump filter.

If the problem persists, apply to the nearest authorized service. (*) (*) See the section regarding the maintenance and cleaning of your machine. 26 o m w w w PDF -X C h a n g e PDF -X C h a n g e ! W N O y b u t o k C l i c m C l i c k t o b u y N O . c W w ! . d o w o . d o c u - t r a c k c u - t r a c k . c FAILURE CODE FAILURE INDICATOR The start/pause light and program end light blink. PROBABLE FAILURE The heater of your machine or the heat sensor has failed. THE PROCESS TO BE DONE Shut down your machine and unplug. Turn off your tap and apply to the nearest authorized service.

Shut down your machine and unplug. Turn off the tap and apply to the nearest authorized service. Shut down your machine and unplug. Turn off the tap and apply to the nearest authorized service. Shut down your machine and unplug. Turn off the tap and apply to the nearest authorized service. If the network voltage is lower than 150V or higher than 260V, your machine will automatically stop. When the network voltage is recovered, your machine will continue its operation. Err 05 Err 06 The program ready light and program end light blink. The program start/pause light, ready light and program end light stays on permanently.

The start/pause light, program ready light and program end light blink. The motor has failed. Err 07 Configuration error. Err 08 The motor has failed. Err 09 The program ready light and program end light stays on permanently.

The network voltage is too high or too low. 27 o m w w w PDF -X C h a n g e PDF -X C h a n g e ! W N O y b u t o k C l i c m C l i c k t o b u y N O . c W w ! . d o w o . d o c u - t r a c k c u - t r a c k . c

SECTION 10: INTERNATIONAL WASHING SIGNS Washing temperature. Do not wash (hand wash) Lukewarm iron. Medium hot iron. Hot iron. Do not iron. Do not tumble dry. Hang to dry. Drip dry. Dry flat. Do not bleach.

Handy to bleach. All of these are dry cleaning symbols. The letters are to instruct the cleaner what type of solvent to be used. Garments bearing these symbols should not be washed in your machine unless the label says otherwise. 28 o m w w w PDF -X C h a n g e PDF -X C h a n g e ! W N O y b u t o k C l i c m C l i c k t o b u y N O . c W w ! . d o w o . d o c u - t r a c k c u - t r a c k . c I : - 2 : - 3 : 4 : - 5 : - 6 : - 7 : 8 : 9 : 10 : 29 o m w w w PDF -X C h a n g e PDF -X C h a n g e ! W N O y b u t o k C l i c m C l i c k t o b u y N O . c W w ! . d o w o . d o c u - t r a c k c u - t r a c k . c I :

.
.....i.....

. . . 30 o m w w w PDF -X C h a n g e PDF -X C h a n g e ! W N O y b u t o k C l i c m C l i c k t o b u y N O . c W w ! . d o w o . d o c u - t r a c k c u - t r a c k . c ,
2 : . . .

(. (2) . (, 3) . I) .
2 1 3 , . @
, 10 , 220-240V 50Hz . . . , . . .) () .

(. (3 2) , .) . @ @ 60 . 100 , . . @ @ 2 . 3 .
4 . 7 5 . 6 . 7 .

@ @ , . , 9 . 36 o m w w w PDF -X C h a n g e PDF -X C h a n g e ! W N O y b u t o k C l i c m C l i c k t o b u y N O . c W w ! . d o w o . d o c u - t r a c k c u - t r a c k . c , . . . 37 o m w w w PDF -X C h a n g e PDF -X C h a n g e ! W N O y b u t o k C l i c m C l i c k t o b u y N O . c W w ! . d o w o . d o c u - t r a c k c u - t r a c k . c ! , . ,

. , . 0 (. 38 o m w w w PDF -X C h a n g e PDF -X C h a n g e ! W N O y b u t o k C l i c m C l i c k t o b u y N O . c W w ! . d o w o . d o c u - t r a c k c u - t r a c k . c

c 5 : - ; 1/2 90°C . , . , . . .
(, , . . . , 39 o m w w w PDF -X C h a n g e PDF -X C h a n g e ! W N O y b u t o k C l i c m C l i c k t o b u y N O . c W w ! . d o w o . d o c u - t r a c k c u - t r a c k . c , . . . , . . . - , : . 2 . . . 2 .

. 40 , I . o m w w w PDF -X C h a n g e PDF -X C h a n g e ! W N O y b u t o k C l i c m C l i c k t o b u y N O . c W w ! . d o w o . d o c u - t r a c k c u - t r a c k . c I .

- : , 0 (,) , 0 () : 0 () 41 o m w w w PDF -X C h a n g e PDF -X C h a n g e ! W N O y b u t o k C l i c m C l i c k t o b u y N O . c W w ! . d o w o . d o c u - t r a c k c u - t r a c k . c - 2 , ! , . ,

. . 3 . , (I . LED . 3) LED , 3 . 6 : - , 42 o m w w w PDF -X C h a n g e PDF -X C h a n g e ! W N O y b u t o k C l i c m C l i c k t o b u y N O . c W w ! . d o w o . d o c u - t r a c k c u - t r a c k . c . (k .) AWG 5061/B1 90 60) 60 40 2 1+2 2 2 2 5 5 5 5 5 5 5 5 5 5 , 3 3 , 3 , , o , o , o , . . . , o , o , o , o , o ,

@ @ (k .) AWG 5061/B1 2 2 1+2 30 3 3 2 , , , , 2 2 2 2 . . . , 2 , 30 2 2 2 2 , . . .

... TABLE-1 CONTINUE (*) ..
, (. @@..... 2-3

..... @@.....: (...
, , 2).. (1). @@..
.....!, 0..
.. 0..... " "(. ")".

... : ! , , . 47 o m w w w P D F - X C h a n g e P D F - X C h a n g e ! W N O y b u t o k C l i c k t o b u y N O . c W w ! . d o w o . d o c u - t r a c k c u - t r a c k
. c 7 : : , , , , ,
, 96 . : , , , , , 3% : , ,
30 . : , , , , , : : . .
(2 : 30 , 4 , . . : ,) 30 . . (3 1) , , (2 1) 48 o m w w w P D F - X C h a n g e P D F - X C h a n g e ! W N O y b u t o k C l i c k t o b u y N O . c W w ! .
d o w o . d o c u - t r a c k c u - t r a c k .



[You're reading an excerpt. Click here to read official WHIRLPOOL
AWG 5061/B1 user guide
<http://yourpdfguides.com/dref/4911404>](#)

c : . 3%
: . . . 1 :
... 2) . (, 1-2 , 5 8 : .
: . . . 49 o m w w w P D F - X C h a n g e P D F - X C h a n g e ! W N O y b u t o k C l i c m C l i c k t o b u y N O . c W w ! . d o w o . d o c u - t r a c k c u - t r a c k . c . . .
..... 0
.....
.....
.....
. 50 o m w w w P D F - X C h a n g e P D F - X C h a n g e ! W N O y b u t o k C l i c m C l i c k t o b u y N O . c W w ! . d o w o . d o c u - t r a c k c u - t r a c k . c . . 10 . . .
5 - .
.....
.....
... 51 o m w w w P D F - X C h a n g e P D F - X C h a n g e ! W N O y b u t o k C l i c m C l i c k t o b u y N O . c W w ! . d o w o . d o c u - t r a c k c u - t r a c k . c . . .
..... 9 : , , E r r 01
... E r r 02
52 . o m w w w P D F - X C h a n g e P D F - X C h a n g e ! W N O y b u t o k C l i c m C l i c k t o b u y N O . c W w ! . d o w o . d o c u - t r a c k c u - t r a c k .
c E r r 02 E r r 03
, E r r 05 53 o m w w w P D F - X C h a n g e P D F - X C h a n g e ! W N O y b u t o k C l i c m C l i c k t o b u y N O . c W w ! . d o w o . d o c u - t r a c k c u - t r a c k .
k . c , E r r 06 . , E r r 07 .
, E r r 08 . 150V E r r 09 260V , , 54 o m w w w P D F - X C h a n g e P D F - X C h a n g e ! W N O y b u t o k C l i c m C l i c k t o b u y N O . c W w ! .
d o w o . d o c u - t r a c k c u - t r a c k . c 10 :
... 55 55 o m w w w P D F - X C h a n g e P D F - X C h a n g e ! W N O y b u t o k C l i c m C l i c k t o b u y N O . c W w ! . d o w o . d o c u - t r a c k c u - t r a c k . c . . .
5019 311 02016 52017773 o m w w w .



**[You're reading an excerpt. Click here to read official WHIRLPOOL
AWG 5061/B1 user guide
http://yourpdfguides.com/dref/4911404](http://yourpdfguides.com/dref/4911404)**