



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL AWG 870. You'll find the answers to all your questions on the WHIRLPOOL AWG 870 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual WHIRLPOOL AWG 870**  
**User guide WHIRLPOOL AWG 870**  
**Operating instructions WHIRLPOOL AWG 870**  
**Instructions for use WHIRLPOOL AWG 870**  
**Instruction manual WHIRLPOOL AWG 870**

3gb20058a.fm5 Page 1 Saturday, June 29, 2002 3:02 PM



**GB AWG 870**

A. "On/Off" indicator light  
B. "On/Off" button



⊕ : option / Yes : add the detergent  
<sup>1</sup> For improved garment care spin speed is restricted to 1000 rpm in this programme.  
<sup>2</sup> For improved garment care spin speed is restricted to Min rpm in this programme.

Programme selector knob	Programme	Care Labels	Type of wash/Notes	Max. Load kg	Detergent and Additives			Options				Spin speed selector rpm	Temperature Selector °C
					Pre-wash	Main wash	Fabric Softener	Half Load	Intensive rinse	Rinse Hold	No spin		
1	Cotton with prewash	90	Heavily soiled, long wearing and temperature stable textiles in cotton and linen (bed linen, table linen, underwear, shirts etc.).	5.0	yes	yes	⊕	⊕	⊕	—	⊕	1	Max. 90°
2	Cotton	60	Normally soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	5.0	—	yes	⊕	⊕	⊕	—	⊕	1	Max. 90°
3	Coloured Cotton	60	Average to heavily soiled, long wearing and temperature stable textiles in cotton and linen.	5.0	—	yes	⊕	⊕	⊕	—	⊕	1	Max. 60°
4	Quick wash	40	Slightly soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	5.0	—	yes	⊕	⊕	—	—	⊕	1	Max. 40°
B	Special rinse for cotton wash	—	Programme for treating wash with starch or softener. The programme ends with a long spin cycle.	5.0	—	—	⊕	—	—	—	⊕	1	—
C	Drain + Spin	—	Drain, with final spin. Alternative method for unloading laundry earlier.	5.0	—	—	—	—	—	—	⊕	1	—
5	Synthetic with prewash	60	Heavily soiled shirts, blouses, overalls etc. made of polyester (Dialen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2.5	yes	yes	⊕	⊕	—	⊕	⊕	2	Max. 60°
6	Synthetic	60	Slightly to normally soiled blouses, shirts, overalls etc. made of polyester (Dialen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2.5	—	yes	⊕	⊕	—	⊕	⊕	2	Max. 60°
A	Rinse	—	Rinse program, ending with a spin cycle.	2.5	—	—	⊕	—	—	⊕	⊕	2	—
B	Special rinse for synthetic fabrics	—	Programme for treating wash with starch or softener. The programme ends with a long spin cycle.	2.5	—	—	⊕	—	—	⊕	⊕	2	—
D	Drain + Spin	—	Drain, with final spin. Alternative method for terminating the "Synthetic", "Delicate" and "Wool" programme and unload the laundry earlier.	2.5	—	—	—	—	—	—	⊕	2	—
7	Wool	40	Only machine washable woollens with pure new wool label. If you select "Rinse Hold" do not leave items to soak for too long.	1.0	—	yes	⊕	—	—	⊕	⊕	2	Max. 40°
D	Drain + Spin for wool	—	Drain, with final spin. Alternative method for terminating the "Synthetic", "Delicate" and "Wool" programme and unload the laundry earlier.	1.0	—	—	—	—	—	—	⊕	2	—

Whirlpool is a registered trademark of Whirlpool USA  
**5019 301 20058/A**

Black Process Plate



[You're reading an excerpt. Click here to read official WHIRLPOOL AWG 870 user guide](http://yourpdfguides.com/dref/4912215)  
<http://yourpdfguides.com/dref/4912215>

**Manual abstract:**

@@@Max. Load Programme selector knob Programme Care Labels Type of wash/Notes kg Detergent and Additives Prewash Main wash Fabric Softener  
Half Load Options Intensive Rinse rinse Hold No spin Spin Temperature speed Selector selector rpm yes — yes yes °C Max. 90° Max. 90° 1 2 3 4 B C 5 6 A B  
D 7 D Cotton with prewash Cotton Heavily soiled, long wearing and temperature stable textiles in cotton and linen (bed linen, table linen, underwear, shirts  
etc.). Normally soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. Average to heavily soiled, long wearing and  
temperature stable textiles in cotton and linen. Slightly soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.  
— — Programme for treating wash with starch or softener. The programme ends with a long spin cycle. Drain, with final spin. Alternative method for  
unloading laundry earlier. Heavily soiled shirts, blouses, overalls etc.  
made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton. Slightly to normally soiled blouses, shirts, overalls etc. made of  
polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton. — — Rinse program, ending with a spin cycle. Programme for treating wash  
with starch or softener.  
The programme ends with a long spin cycle. Drain, with final spin. Alternative method for terminating the “Synthetic”, “Delicate” and “Wool” programme  
and unload the laundry earlier. Only machine washable woollens with pure new wool label. If you select “Rinse Hold” do not leave items to soak for too long.  
— Drain, with final spin. @60° Max. 40° — — Max. 60° Max. 60° — — — Max.

@@@Press the “ON/OFF” button. 2. After the desired interval has passed, press the button again. “ON/OFF” END OF WASH CYCLE 1. @@2. To  
unload the machine wait for the door to unlock (approx. 2 minutes). 3. Switch off the appliance, open the door and unload the washing. 4.  
Close the tap and leave the door ajar to allow the drum to dry out. @@bath robes, towels, etc). @@@@Switch off the appliance  
by pressing the “ON/OFF” button. 2. Select the new programme.  
3. @15 minutes. @@@Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and  
temperature, the load and the type of wash. ADD DETERGENT, CLOSE THE DOOR AND SELECT THE PROGRAMME Add the detergent as described in  
the programme table or in the chapter “Detergent and Additives” in the booklet. 1.  
Make sure that the programme selector is set to “Stop”. 2. Open the tap. 3. Set the programme selector to the desired programme. 4. Set the thermostat knob  
to the desired temperature. 5. Set the spin selector knob to the desired speed. 6.

Special options can be selected, if required. 7. Check that the door is well closed and turn on the washing machine by pressing the “ON/OFF” button. The  
indicator lights up, indicating that the washing machine is on. SELECT ANY DESIRED OPTION “Half Load” button (depending on model) • Reduces water  
consumption above all during rinsing. • Suitable for lightly soiled laundry and small loads (max 2.5 kg). Note: reduce the detergent quantity. “Intensive  
Rinse” button (depending on model) • More water and a longer time in rinse cycle is added. • This option is especially recommended in areas with extremely  
soft water, for baby linen and helps people with skin allergies.  
“Rinse Hold” button in synthetic and wool programmes only (depending on model) • The laundry remains in the last rinse water without progressing to the  
final spin cycle to avoid creasing and prevent colours from changing. • This option is particularly recommended for the programme “Synthetics” or  
“Delicate”. @@@.



[You're reading an excerpt. Click here to read official WHIRLPOOL  
AWG 870 user guide  
http://yourpdfguides.com/dref/4912215](http://yourpdfguides.com/dref/4912215)