




Your PDF Guides


You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL AWG 875/D. You'll find the answers to all your questions on the WHIRLPOOL AWG 875/D in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual WHIRLPOOL AWG 875/D
User guide WHIRLPOOL AWG 875/D
Operating instructions WHIRLPOOL AWG 875/D
Instructions for use WHIRLPOOL AWG 875/D
Instruction manual WHIRLPOOL AWG 875/D



CONTENTS

- BEFORE USING THE APPLIANCE
- PRECAUTIONS AND GENERAL RECOMMENDATIONS
- DESCRIPTION OF THE APPLIANCE
- FILLING THE DETERGENT AND ADDITIVES
- REMOVING THE FILTER
- DRAINING RESIDUAL WATER
- CARE AND MAINTENANCE
- TRANSPORT / HANDLING
- INSTALLATION
- ELECTRICAL CONNECTION



12

Black process 450 150 0 LPI



[You're reading an excerpt. Click here to read official WHIRLPOOL AWG 875/D user guide](http://yourpdfguides.com/dref/4918521)
<http://yourpdfguides.com/dref/4918521>

Manual abstract:

fm Page 12 Friday, July 15, 2005 3:42 PM CONTENTS BEFORE USING THE APPLIANCE PRECAUTIONS AND GENERAL RECOMMENDATIONS DESCRIPTION OF THE APPLIANCE FILLING THE DETERGENT AND ADDITIVES REMOVING THE FILTER DRAINING RESIDUAL WATER CARE AND MAINTENANCE TRANSPORT / HANDLING INSTALLATION ELECTRICAL CONNECTION 12 Black process 45.0° 150.0 LPI 30120020GB, fm Page

13 Friday, July 15, 2005 3:42 PM BEFORE USING THE APPLIANCE 1. Removing the packaging and inspection • After unpacking, make sure that the appliance is undamaged. If in doubt, do not use the appliance. Contact After-Sales Service or your local retailer. • Keep the packaging materials (plastic bags, polystyrene parts, etc.) out of reach of children, as they are potentially dangerous. 5.

Drain • Connect the drain hose to the siphon or hook it over the edge of a sink with the "U" bend (see "Installation/Connect the water drain hose"). • If the appliance is connected to a built-in drainage system, ensure the latter is equipped with a vent to avoid simultaneous loading and draining of water (siphoning effect). 2. Remove the transport bolts • The appliance is fitted with transport bolts to prevent internal damage during transport. Before using the appliance, you must remove the transport bolts (see "Installation/ Remove the transport bolts").

6. Electrical connection • Electrical connections must be carried out by a qualified technician in compliance with the manufacturer's instructions and current standard safety regulations. • Voltage information, power consumption and electrical protection data are supplied on the inside of the filter cover. • The appliance must be connected exclusively by means of a socket with an earth connection in accordance with current regulations. The appliance must be earthed by law.

The manufacturer declines all liability for damage to persons or property deriving directly or indirectly from failure to observe the directions. • Do not use extension leads or multi sockets. • Before any maintenance on the appliance disconnect it from the mains supply. • After installation, access to the mains plug or disconnection from the mains supply must be ensured at all times via a double-pole switch. • Do not operate the appliance if it has been damaged during transport. Inform the After-Sales Service. @@@@ • Water supply: Cold water only • Tap: 3/4" threaded hose connector. • Pressure: 0.05-1.00 MPa (0.

5-10 bar). 13 Black process 45.0° 150.0 LPI 30120020GB, fm Page 14 Friday, July 15, 2005 3:42 PM PRECAUTIONS AND GENERAL RECOMMENDATIONS 1. Packing • The packing material is recyclable as indicated by the recycling symbol. Adhere to local regulations when disposing of packaging material. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. • The appliance is built from reusable materials.

Dispose of the appliance in conformity with environmental regulations. • Before scrapping, cut off the power cable so that the appliance cannot be connected to the mains. • Remove detergent from compartment if you intend scrapping your appliance. 2. Energy saving tips • Achieve the best use of energy, water, detergent and time by using the recommended maximum load size.

• Do not exceed manufacturers' recommended dosages as shown on the detergent package. • The Eco Flap - a special system in the outlet - will prevent detergent loss from the drum to avoid detergent loss into the environment. • Use "Prewash" for heavily soiled laundry only! Save detergent, time, water and energy consumption by not selecting "Prewash" for slight to normally soiled laundry. You save on water, energy and time as a result. • Pretreat stains with stain remover or soak dried in stains in water before washing to reduce the necessity of a hot wash program.

• Save energy by using a 60° C instead of a 90° C wash programme or a 40° C instead of a 60° C wash programme. @@@@ • Do not use abrasive detergents. • Do not attempt to force the door open. @@@@ • Worktop 2. Control panel 3. Detergent dispenser 4. Door 5. @@@@ Filter (behind cover) 7. After-Sales Service sticker (inside door) 8. Adjustable feet 9.

@@ Pull out the detergent dispenser completely, until the limit. The dispenser has three chambers. 2. @@@@ 2. 3. 4. Stop the appliance and unplug it. Open the filter cover. Place a bowl beneath the filter. Slowly turn the filter anticlockwise without extracting it as yet.

5. Wait until all the water has drained. 6. Now unscrew the filter completely and extract it. 7.

Remove any foreign items from the foreign body trap. 8. @@@@ 9. Close the cover. 10.

@@@ 11. Connect the appliance to the electrical outlet. 12. Select a programme and start it. Check the filter two or three times a year and clean it if necessary.

@@@ • When should I drain residual water? • Before transporting (moving) the appliance. @@ In this case the appliance should be drained after every wash. @@ • Dry with a soft cloth. Door seal • Clean with a damp cloth when necessary. • Check the condition of the door seal periodically.

Filter • Check and clean the filter two or three times a year (see "Removing the Filter"). Detergent dispenser (depending on model) 1. Disengage the detergent dispenser by pressing the release lever in the prewash compartment and extract it. 2. Remove the siphon from the softener and bleach compartment. 3. Wash all the parts under running water. 4. Reposition the siphon and refit the detergent dispenser. 1.

Pull the detergent dispenser out fully. 2. Remove all the parts and wash them under running water and reposition them. 3. Wipe any residual detergent from the dispenser.

4. Carefully replace the detergent dispenser by inserting in the left guide and pushing it in. 1. Turn off the tap. 2.

Unscrew the hose from the tap. 3. Clean the internal strainer. 4. Screw the supply hose back onto the tap. 5. Unscrew the hose from the appliance. 6. Remove the filter from the appliance with pliers and clean it. 7.

Refit the filter and screw the hose connection to the appliance. 8. Turn on the tap and ensure that the connections are completely water-tight. Water hose mesh strainer Check and clean periodically. For appliances with a straight water supply hose TRANSPORT / HANDLING Never move the appliance by carrying it by the worktop. 1. Unplug the appliance. 2. Turn off the tap. 3.

Disconnect the inlet and drain hoses. 4. Eliminate all water from the hoses and from the appliance (see "Removing the Filter", "Draining residual water"). 5. Fit the transport bolts (obligatory) (see "Installation").

17 Black process 45.0° 150.0 LPI 30120020GB, fm Page 18 Friday, July 15, 2005 3:42 PM INSTALLATION Remove the transport bolts For washing machines: 1.



[You're reading an excerpt. Click here to read official WHIRLPOOL](http://yourpdfguides.com/dref/4918521)

[AWG 875/D user guide](http://yourpdfguides.com/dref/4918521)

<http://yourpdfguides.com/dref/4918521>

Slacken the three or four bolts (A) (according to model) with the spanner supplied.

2. Unscrew the bolts by hand. For washer dryers: 1. @@2. @@Hold the screws together with the plastic spacers and remove them. Keep the transport bolts for future use. 4. @@For washer dryers: 3. @@Keep the transport bolts for future use. 4 3 Refit the transport bolts Fit the transport bolts before transporting the appliance as follows: For washing machines: 1.

Pry off the plastic covers with a screwdriver and remove them. 2. Insert the transport bolts, performing the steps for removal in reverse order. For washer dryers: 1. Disconnect the plug, remove the inlet and drain hoses. 2. Unscrew fixing screws "B" on the rear panel and remove it. 3. Insert the four screws "A" of the safety catch in the four rubber bushes, then put the four spacers "C" on the screws behind the pre needs to be carried out by a qualified Whirlpool technician in compliance with the manufactures instructions and current standard safety regulations. For the Republic of Ireland only The information given in respect of Great Britain will frequently apply, but a third type of plug and socket is also used, the 2-pin, side earth type.

In this case, the wire which is coloured GREEN AND YELLOW must be connected to the EARTH contact, and the two wires to the two pins, irrespective of colour. The supply to the socket must be fitted with a 16 amp fuse. 20 Black process 45.0° 150.0 LPI .



[You're reading an excerpt. Click here to read official WHIRLPOOL
AWG 875/D user guide
http://yourpdfguides.com/dref/4918521](http://yourpdfguides.com/dref/4918521)