



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL AWM 5080/3. You'll find the answers to all your questions on the WHIRLPOOL AWM 5080/3 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual WHIRLPOOL AWM 5080/3**  
**User guide WHIRLPOOL AWM 5080/3**  
**Operating instructions WHIRLPOOL AWM 5080/3**  
**Instructions for use WHIRLPOOL AWM 5080/3**  
**Instruction manual WHIRLPOOL AWM 5080/3**

3gb10035.fm5 Page 62 Monday, June 24, 2002 7:10 PM

## CONTENTS

BEFORE USING THE WASHING MACHINE  
FIRST WASH CYCLE  
PRECAUTIONS AND GENERAL RECOMMENDATIONS  
DESCRIPTION OF THE WASHING MACHINE  
PREPARATION OF THE WASHING  
DETERGENTS AND ADDITIVES  
LIQUID BLEACH (HYPOCHLORITE)  
DYEING  
WASHING PROGRAMME  
REMOVING THE FILTER  
DRAINING RESIDUAL WATER  
CARE AND MAINTENANCE  
TROUBLESHOOTING GUIDE  
AFTER-SALES SERVICE  
TRANSPORT AND HANDLING  
INSTALLATION  
ELECTRICAL CONNECTION



[You're reading an excerpt. Click here to read official WHIRLPOOL AWM 5080/3 user guide](http://yourpdfguides.com/dref/4920405)  
<http://yourpdfguides.com/dref/4920405>

**Manual abstract:**

Contact After-Sales Service or your local retailer. @@@@The appliance must be earthed by law. The manufacturer declines all liability for damage to property or injury to persons or animals deriving either directly or indirectly from failure to observe the directions. • Do not use extension leads or multi sockets. • Before any maintenance on the washing machine disconnect it from the mains supply. • Access to the mains plug or to disconnection from mains supply via a double-pole switch must be ensured at all times following the installation. • Do not operate the washing machine if it has been damaged during transport. Inform the After-Sales Service. • Mains cable replacement is only to be carried out by After-Sales Service. • The washing machine must only be used in the household for the prescribed uses.

2. Remove the transit bolts • The appliance is fitted with transit bolts to prevent internal damage during transport. Before using the washing machine you must remove the transit bolts (see "Installation/ Remove the transit bolts"). 3. Install the washing machine • Move the machine without carrying it at the top. • Install the appliance on a solid and level floor surface, preferably in a corner of the room. • Adjust the feet to ensure that the machine is stable and level (see "Installation / Adjust the feet"). 4. Water supply • Connect the water supply inlet hose in accordance with regulations of your local water company (see "Installation/Connect the water inlet hose"). • Water supply: cold water only 3/4" threaded hose connection • Tap: • Pressure: 100-1000 kPa (1-10 bar). 5. Drain hose • Connect the drain hose to the siphon or hook it over the edge of a sink by means of the "U" bend (see "Installation/Connect the water drain hose"). • If the washing machine is connected to a built-in drainage system, ensure the latter is equipped with a vent to avoid simultaneous loading and draining of water (siphoning effect) Minimum housing dimensions: Width: Height: Depth: 600 mm 850 mm 600 mm 63 3gb10035.fm5 Page 64 Monday, June 24, 2002 7:10 PM FIRST WASH CYCLE We recommend the first wash cycle be made without laundry. This will remove any residual water used in testing your washing machine. 1. Turn on the tap. 2. Close the appliance door. 3.

Pour a small amount of detergent (about 30 ml) into the detergent dispenser 4. Select a short program (see programme chart). 5. Press the "On/Off" button. . PRECAUTIONS AND GENERAL RECOMMENDATIONS 1. Packing • The packing box may be fully recycled as confirmed by the recycling symbol. Adhere to local regulations when disposing of packaging material. 4. Child safety • Children must not be allowed to play with the washing machine.

2. Energy saving tips • Achieve the best use of energy, water, detergent and time by using the recommended maximum load size. • Do not exceed the detergent dosages indicated in the manufacturer's instructions. • The Eco Ball - a special system in the outlet - will prevent detergent loss from the drum to avoid detergent loss into the environment (depending on the model). • Use "Prewash" for heavily soiled laundry only! Save detergent, time, water and energy consumption by not selecting "Prewash" for slight to normally soiled laundry.

• Pretreat stains with stain remover or soak dried in stains in water before washing to reduce the necessity of a hot wash program. • Save energy by using a 60° C instead of a 90° C wash programme or a 40° C instead of a 60° C wash programme. • Save energy and time by selecting a high spin speed to reduce the water content in laundry before using a tumble dryer (for machines with adjustable spin speed). 5. General recommendations • When the appliance is not in use unplug it and turn off the tap.

• Before cleaning or carrying out maintenance, switch off the washing machine and disconnect it from the mains supply. • To clean the outside of the washing machine, use a neutral detergent and a damp cloth. • Do not use abrasive detergents. • Do not attempt to force the door open. • If necessary, the power cable may be replaced with an identical one obtained from our After-Sales Service. The power cable must only be replaced by a qualified technician. 6. EC Declaration of Conformity • This washing machine has been designed, constructed and distributed in compliance with the safety requirements of EC Directives: 73/23/EEC Low Voltage Directive 89/336/EEC EMC Directive 93/68/EEC CE Marking Directive 3. Disposing of packaging and old appliances • The washing machine is built from reusable materials. The washing machine must be disposed of in compliance with local waste disposal regulations.

• Before scrapping of your old machine, cut off the power cable so that it cannot be connected to the mains. • Remove detergent from compartment if you intend scrapping your appliance. 64 3gb10035.fm5 Page 65 Monday, June 24, 2002 7:10 PM DESCRIPTION OF THE WASHING MACHINE 1. 2. 3. 4. 5. 6. Worktop Control panel Detergent dispenser After-Sales Service sticker (on the back side of the door) Door Door handle • To open the door press the button on the inside of the handle and pull • Close the door by pushing it firmly (the lock will click into place) Filter (behind cover) Adjustable foot 7.

8. PREPARATION OF THE WASHING Sort the laundry 1. Sort the laundry according to... • Type of fabric / care label symbol Cottons, mixed fibres, easy care/synthetics, wool, handwashed items. • Colour Separate whites and coloureds. Wash new coloured items separately.

• Size Wash items of different sizes in the same load to improve washing efficiency and distribution in the drum. • Fabric delicacy Wash delicate articles separately: use a special programme for Pure New Wool , curtains and other delicates. Always remove curtain glides or wash curtains with the glides inside a cotton bag. Use the special program for handwash fabrics. Wash stockings, belts and other small items or articles with hooks (e.

g. bras) in special cotton bags for washing machines or in zipped pillow cases. 2. Empty pockets Coins, safety pins and similar items can damage of your appliance drum and tub. 3. Fasteners Close zips and fasten buttons or hooks; loose belts or ribbons should be tied together. Stain removal • Blood, milk, egg and other organic substances are generally removed by the enzyme phase of the programme. • To remove red wine, coffee, tea, grass and fruit stains etc. add a stain removing agent in detergent dispenser compartment or chlorine bleach in compartment (depending on model). • Particularly stubborn stains should be treated before the wash.

Loading the laundry 1. Open the door. 2. Unfold the laundry and place it loosely in the drum. Follow loads recommended in the programme chart: Overloading will result in unsatisfactory washing results and creased laundry.



[You're reading an excerpt. Click here to read official WHIRLPOOL](http://yourpdfguides.com/dref/4920405)

[AWM 5080/3 user guide](http://yourpdfguides.com/dref/4920405)

<http://yourpdfguides.com/dref/4920405>

3. Close the door. 65 3gb10035.fm5 Page 66 Monday, June 24, 2002 7:10 PM DETERGENTS AND ADDITIVES Choice of the right detergent and additives  
The type of detergent depends on: • type of fabric (cottons, easy care/synthetics, delicate items, wool). Note: use only specific detergents for wool.  
• colour; • washing temperature; • degree and type of soiling. Notes: Whitish residues on dark fabrics are caused by insoluble detergents components used in  
modern phosphate-free powder detergents. If you notice this problem, shake or brush the affected items or use a liquid detergent. Keep detergents and  
additives in a dry place and out of reach of children. Use only detergents and additives specifically produced for domestic washing machines.  
If you use descaling agents, dyes or bleaches, make sure they are suitable for washing machine use. Descaler could contain components that can attack parts  
of your washing machine. Do not use solvents (turpentine, benzine, etc.). Do not machine wash fabrics that have been treated with solvents or flammable  
liquids.

Dosage Follow the instructions on the detergent pack in relation to: • the degree and type of soiling; • the size of the load: • full load: follow the detergent  
manufacturer's instructions; • half load: 3/4 the amount used for a full load; • minimum load (about 1 kg): half the amount used for a full load; • water  
hardness in your area (ask for information from your water company): soft water requires less detergent than hard water. Notes: Too much detergent can  
result in excess foam formation, and the reduction of washing efficiency. If the appliance detects excessive foam it may prevent spinning. Insufficient detergent  
may result in: grey laundry, deposits on the drum, tub and heater. You can use liquid detergent in the "Prewash" phase for programmes with this option. In  
this case put only powder detergents in the compartment for the main wash. When using concentrated fabric softeners, add water in the detergent dispenser  
up to "MAX" level mark. To prevent dispensing problems when using highly concentrated powder and liquid detergents, use the special detergent ball or bag  
supplied with the detergent and place it inside the drum. Water hardness: soft water requires less detergent Water hardness area 1 2 3 4 Characteristics soft  
average hard very hard German scale °dH 0-7 7-14 14-21 over 21 French scale °fH 0-12 12-25 25-37 over 37 Clarke scale °eH 0-9 9-17 17-26 over 26 66  
3gb10035.fm5 Page 67 Monday, June 24, 2002 7:10 PM Filling the detergents and additives 1.

Pull out the detergent dispenser to its full extent. The dispenser will have three or four chambers depending on model. 2. @@The graduate scale on the insert  
makes dosing easier. @@@@Close the detergent dispenser completely. @@@@Add detergent in the main wash dispenser chamber  
. • Select a programme and temperature and start the machine. @@67 3gb10035r to programme setting "Drain". 3. @@@@2.

Open the filter cover with a coin. 3. Place a tray or container beneath the cover. 4. @@5.

Wait until all the water has drained off. 6. Now unscrew the filter completely and remove it. 7. Remove any foreign material from the filter.

8. Check that the pump rotor moves freely. 9. Insert the filter and screw it in clockwise firmly until it locks. 10. @@11. Close the cover. Check the filter two or  
three times a year and clean it if necessary. @@@@Switch off the appliance. 2.

Unplug the machine from the mains. 3. @@4. Place a container in suitable size beside the machine. @@5. Lower the drain hose into a container and let the  
water drain. Note: Make sure that the water has cooled before draining. 6. Wait until the flow stops. 7.

@@8. Replace the drain hose with the "U" bend and fix it. When should I drain residual water? • Before transporting (moving) the machine. @@It is best in  
this case to drain the machine after every wash. 70 3gb10035.

fm5 Page 71 Monday, June 24, 2002 7:10 PM CARE AND MAINTENANCE Appliance exterior and control panel • Clean using normal household cleaner (do  
not use abrasive products and no solvents). • Dry with a soft cloth. Door seal • Clean with a damp cloth when necessary. • Periodically check the fold of the  
seal for foreign objects. Filter • Check and clean the filter two or three times a year (see "Removing the filter").

Detergent dispenser 1. Disengage the detergent dispenser by pressing the release lever and laterly remove the drawer. 2. Remove the inserts softener  
compartment, and the siphon from the chlorine bleach compartment, (if available, four chambers model "A"). 3. Wash all the parts under running water. 4.  
Replace the parts and refit the detergent dispenser. Push the siphon firmly into place. A 71 3gb10035.

fm5 Page 72 Monday, June 24, 2002 7:10 PM Water hose mesh filter Check and clean periodically. For machines with a straight water supply hose "A" 1. 2.  
3. 4. 5. 6. 7. Turn off the tap. Unscrew the hose from the tap.

Clean the internal filter. Screw the supply hose back onto the tap. Unscrew the hose from the machine. Remove the filter from the washing machine with pliers  
and clean it. Replace the filter and screw the hose connection back on to the machine.

8. Turn on the tap and ensure that the connections are completely water-tight. For machines with Water Stop hose "B" 1. Turn off the tap. 2.

Unscrew the hose from the tap. 3. Clean the filter. 4. Screw the Water Stop hose back onto the tap. 5. Turn on the tap and ensure that the connection is  
completely water-tight. A B 72 3gb10035.fm5 Page 73 Monday, June 24, 2002 7:10 PM TROUBLESHOOTING GUIDE The appliance will not start, no lamp  
lights up. Check whether: • the appliance is plugged in; • the wall socket is functioning correctly (use a table lamp or similar); • "On/Off" button pressed; •  
the water tap is open.

If not, open the tap and switch the appliance first off, then on; • the appliance door is properly closed (child safety); • a programme has been selected and the  
programme is started. The appliance vibrates during the spin cycle. Check whether: • the appliance is levelled and solidly installed on all four feet (see  
"Installation Instructions"); • the transit bolts have been removed. The transit bolts must be removed before the appliance can be used (see "Installation  
Instructions"). Water Stop fault (depending on model) When the appliance detects a water leakage the pump runs continuously. Switch off the appliance,  
unplug it and make sure that the water tap is closed. The "Water Stop" may have been triggered by: 1. too much foam; 2. leakage in the inlet hose or in the  
appliance. Tilt the appliance forwards carefully to allow the collected water to flow out from the bottom of the appliance.

Then: 1. connect the appliance to the electrical outlet, 2. open the tap, 3. reselect the desired programme and press the "On/Off" button.



[You're reading an excerpt. Click here to read official WHIRLPOOL](http://yourpdfguides.com/dref/4920405)

[AWM 5080/3 user guide](http://yourpdfguides.com/dref/4920405)

<http://yourpdfguides.com/dref/4920405>

*Important: if the fault occurs again, call AfterSales Service with details about the fault (see "After-Sales Service").*

*The appliance stops during the programme. Check whether: • the "Rinse Hold" button is pushed, terminate this option by pressing the button again; • "On/Off" button has accidentally been pressed; press "On/Off" button again. No water or insufficient water supply. Check whether: • the tap is turned on completely; • kinks are present in water hose; • the water hose filter is blocked; • the water hose is frozen up. N.*

*B: Afterwards switch the appliance off, then on. Final spin results are poor: The appliance has an imbalance detection and correction system. If individual heavy articles are loaded (bathmat, bathrobe, etc.) this system may reduce the spin speed automatically to protect the appliance or even interrupt the spin cycle altogether, if the imbalance is too great even after several spin starts. • If the laundry is still too wet at the end of the cycle, add smaller articles of laundry to balance the load and repeat the spin cycle. • Excessive foam formation may prevent spinning. Ensure correct amount of detergent is used*

*Important: this machine is fitted with a safety system. The programme is interrupted after a few minutes if one of the following happens: • no water supply; • pump blocked. • If the pump is blocked, switch off the appliance and clean the pump (see "Removing the filter"). Then re-start the appliance.*

*Waste water not pumped out. Check whether: • the drain hose is correctly installed (see "Installation Instructions"); • the filter is blocked; • the drain hose is frozen up; • the "Rinse hold" button is pressed. Detergent and additive product residues in dispenser at end of wash. Check whether: • the siphon is correctly installed and clean (see "Care and Maintenance"); • enough water is being supplied. The mesh filters between the inlet hose and the tap could be clogged (see "Care and Maintenance"). Check and clean the filter two or three times a year (see "Removing the filter"). Also see "Detergent and Additives" for information. 73 3gb10035.fm5 Page 74 Monday, June 24, 2002 7:10 PM AFTER-SALES SERVICE Before contacting After-Sales Service: 1. Try to remedy the problem yourself (see "Troubleshooting guide").*

*2. Restart the programme to check whether the problem has solved itself. 3. If the machine continues to function incorrectly, call After-Sales Service. Specify:*

- The exact model of the appliance. • The service code (number after the word SERVICE). The After-Sales Service sticker is on the inside of the door. • Your full address. • Your telephone number and area code.*

*After-Sales Service phone numbers and addresses are given on the guarantee card. Alternatively, consult the dealer where you purchased the appliance.*

*TRANSPORT AND HANDLING Never move the appliance carrying by the worktop. 1. Unplug the appliance. 2. Turn off the tap. 3. Remove the water supply and drain hose. 4.*

*Eliminate all water from the hoses and from the appliance (see "Removing the filter", "Draining residual water"). 5. Fit the transit bolts (obligatory) (see "Installation"). 74 3gb10035.fm5 Page 75 Monday, June 24, 2002 7:10 PM INSTALLATION Remove the transit screws The appliance is fitted with two transit screws and a transit bar to prevent internal damage while it is being moved. Before using the appliance the transit screws and transit bar MUST be removed. The appliance is fitted with two screws and a transit bar. 1. Remove the black screw (A) with a screwdriver. 2.*

*Unscrew the screw (B) on the red transit bar with a screwdriver. 3. Completely withdraw and remove the transit bar (C) by pulling firmly on the red handle. Keep the screws and the bar for future use. @@@@ Secure the plywood sheet to the floor.*

*75 3gb10035.fm5 Page 76 Monday, June 24, 2002 7:10 PM Connect the water inlet hose For models with straight hose "A" 1. Insert the dirt strainer (already premounted on the hose end or included in the accessories) into the threaded tap coupling. 2. Carefully screw the hose connection onto the tap preferably by hand.*

*3. Make sure there are no kinks in the hose. 4. Check water-tightness of tap and appliance connections by turning the tap completely on. If the hose is too short, replace it with a suitable length of pressure resistant hose (1000 kPa min, EN 50084 approved type). Periodically check the hose for brittleness and cracks and replace if necessary. The appliance can be connected without an anti-backpressure valve. A For models with Water Stop hose "B" If the flexible hose is damaged, unplug the appliance from the mains immediately. 1. Screw the threaded connector with the filter inserted onto the tap.*

*2. Check water-tightness of tap and appliance connections by turning the tap completely on. If the hose is too short, replace it with a 3 m Water Stop hose (available from After-Sales Service or from your dealer). This operation must be carried out exclusively by a licensed electrician. The appliance must not be connected to the mixing tap of a nonpressurized water heater. The inlet hose and the plastic enclosure at the tap connection contain electrical components. Do not cut the hose and do not immerse the plastic enclosure in water. B Connect the water drain hose Drain hose • Drain hose connection to water outlet. 1. Unhook the drain hose from the left clip; see arrow (A).*

*Important: Do NOT loosen the drain hose connection; see arrow (B), otherwise there is the risk of leakage (danger of scalding with hot water) and the normal filling and draining functions of the machine cannot be guaranteed. 2. Fit the drain hose either to the siphon or hook it over the edge of a sink or bath tub with the "U" bend. Small hand basins are not suitable. 3.*

*Minimum drain height: 60 cm. Maximum U-bend drain height: 90 cm. 4. If you need to add an extension, use a flexible hose of the same type and secure the union with screw-on hose clips. Maximum overall drain hose length 2.*

*5 m. Important: • Make sure that there are no kinks in the drain hose run. • Take precautions against it falling while the appliance is running. 76 3gb10035.fm5 Page 77 Monday, June 24, 2002 7:10 PM ELECTRICAL CONNECTION 1) For Great Britain only Warning - this appliance must be earthed Fuse replacement If the mains lead of this appliance is fitted with a BS 1363A 13amp fused plug, to change a fuse in this type of plug use an A.S.T.A. approved fuse to BS 1362 type and proceed as follows: 1. Remove the fuse cover (A) and fuse (B).*

*2. Fit replacement 13A fuse into fuse cover. 3. Refit both into plug. Important: The fuse cover must be refitted when changing a fuse and if the fuse cover is lost the plug must not be used until a correct replacement is fitted.*



[You're reading an excerpt. Click here to read official WHIRLPOOL AWM 5080/3 user guide](http://yourpdfguides.com/dref/4920405)  
<http://yourpdfguides.com/dref/4920405>

Correct replacement are identified by the colour insert or the colour embossed in words on the base of the plug. Replacement fuse covers are available from your local electrical store. 2) For the Republic of Ireland only The information given in respect of Great Britain will frequently apply, but a third type of plug and socket is also used, the 2-pin, side earth type. 3) Socket outlet / plug (valid for both countries) If the fitted plug is not suitable for your socket outlet, please contact Whirlpool Service for further instruction. Please do not attempt to change plug yourself. This procedure needs to be carried out by a qualified Whirlpool technician in compliance with the manufactures instructions and current standard safety regulations. 77 3gb10035.fm5 Page 78 Monday, June 24, 2002 7:10 PM NOTES 78 .



[You're reading an excerpt. Click here to read official WHIRLPOOL](#)

[AWM 5080/3 user guide](#)

<http://yourpdfguides.com/dref/4920405>