



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL AWM 5110. You'll find the answers to all your questions on the WHIRLPOOL AWM 5110 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.


**User manual WHIRLPOOL AWM 5110**  
**User guide WHIRLPOOL AWM 5110**  
**Operating instructions WHIRLPOOL AWM 5110**  
**Instructions for use WHIRLPOOL AWM 5110**  
**Instruction manual WHIRLPOOL AWM 5110**

3gb05218.fm5 Page 1 Monday, December 9, 2002 6:24 PM



**GB AWM 5110**

A "On/Off" Button  
B "On/Off" Indication

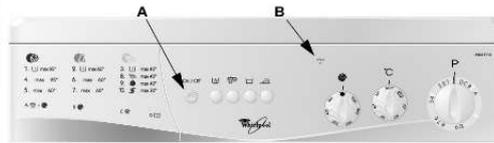

During the selected washing programme the programme select or knob moves by steps clockwise through the phases *prewash*, *main wash*, *rinse* and *spin*. Each step takes from some seconds to several minutes.

⊛ optional / Yes: dosing required  
<sup>1)</sup> For improved garment care spin speed is restricted to 900 rpm in this programme.

Programme	Care Labels	Type of wash/ Notes	Max Load Kg	Detergents and additives			Special options				Spin Speed Select or Knob Max rpm	Temperature Select or °C	Programme Selector
				Softener	Main Wash	Pre-wash	Half Load	Intensive Rinse	Rinse Hold	Bay Ironing			
Opt on with prewash	⊛	Heavily soiled, long wearing and temperature stable textiles in cotton and linen (bed linen, table linen, underwear, shirts etc.)	5.0	⊛	Yes	Yes	⊛	⊛	⊛	⊛	1000	Max. 95°	1
Synthetics with prewash	⊛	Heavily soiled blouses, shirts, overalls etc. made of polyester (Dolon, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2.5	⊛	Yes	Yes	⊛	⊛	⊛	⊛	900 <sup>1)</sup>	Max. 60°	2
Delicates with prewash	⊛	Heavily soiled curtains and delicate clothing, dresses skirts, shirts and blouses.	1.5	⊛	Yes	Yes	—	—	⊛	—	900 <sup>1)</sup>	Max. 40°	3
Opt on	⊛	Slightly to normally soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	5.0	⊛	Yes	—	⊛	⊛	⊛	⊛	1000	Max. 95°	4
Opt on short	⊛	Slightly soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	5.0	⊛	Yes	—	⊛	⊛	⊛	⊛	1000	Max. 60°	5
Synthetics	⊛	Slightly to normally soiled blouses, shirts, overalls etc. made of polyester (Dolon, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2.5	⊛	Yes	—	⊛	⊛	⊛	⊛	900 <sup>1)</sup>	Max. 60°	6
Synthetics short	⊛	Slightly soiled overalls and sports wear made of cotton, polyester, polyamide and blends with cotton.	2.5	⊛	Yes	—	⊛	⊛	⊛	⊛	900 <sup>1)</sup>	Max. 60°	7
Delicates	⊛	Curtains and delicate clothing, dresses skirts, shirts and blouses.	1.5	⊛	Yes	—	—	—	⊛	—	900 <sup>1)</sup>	Max. 40°	8
Wool	⊛	City woollens with a felt-free finish, labelled with the woolmark and identified as machine washable. <i>If you select "Rinse Hold" do not leave items to soak for too long.</i>	1.0	⊛	Yes	—	—	—	⊛	—	900 <sup>1)</sup>	Max. 40°	9
Silk	⊛	Textiles made of linen, silk, wool and viscose marked as "handwashable". <i>If you select "Rinse Hold" do not leave items to soak for too long. No spinning.</i>	1.0	⊛	Yes	—	—	—	⊛	—	—	Max. 30°	10
Rinse + spin	—	<i>With this programme you can add starch and/or fabric softener. The programme ends with an intensive spin cycle.</i>	5.0	⊛	—	—	⊛	⊛	⊛	—	1000	—	A
Spin	—	<i>In this programme spinning is intensive. Same as the spin cycle in the "Opt on" programme.</i>	5.0	—	—	—	—	—	—	—	1000	—	B
Gentle spin	—	<i>In this programme spinning is gentle. Same as the spin cycle in the "Wool" programme.</i>	1.5	—	—	—	—	—	—	—	900 <sup>1)</sup>	—	C
Drain	—	<i>Drain only - no spinning. Alternative method of terminating programme the synthetic, delicate and wool programme and for premature removal of the laundry.</i>	—	—	—	—	—	—	—	—	—	—	D

Whirlpool is a registered trademark of Whirlpool USA.  
 ☎ 5019 301 05218

Black Process Plate



[You're reading an excerpt. Click here to read official WHIRLPOOL AWM 5110 user guide](http://yourpdfguides.com/dref/4920370)  
<http://yourpdfguides.com/dref/4920370>

**Manual abstract:**

A. "On/Off" Button B. @@@@Heavily soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton. Heavily soiled curtains and delicate clothing, dresses skirts, shirts and blouses. Slightly to normally soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. Slightly soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. Slightly to normally soiled blouses, shirts, overalls etc.

made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton. Slightly soiled overalls and sports wear made of cotton, polyester, polyamide and blends with cotton. Curtains and delicate clothing, dresses skirts, shirts and blouses. Only woollens with a felt-free finish, labelled with the woolmark and identified as machine washable. @@Textiles made of linen, silk, wool and viscose marked as "handwashable".

@@No spinning. With this programme you can add starch and/or fabric softener. The programme ends with an intensive spin cycle. In this programme spinning is intensive. Same as the spin cycle in the "Cotton" programme.

In this programme spinning is gentle. Same as the spin cycle in the "Wool" programme. Drain only - no spinning. @@95° Max. 60° Max. 40° Max. @@60° Max. 60° Max. 60° Max. 40° Max.

40° Max. @@@@2. Select the new programme. 3. Start the programme by pressing the "ON/OFF" button. PROGRAMME END 1. @@2. To unload the machine wait for the door to unlock (about 1 minute). 3. Switch off the appliance, open the door and take out the laundry.

4. @@@@bathrobes, bathmat). @@@@Don't be surprised - modern technology has a modern sound. @@@@1. Open the tap.

2. Set the programme selector to the desired programme. 3. Set the temperature selector to the desired temperature. 4.

Set the spin selector to the desired speed. 5. Special options can be selected. 6. Check that the door is well closed and turn on the washing machine by pressing the "ON/OFF" button. The indicator lights up, indicating that the washing machine is on. SELECT ANY DESIRED OPTION "Half Load" button • Reduces water consumption, above all during rinsing. • Suitable for lightly-soiled laundry and small loads (max 3 kg). Note: Reduce the detergent quantity. "Intensive Rinse" button • More water and a longer time in rinse cycle is added.

• This option is particularly suitable for areas with very soft water, washing baby linen and helps people with allergies. "Rinse Hold" button • The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing. • This option is particularly recommended for the programme "Synthetics" or "Delicates". @@@@.



[You're reading an excerpt. Click here to read official WHIRLPOOL](#)

[AWM 5110 user guide](#)

<http://yourpdfguides.com/dref/4920370>