



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL AWM 8050. You'll find the answers to all your questions on the WHIRLPOOL AWM 8050 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual WHIRLPOOL AWM 8050
User guide WHIRLPOOL AWM 8050
Operating instructions WHIRLPOOL AWM 8050
Instructions for use WHIRLPOOL AWM 8050
Instruction manual WHIRLPOOL AWM 8050

GB AWM 8050

- A. "Door Locked" indication
- B. "Water Stop" indication
- C. "Water Tap Closed" indication
- D. Temperature Selection buttons
- E. Programme Selector Knob
- F. "Start Delay" button
- G. "Reset" button
- H. "Child Lock" button
- I. "Spin Speed Reduction" button
- J. Programme sequence indicator
- K. "Start/Pause" button

PROGRAMME CHART

Selected any option the indication lights up. When the combination of programme, additional options and temperature is not possible, the indication light's switch off automatically and a signal sounds.

*: optional / yes dosing required.

Programme	Care labels	Type of wash/Notes	Max. Load kg	Detergents and additives					Special Options					Max. Spin Speed rpm	Temperature °C
				Softener	Bleach	Main Wash	Prewash	Start Delay retard	Easy Ironing Antifreeze	Prewash Pre-Soakage	Intensive Rinse Rinse plus	Rinse Hold Arrêt Que Rinse	Speed reduction		
White Cotton Cotton		Slightly to normally soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. <i>With heavily soiled laundry the additional "Prewash" option can be selected as well.</i>	8.0	*	*	Yes	*	*	*	*	*	*	*	1400	20 to 95
Coloured cotton Colours		Slightly to normally soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	8.0	*	*	Yes	*	*	*	*	*	*	*	1400	20 to 60
Easy Care Synthetics Synthétique		Slightly to normally soiled blouses, shirts etc. made of polyester (Diolefin, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	3.5	*	*	Yes	*	*	*	*	*	*	*	1000 ¹⁾	20 to 60
Daily Load 40* Magic 40*		Programme for slightly to normally soiled fabrics made of cotton and/or synthetic fibres.	3.5	*	*	Yes	*	*	*	—	*	*	*	1400	20 to 60
Chrono Chrono		Slightly soiled overalls and sports wear made of cotton, polyester, polyamide and blends with cotton.	3.5	*	—	Yes	—	*	*	—	*	*	*	1400	20 to 30
Delicates Douce		Curtains and delicate dresses, skirts, shirts and blouses.	2.5	*	*	Yes	*	*	*	*	*	*	*	1000 ¹⁾	20 to 40
Wool Laine		Only wools with a self-care finish, labelled with the woolmark and identified as machine washable. <i>If you select "Rinse Hold" do not leave items to soak for too long.</i>	2.0	*	—	Yes	—	*	*	—	—	*	*	1000 ¹⁾	20 to 40
Handwash Lavage Main		Textiles made of silk, linen, wool and viscose marked as "handwashable". <i>If you select "Rinse Hold" do not leave items to soak for too long. A very gentle spin is used in this programme.</i>	2.0	*	—	Yes	—	*	*	—	—	*	*	400 ²⁾	20 to 40
Rinse + Spin Rinçage & Essorage	—	Same as the last rinse and the final spin in the "Coloured Cotton" programme.	8.0	*	—	—	—	*	*	—	*	*	*	1400	—
Intensive spin Essorage	—	In this programme spinning is intensive. Same as the spin cycle in the "Coloured Cotton" programme.	8.0	—	—	—	—	*	—	—	—	—	*	1400	—
Gentle spin Essorage doux	—	In this programme spinning is gentle. Same as the spin cycle in the "Wool" programme.	3.5	—	—	—	—	*	—	—	—	—	*	1000 ¹⁾	—
Drain Mlange	—	Drain only - no spinning. Alternative method of terminating programme after "Rinse Hold".	8.0	—	—	—	—	*	—	—	—	—	—	—	—

¹⁾ For improved garment care spin speed is restricted to 1000 rpm in this programme.
²⁾ For improved garment care spin speed is restricted to 400 rpm in this programme.

Whirlpool is a registered trademark of Whirlpool USA
5019 301 15108



[You're reading an excerpt. Click here to read official WHIRLPOOL AWM 8050 user guide](http://yourpdfguides.com/dref/4923533)
<http://yourpdfguides.com/dref/4923533>

The recommended temperature (see the indicator) can be altered by pressing the “+” or “-” button. SELECT ANY DESIRED OPTION Selecting any option the indication lights up.

When the combination of programme, additional options and temperature is not possible, the indication lights switch off automatically and a signal sounds.
“Easy Ironing” button • Can be used together with all programmes to reduce creasing. • Increases the water quantity and the clothes are spun very gently.
“Prewash” button • Only for heavily soiled laundry (e.g. sand, granular dirt). The cycle time increases approx. 15 minutes. “Intensive Rinse” button • More water and a longer time in rinse cycle is added. • This option is particularly suitable for areas with very soft water, for baby clothes and to help people with allergies.

@@@@@@@@Terminate the “Rinse Hold” option: • Press the “Rinse Hold” button again; the programme will terminate automatically with the final spin cycle for the present wash programme. • If you do not wish to spin the clothes, turn the programme selector knob to the “Drain” programme and press the “Start/Pause” button again when flashing. “Spin Speed Reduction” button • Every programme has an automatic predefined maximum spin speed. • Press the button to set another spin speed. • If the spin speed “0” is selected, the final spinning is cancelled but intermediate spin peaks remain during rinse.

The water is drained out only. Whirlpool is a registered trademark of Whirlpool USA 5019 301 15108 Black process 45.0° 100.0 LPI .



[You're reading an excerpt. Click here to read official WHIRLPOOL](#)

[AWM 8050 user guide](#)

<http://yourpdfguides.com/dref/4923533>