




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL AWO/C 61010. You'll find the answers to all your questions on the WHIRLPOOL AWO/C 61010 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual WHIRLPOOL AWO/C 61010**  
**User guide WHIRLPOOL AWO/C 61010**  
**Operating instructions WHIRLPOOL AWO/C 61010**  
**Instructions for use WHIRLPOOL AWO/C 61010**  
**Instruction manual WHIRLPOOL AWO/C 61010**

GB

- A. "Door open" indication**  
This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately, e.g.:
- B. "Service" indication**
- C. "Water tap closed" indication**
- D. "Clean pump" indication**

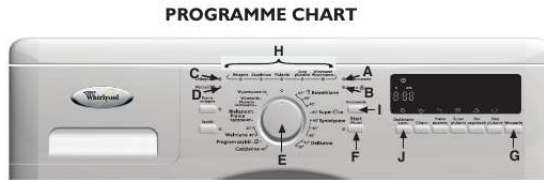

- E. Programme selector**
- F. "Start/Pause" button**
- G. Spin speed selector**
- H. Programme sequence indicator**
- I. "Reset" button**
- J. "Start delay" button**

Acoustic noise level:  
 Washing - 1400 rpm 77 dB(A) / 1 pW  
 Spinning - 1200 rpm 75 dB(A) / 1 pW  
 - 1000 rpm 74 dB(A) / 1 pW

Programme	Care Labels	Max. Load kg	Type of wash / Notes <i>- respect the manufacturer's recommendations on the care label</i>	Detergents and Additives			Special options							Max Spin Speed rpm		
				Pre-wash	Main Wash	Softener	Pre-wash	Rapid	Start delay	Clean+	Cold wash	Intensive rinse	Easy ironing		Rinse hold	Spin
Cotton/ Antibacterial 95 °C	Bawełniane 85 °C	6.0	Normally to heavily soiled and robust white cotton laundry. In case of heavy soiling or stains, you can add an oxygen-based bleach additive which can be used at 95°C. This programme eliminates bacteria, ensuring sanitization of your laundry.	*	Yes	*	*	-	*	*	-	*	*	*	*	Max.
Cotton 40 - 60 °C	Bawełniane 40 - 60 °C	6.0	Normally to heavily soiled bed linen, table linen and underwear; towels, shirts etc. made of cotton and linen.	*	Yes	*	*	*	*	*	*	*	*	*	*	Max.
SuperEco 60 °C	Super Eco 60 °C	6.0	Heavily soiled and robust laundry made of cotton, synthetics and their blends. Economical energy consumption by prolonged wash duration - ideal to be run overnight to profit from more favourable energy rates. Avoid noise of spinning at night by setting the spin speed to "0" and start spin programme in the morning, or by defying programme start with "Start delay" accordingly. For garments with a high share of synthetic fibres, we recommend to use a laundry net.	-	Yes	*	-	-	*	-	*	-	*	*	Max.	
Synthetics 30 - 40 - 60 °C	Syntetyczne 30 - 40 - 60 °C	3.0	Normally soiled garments made of artificial fibres (like polyester, polyacryl, viscose etc.) or their blends with cotton.	*	Yes	*	*	*	*	-	*	*	*	*	Max.	
Delicates 30 - 40 °C	Delikatne 30 - 40 °C	1.5	Curtaains and delicate clothing, dresses, skirts, shirts and blouses.	*	Yes	*	*	-	*	-	-	-	*	*	1000 <sup>1)</sup>	
Daily load 40 °C	Codziennie 40 °C	3.0	Slightly to normally soiled robust laundry made of cotton, linen, artificial fibres and their blends. Effective one-hour programme. Make sure to wash only similar colours together in one wash load.	-	Yes	*	-	-	*	-	*	*	*	*	Max.	
Quick wash 30 °C	Program szybki 30 °C	3.0	Shortly worn clothing made of cotton, polyester, polyamide and blends with cotton. Brief programme to refresh your laundry.	-	Yes	*	-	-	*	-	-	-	*	*	Max.	
Wool 20 - 40 °C	Wełniane 20 - 40 °C	1.0	Only woollens, labelled with the Woolmark and identified as machine washable. This programme (40°C) is tested and approved by The Woolmark Company for machine washable wool.	-	Yes	*	-	-	*	-	-	-	*	*	1000 <sup>1)</sup>	
Handwash 40 °C	Pranie ręczne 40 °C	1.0	Textiles made of silk, linen, wool and viscose marked as "handwashable". This programme (40°C) is tested and approved by The Woolmark Company for handwashable wool.	-	Yes	*	-	-	*	-	-	-	*	*	400 <sup>1)</sup>	
Lingerie 30 °C	Bielizna 30 °C	1.0	This programme is particularly suitable to treat delicate lingerie (use of laundry net strongly recommended).	-	Yes	*	-	-	*	-	-	-	*	*	400 <sup>1)</sup>	
Rinse & Spin	Płukanie i wirowanie	6.0	Same as the last rinse and the final spin in the "Cotton" programme.	-	-	*	-	-	*	-	*	-	*	*	Max.	
Spin	Wirowanie	6.0	Intensive spin. Same as the spin cycle in the "Cotton" programme.	-	-	*	-	-	*	-	-	-	*	*	Max.	
Drain	Wypompowanie	-	Drain only - no spinning. Alternative method of terminating programme after "Rinse hold".	-	-	-	-	-	*	-	-	-	-	-	-	

<sup>\*)</sup> option / Yes - dosing required  
<sup>1)</sup> For improved garment care spin speed is restricted in these programmes.

The wool and handwash cycles of this machine have been tested and approved by The Woolmark Company for the washing of Woolmark garments labelled as "machine wash" or "hand wash" provided that the garments are washed according to the instructions on the garment label and those issued in this programme chart. M0619

Whirlpool is a registered trademark of Whirlpool USA.  
 5019 301 01215



[You're reading an excerpt. Click here to read official WHIRLPOOL AWO/C 61010 user guide](http://yourpdfguides.com/dref/4839771)  
<http://yourpdfguides.com/dref/4839771>

**Manual abstract:**

"Door open" indication This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately, e.g.: B. "Service" indication C. "Water tap closed" indication D. "Clean pump" indication Care Labels Max. Load kg Cotton/ Antibacterial 95 °C Cotton 40 - 60 °C SuperEco 60 °C Synthetics 30 - 40 - 60 °C Delicates 30 - 40 °C Daily load 40 °C Quick wash 30 °C Wool 20 - 40 °C Handwash 40 °C Lingerie 30 °C Rinse & Spin Spin Drain Bawelniane 95 °C Bawelniane 40 - 60 °C PROGRAMME CHART H C D A B I E F J G E. Programme selector F.

"Start/Pause" button G. Spin speed selector H.

Programme sequence indicator I. "Reset" button J. "Start delay" button Acoustic noise level : Washing - Spinning - 1400 rpm - 1200 rpm - 1000 rpm 59 dB(A) / 1 pW 77 dB(A) / 1 pW 75 dB(A) / 1 pW 74 dB(A) / 1 pW Detergents and Additives Special options Prewash Rapid Start delay Opóźnienie uruchomienia Programme Type of wash / Notes - respect the manufacturer's recommendations on the care label Normally to heavily soiled and robust white cotton laundry. In case of heavy soiling or stains, you can add an oxygenbased bleach additive which can be used at 95°C. This programme eliminates bacteria, ensuring sanitization of your laundry.

Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. @@@@Avoid noise of spinning at night by setting the spin speed to "0" and start spin programme in the morning, or by defining programme start with "Start delay" accordingly. - For garments with a high share of synthetic fibres, we recommend to use a laundry net. Normally soiled garments made of artificial fibres (like polyester, polyacryl, viscose etc.) or their blends with cotton. Curtains and delicate clothing, dresses, skirts, shirts and blouses. @@Effective one-hour programme. Make sure to wash only similar colours together in one wash load. @@Brief programme to refresh your laundry. @@This programme (40°C) is tested and approved by The Woolmark Company for machine washable wool. Textiles made of silk, linen, wool and viscose marked as "handwashable". This programme (40°C) is tested and approved by The Woolmark Company for handwashable wool. This programme is particularly suitable to treat delicate lingerie (use of laundry net strongly recommended). Same as the last rinse and the final spin in the "Cotton" programme.

Intensive spin. Same as the spin cycle in the "Cotton" programme. Drain only - no spinning. @@@@1000 1) Max. Max. 1000 1) 400 1) 400 1) Max. Max. @@@@ The programme duration may differ from the values indicated above as it depends on the operation conditions applicable at that time (see also "Troubleshooting Guide" in your Instructions for Use). \* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out. \*\* Reference programmes for Energy Label.

\*\*\* Automatic adaptation of programme duration after detection of wash load "Easy ironing" button • Can be used together with "Cotton", "Synthetics" and "Daily load" programmes to make ironing easier. • Increases the water quantity and the clothes are spun very gently. "Rinse hold" button • The laundry remains in the last rinse water without pregressing to the final spin cycle to avoid creasing and prevent colours from changing. • It is particularly useful if you want to postpone spinning to a later time, or if you want to drain only. Note: The programme stops to "Rinse hold" at the time the "Rinse hold" lights in the programme sequence indication is on.

@@@@@ • Press the button to set different spin speed. @@The water is drained out only. @@@@ • Select programme, temperature and options. @ • Press the "Start/Pause" button. @@The countdown of the delay time begins.

@@@@@The indication lamp next to the "Start/Pause" button lights up. The programme sequence indicator shows the current programme phase, running from left to right through Wash, Rinse, Spin/Drain. "DOOR OPEN" INDICATION Before starting and after end of a programme, the lamp lights to show the the door can be opened. As long as a wash programme is running, the door remains locked and must on no account be forced open. @@@@@@ "Clean pump" Waste water is not pumped out. @@@@1. Turn the programme selector to the "Off/O" position. 2. Close the water tap. 3.

Open the door and unload the machine. 4. Leave the door ajar to allow the drum to dry. CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START 1. Press the "Start/Pause" button to pause the programme. The light blinks. 2. Select the new programme (with temperature), any options and another spin speed if you want. 3. Press the "Start/Pause" button again.

The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme. CANCEL (RESET) A RUNNING PROGRAMME BEFORE THE END The "Reset" button cancels a programme before the end. • Press and hold the "Reset" button for a few seconds. Any existing water is drained out.

It may last some time until the door can be opened. ADD DETERGENTS, CLOSE THE DOOR AND SELECT THE PROGRAMME Add detergents as indicated on the front page and as described in the chapter "Detergent and Additives" in your Instructions for Use. @@@@@@Unsuitable combinations of options are deselected automatically. "Prewash" button • Only for heavily soiled loads (for example sand, granular dirt). Increases the cycle time by approximately 15 min.

• Do not use liquid detergent for the main wash when activating the "Prewash" option. "Rapid" button • Enables quicker washing by shortening the programme duration. • Recommendable for small loads or only lightly soiled laundry. "Clean+" button • Choose this opt.



[You're reading an excerpt. Click here to read official WHIRLPOOL](http://yourpdfguides.com/dref/4839771)

[AWO/C 61010 user guide](http://yourpdfguides.com/dref/4839771)

<http://yourpdfguides.com/dref/4839771>