



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL AWO/C 6314. You'll find the answers to all your questions on the WHIRLPOOL AWO/C 6314 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual WHIRLPOOL AWO/C 6314
User guide WHIRLPOOL AWO/C 6314
Operating instructions WHIRLPOOL AWO/C 6314
Instructions for use WHIRLPOOL AWO/C 6314
Instruction manual WHIRLPOOL AWO/C 6314

GB

- A. "Door open" indication
- This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately, e.g.:
- B. "Service" indication
- C. "Water tap closed" indication
- D. "Clean pump" indication

PROGRAMME CHART



- E. Programme selector
 - F. "Start/Pause" button
 - G. "Cycle end" button
 - H. "Spin" button
 - I. Eco monitor
 - J. "Reset" button
- Acoustic noise level:
- | | | |
|----------|---|-----------------|
| Washing | - | 59 dB(A) / 1 pW |
| Spinning | - | 77 dB(A) / 1 pW |
| | - | 1200 rpm |
| | - | 75 dB(A) / 1 pW |
| | - | 1000 rpm |
| | - | 74 dB(A) / 1 pW |

Programme	Temperature	Care Labels	Max. Load kg	Type of wash / Notes <small>- respect the manufacturer's recommendations on the care label</small>	Detergents and Additives			Special options							Cycle end	Max Spin Speed rpm	
					Pre-wash	Main Wash	Softener	Pre-wash	Rapid	Clean+ [®]	Colours 15'	Intensiv rise	Easy ironing	Rinse hold			Spin
Mixed	40°C		4.0	Lightly to normally soiled robust laundry made of cotton, linen, artificial fibres and their blends. Effective one-hour programme. Make sure to wash only similar colours together in one wash load.	-	Yes	*	-	-	-	*	*	*	*	*	*	Max.
Fabrics	Cotton		6.0	Normally to heavily soiled towels, underwear, table and bed linen etc. made of cotton and linen.	*	Yes	*	*	*	*	*	*	*	*	*	*	Max.
	Synthetics		3.0	Normally soiled blouses, shirts, overalls, etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	*	Yes	*	*	*	*	*	*	*	*	*	*	Max.
	Delicates		1.5	Curtains and delicate clothing, dresses, skirts, shirts and blouses.	*	Yes	*	*	-	-	*	-	-	*	*	*	1000 ¹⁾
Colours	Wool/ Handwash		1.0	Woolens, labelled with the Woolmark and identified as machine washable, as well as textiles made of silk (keep to care label), linen, wool and viscose marked as handwashable. This programme is tested and approved by The Woolmark Company for machine- and handwashable wool.	-	Yes	*	-	-	-	*	-	-	*	*	*	1000 ¹⁾
	White		6.0	Normally to heavily soiled and robust white cotton laundry. Save energy by selecting a lower wash temperature and adding an oxygen-based bleach product, in addition to your detergent.	-	Yes	*	-	-	*	*	*	*	*	*	*	Max.
	Light colours		4.0	White and pastel shaded garments made of delicate fabrics. Gentle wash programme to avoid graying or yellowing of your laundry. Use heavy duty detergent, if necessary also stain removers or bleaches on oxygen basis. Do not use liquid detergent.	*	Yes	*	*	-	*	*	-	-	*	*	*	1000 ¹⁾
Dark		4.0	Black and dark garments made of cotton, cotton blends and polyester. Special programme to reduce colour fading and local discolouration. Prefer to use a special liquid detergent for dark garments with this programme.	*	Yes	*	*	*	-	*	*	-	*	*	*	1000 ¹⁾	
Eco	Cotton		6.0	Normally soiled cotton laundry. At 40°C and 60°C most favourable programme in terms of combined water and energy consumption for washing cotton laundry. - Reference programme for the Energy Label.	-	Yes	*	-	-	-	*	*	-	*	*	*	Max.
	Speed 15'		3.0	Briefly worn clothing made of cotton, artificial fibres and blends with cotton. Refresh programme. Use lowest recommended detergent amount.	-	Yes	*	-	-	-	*	-	-	*	*	*	Max.
	Rinse & Spin		6.0	Rinse and intensive spin programme. Same as the last rinse and the final spin in the "Cotton" programme.	-	-	*	-	-	-	*	-	-	*	*	*	Max.
	Spin		6.0	Intensive spin programme. Same as the spin cycle in the "Cotton" programme.	-	-	-	-	-	-	-	-	-	*	*	*	Max.
Drain		-	-	Drain only - no spinning. Alternative method of terminating programme after "Rinse hold".	-	-	-	-	-	-	-	-	-	-	-	*	-

¹⁾ option / Yes : dosing required
For improved garment care spin speed is restricted in these programmes.

The wool cycle of this machine has been issued and approved by The Woolmark Company for the washing of Woolmark garments labelled as "machine wash" or "hand wash" provided that the garments are washed according to the instructions on the garment label and those issued in this programme chart. M0512

Whirlpool is a registered trademark of Whirlpool USA.
5019 300 00007



[You're reading an excerpt. Click here to read official WHIRLPOOL AWO/C 6314 user guide](http://yourpdfguides.com/dref/4843333)
<http://yourpdfguides.com/dref/4843333>

Manual abstract:

“Door open” indication This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately, e.g.: B. “Service” indication C. “Water tap closed” indication D. “Clean pump” indication I C D A B J G H E. Programme selector F.

“Start/Pause” button G. “Cycle end” button H. “Spin” button I.

Eco monitor J. “Reset” button Acoustic noise level : Washing - Spinning - 1400 rpm - 1200 rpm - 1000 rpm 59 dB(A) / 1 pW 77 dB(A) / 1 pW 75 dB(A) / 1 pW 74 dB(A) / 1 pW E Max. Load kg F Programme Temperature Care Labels Detergents and Additives Type of wash / Notes - respect the manufacturer's recommendations on the care label Special options Prewash Rapid Clean+ Colours Intensiv Easy Rinse 15° rinse ironing hold Spin Prewash Main Wash Softener Cycle end Max Spin Speed rpm Mixed Cotton Synthetics Fabrics Delicates Wool/ Handwash White Light colours Dark 40°C 40-60-95°C 30-40°C 30°C cold-40°C 4.0 6.0 3.

0 1.5 1.0 Lightly to normally soiled robust laundry made of cotton, linen, artificial fibres and their blends. Effective one-hour programme. Make sure to wash only similar colours together in one wash load.

@@made of cotton and linen. Normally soiled blouses, shirts, overalls, etc. @@Curtains and delicate clothing, dresses, skirts, shirts and blouses.

@@@Normally to heavily soiled and robust white cotton laundry. @@White and pastel shaded garments made of delicate fabrics. Gentle wash programme to avoid graying or yellowing of your laundry. Use heavy duty detergent, if necessary also stain removers or bleaches on oxygen basis. Do not use liquid detergent. Black and dark garments made of cotton, cotton blends and polyester. Special programme to reduce colour fading and local discolouration.

Prefer to use a special liquid detergent for dark garments with this programme. Normally soiled cotton laundry. At 40°C and 60°C most favourable programme in terms of combined water and energy consumption for washing cotton laundry. - Reference programme for the Energy Label. Briefly worn clothing made of cotton, artificial fibres and blends with cotton. Refresh programme. Use lowest recommended detergent amount. Rinse and intensive spin programme. Same as the last rinse and the final spin in the “Cotton” programme. Intensive spin programme.

Same as the spin cycle in the “Cotton” programme. Drain only - no spinning. @@Max. Max. @@Max.

Max. @@@@• If you do not wish to spin the clothes, turn the programme selector knob to the “Drain” programme and press the “Start/Pause” button. “Spin” button • Every programme has a predefined spin speed. • Press the button to set different spin speed. • If spin speed “0” is selected, the final spinning is cancelled but intermediate spin peaks remain during rinse.

The water is drained out only. “DOOR OPEN” INDICATION Before starting and after end of a programme, the lamp lights to show the the door can be opened. As long as a wash programme is running, the door remains locked and must on no account be forced open. @@The indicator next to the “Start/Pause” button lights up. @@@@for small loads). @@During tumbling, the display will show an animation.

@@@@In the home, they may vary depending on the individual water supply pressure and temperature, the load and the type of wash. The consumption data indicated are based on an inlet water temperature of approx. 15°C through the cold fill valve as well as the hot fill valve (if available). If your washing machine has a hot fill valve, connection of this valve to hot water supply will lower the energy consumption by reduced heating times, depending on the individual hot fill inlet water temperature.

Water and energy consumptions refer to the default setting of the programmes, with temperature and load as indicated in the table; selecting any options or changing the spin speed will also change the consumption data. @@* Reference programmes for Energy Label. @@@@1. Turn the programme selector to the “Off/O” position. 2. Close the water tap. 3. Open the door and unload the machine. 4. @@@@Unsuitable combinations of options are deselected automatically.

“Prewash” button • Adds a prewash cycle to the wash programme selected; prolongs the programme by about a quarter of an hour. • Recommended for heavily soiled laundry (e.g. with sand or granular dirt). • Do not use liquid detergent for the main wash when activating the “Prewash” option.

“Rapid” button • Enables quicker washing by shortening the programme duration. • Recommendable for only lightly soiled laundry. • Not selectable for Cotton 70 - 95°C. @@@@Respect the manufacturer's dosing instructions. @@Chlorine or perborate bleaches must not be used! @@@@• Recommendable for lightly soiled laundry without stains.

• Make sure that your detergent is suitable for cold wash temperatures (15 or 20°C). • Not selectable for Cotton 70 - 95°C. “Intensive rinse” button • More water is added and rinse cycle is prolonged. • This option is particularly suitable for areas with very soft water.



[You're reading an excerpt. Click here to read official WHIRLPOOL](http://yourpdfguides.com/dref/4843333)

[AWO/C 6314 user guide](http://yourpdfguides.com/dref/4843333)

<http://yourpdfguides.com/dref/4843333>