



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL AWO/C 7210. You'll find the answers to all your questions on the WHIRLPOOL AWO/C 7210 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual WHIRLPOOL AWO/C 7210
User guide WHIRLPOOL AWO/C 7210
Operating instructions WHIRLPOOL AWO/C 7210
Instructions for use WHIRLPOOL AWO/C 7210
Instruction manual WHIRLPOOL AWO/C 7210

DEFINITION OF USE

This washing machine is exclusively destined to wash and spin machine washable laundry in quantities which are usual for private households.

- Observe the instructions given in these Instructions for Use, the Installation Guide and the Programme Chart when using the washing machine.

- Keep these Instructions for Use, the Programme Chart and the Installation Guide; if you pass on the washing machine to another person, also give him/her Instructions for Use, Programme Chart and Installation Guide.

BEFORE USING THE WASHING MACHINE

1. Removing the packaging and inspection

- After unpacking, make sure that the washing machine is undamaged. If in doubt, do not use the washing machine. Contact After-Sales Service or your local retailer.
- Keep the packaging materials (plastic bags, polystyrene parts, etc.) out of reach of children, as they are potentially dangerous.
- If the appliance was exposed to the cold prior to delivery, keep it at room temperature for a few hours before operating.

2. Remove the transport bolts

- The washing machine is fitted with transport bolts to avoid any possible damage to the interior during transport. Before using the machine, it is imperative that the transport bolts are removed.
- After their removal, cover the openings with the 4 enclosed plastic caps.

3. Install the washing machine

- Remove the protective film from the control panel (if available on your model).
- Move the appliance without lifting it by the worktop.
- Install the appliance on a solid and level floor surface, preferably in a corner of the room.
- Make sure that all four feet are stable and resting on the floor and then check that the washing machine is perfectly level (use a spirit level).
- In case of wooden or so-called "floating floors" (for instance certain parquet or laminate floors), place the appliance on a 60 x 60 cm sheet of plywood at least 3 cm in thickness which is secured to the floor.
- Make sure that the ventilation openings in the base of your washing machine (if available on your model) are not obstructed by a carpet or other material.

4. Water inlet

- Connect the water inlet hose(s) to the drinking water supply in accordance with the regulations of your local water company.
- For models with one inlet valve: cold water
- For models with two inlet valves: cold AND hot water, or cold water only (see separate Installation Guide).
- Water tap: 3/4" threaded hose connector

- Water pressure (flow pressure): 100-1000 kPa (1-10 bar).
- Use only new hoses to connect the washing machine to the water supply. Used hoses must not be used and should be discarded.
- For models with hot fill: the hot water inlet temperature must not exceed 60°C.

5. Drain

- Connect the drain hose to the siphon or hook it over the edge of a sink by means of the "U" bend supplied.
- If the washing machine is connected to an integrated drainage system, ensure the latter is equipped with a vent to avoid simultaneous loading and draining of water (siphoning effect).

6. Electrical connection

- Electrical connections must be carried out by a qualified technician in compliance with the manufacturer's instructions and current standard safety regulations.
- Data regarding voltage, power consumption and protection requirements is given on the inside of the door.
- The appliance must be connected to the mains by means of a socket with an earth connection in accordance with current regulations. The washing machine must be earthed by law. The manufacturer declines all liability for damage to property or injury to persons or animals due to non-compliance with the directions given above.
- Do not use extension leads or multiple sockets.
- Before any maintenance on the washing machine disconnect it from the mains supply.
- After installation, access to the mains plug or to disconnection from mains supply must be ensured at all times via a double-pole switch.
- Do not operate the washing machine if it has been damaged during transport. Inform the After-Sales Service.
- Mains cable replacement is only to be carried out by After-Sales Service.
- The appliance must only be used in the household for the prescribed uses.

Minimum housing dimensions:

Width: 600 mm
Height: 850 mm
Depth: 600 mm

GB |



[You're reading an excerpt. Click here to read official WHIRLPOOL AWO/C 7210 user guide](http://yourpdfguides.com/dref/4859092)
<http://yourpdfguides.com/dref/4859092>

Manual abstract:

Contact After-Sales Service or your local retailer. @@ • If the appliance was exposed to the cold prior to delivery, keep it at room temperature for a few hours before operating. • Water pressure (flow pressure): 100-1000 kPa (1-10 bar). • Use only new hoses to connect the washing machine to the water supply. Used hoses must not be used and should be discarded. • For models with hot fill: the hot water inlet temperature must not exceed 60°C. 5.Drain 2.Remove the transport bolts • The washing machine is fitted with transport bolts to avoid any possible damage to the interior during transport. Before using the machine, it is imperative that the transport bolts are removed.

• After their removal, cover the openings with the 4 enclosed plastic caps. • Connect the drain hose to the siphon or hook it over the edge of a sink by means of the “U” bend supplied. • If the washing machine is connected to an integrated drainage system, ensure the latter is equipped with a vent to avoid simultaneous loading and draining of water (siphoning effect). 6.Electrical connection 3.

Install the washing machine • Remove the protective film from the control panel (if available on your model). • Move the appliance without lifting it by the worktop. • Install the appliance on a solid and level floor surface, preferably in a corner of the room. • Make sure that all four feet are stable and resting on the floor and then check that the washing machine is perfectly level (use a spirit level). • In case of wooden or so-called “floating floors” (for instance certain parquet or laminate floors), place the appliance on a 60 x 60 cm sheet of plywood at least 3 cm in thickness which is secured to the floor.

• Make sure that the ventilation openings in the base of your washing machine (if available on your model) are not obstructed by a carpet or other material. 4. Water inlet • Connect the water inlet hose(s) to the drinking water supply in accordance with the regulations of your local water company. • For models with one inlet valve: cold water • For models with two inlet valves: cold AND hot water, or cold water only (see separate Installation Guide). • Water tap: 3/4” threaded hose connector • Electrical connections must be carried out by a qualified technician in compliance with the manufacturer’s instructions and current standard safety regulations. • Data regarding voltage, power consumption and protection requirements is given on the inside of the door. • The appliance must be connected to the mains by means of a socket with an earth connection in accordance with current regulations. The washing machine must be earthed by law. @@ • Do not use extension leads or multiple sockets. @@@@ Inform the After-Sales Service.

• Mains cable replacement is only to be carried out by After-Sales Service. • The appliance must only be used in the household for the prescribed uses. Minimum housing dimensions: Width: Height: Depth: 600 mm 850 mm 600 mm GB 1 PRECAUTIONS AND GENERAL RECOMMENDATIONS • The washing machine is appropriate for indoor use only. • Do not store flammable fluids near the appliance. • Children must be supervised to ensure that they do not play with the appliance. • This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. • Do not operate the washing machine at temperatures below 5°C. • If you want to place a dryer on top of your washing machine, first contact our After-Sales Service or your specialist dealer to verify if this is possible. This is only admitted if the dryer is fixed on the washing machine by using an appropriate stacking kit available through our After-Sales Service or your specialist dealer. • Do not leave the appliance plugged in when not in use. • Turn off the tap when not in use. • Before any cleaning and maintenance switch off the machine or disconnect it from the mains. • Never open the door forcibly or use it as a step. • If necessary, the power cable may be replaced with an identical one obtained from our AfterSales Service. The power cable must only be replaced by a qualified technician.

1. Safety instructions 4. Frost The symbol on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. Do not place the washing machine in a room prone to frost. If you must, make sure that the washing machine is completely drained after each wash: • Remove inlet hose(s) from water tap and let the water flow out completely. • Remove drain hose from siphon or handwash basin and let the water flow out completely. • Empty residual water inside the machine by following the instructions in the chapter “Draining Residual Water”; tilt the appliance forward with two persons to let the rest water flow out completely. 5.Saving tips 2.Packaging • The packaging material is entirely recyclable, and marked with the recycling symbol . Adhere to current local regulations when disposing of packaging material. 3.

Disposing of packaging and scrapping old washing machines • The washing machine is built from reusable materials. @@@@ • Save energy and time by selecting a high spin speed to reduce the water content in laundry before using a tumble dryer. 6.EC Declaration of Conformity • The appliance conforms to the following European Standards: 2006/95/EC Low Voltage Directive 2004/108/EC Electromagnetic Compatibility Directive GB 2 DESCRIPTION OF THE WASHING MACHINE Depending on the model: 1. 2. 3. 4. 5. 6. 7. Worktop Control panel Detergent dispenser Service plate (inside the door) Door Pump access with filter and emergency drain hose (if available) behind the plinth Adjustable feet DOOR To open the door, hold the door handle and pull the door. Close the door by pressing it without excessive force until it clicks shut. BEFORE THE FIRST WASH CYCLE To remove any residual water used in testing by the manufacturer, we recommend that you carry out a short wash cycle without laundry. 1. Open the tap. 2. Close the door. 3. Add a small amount of detergent (maximum 1/3 of the quantity the detergent manufacturer of the detergent dispenser. recommends for lightly soiled laundry) to the main wash chamber 4.



[You're reading an excerpt. Click here to read official WHIRLPOOL AWO/C 7210 user guide](http://yourpdfguides.com/dref/4859092)
<http://yourpdfguides.com/dref/4859092>

Select and start programme "Synthetics" at 60°C (see separate programme chart). GB 3 PREPARATION OF THE WASHING 1. Sort the laundry according to... • Type of fabric / care label symbol Cottons, mixed fibres, easy care/synthetics, wool, handwash items. • Colour Separate coloured and white items. Wash new coloured articles separately. • Size Wash items of different sizes in the same load to improve washing efficiency and distribution in the drum. • Delicates Wash small items (e.

g. nylon stockings, belts etc.) and items with hooks (e.g. bras) in a cloth bag or pillow case with zip. Always remove curtain rings or wash curtains with the rings inside a cotton bag. Stain removal • Blood, milk, eggs etc. are generally removed by the automatic enzyme phase of the programme. • To remove red wine, coffee, tea, grass and fruit stains etc. add a stain remover to the main wash chamber of the detergent dispenser. • Pre-treat heavily-soiled areas with stain remover if necessary. Dyeing and bleaching • Only use dyes and bleaches that are suitable for washing machines. • Follow the Manufacturer's instructions. • Plastic and rubber parts of the washing machine can be stained by dyes or bleaches. Loading the laundry 2. Empty all pockets 3. Fasteners Coins, safety pins etc. can damage your laundry as well as the appliance drum and tub. Close zips and fasten buttons or hooks; loose belts or ribbons should be tied together. 1.

Open the door. 2. Load the articles one at a time loosely into the drum, without overfilling. Observe the load sizes given in the programme chart. Note: overloading the machine will result in unsatisfactory washing results and creased laundry. 3. Close the door. DETERGENTS AND ADDITIVES Keep detergents and additives in a safe, dry place out of the reach of children! The choice of detergent depends on: • Do not use liquid detergent when activating the "Start Delay" function (if available on your model). Dosage • Type of fabric (cottons, easy care/synthetics, delicate items, wool). Please note: Use only specific detergents for washing wool and garments made of microfibrils (like sports or swimwear).

• Colour. • The wash temperature. • Degree and type of soiling. Remarks: • Any whitish residues on dark fabrics are caused by insoluble compounds used in phosphate-free powder detergents. If this occurs, shake or brush out the fabric or use liquid detergents. • Use only detergents and additives specifically produced for domestic washing machines. • When using descaling agents, dyes or bleaches for the prewash (if available on your model), make sure that they are suitable for use in domestic washing machines. Descalers could contain products which could damage your washing machine. • Do not use any solvents (e.g.

turpentine, benzine). • Proceed with 9. 5. • 6. • 7.

• 8. Lay an absorbable cotton cloth (e.g. a towel) on the floor in front of the filter. 9.

• 10. • 11. • 12. Reinsert the filter and screw it in clockwise as far as it will go. 13. • 14. • 15. Plug in the washing machine. It is now ready for operation again. • Dry with a soft cloth.

• Pull out the dispenser drawer until it stops. • "A" to release the drawer and pull it out completely. 2. • "B". 3. Wash all the parts under running water. 4. Clean the dispenser compartment with a damp cloth. 5. • If your supply hose has a transparent hose coating (fig.

• 1. Close the tap and loosen the inlet hose on the tap. 2. • 3. Now unscrew the inlet hose on the rear of the washing machine.

4. • 5. Refit the mesh filter and screw the inlet hose on. Whitish residues on dark fabrics are caused by insoluble compounds used in laundry after wash phosphate-free powder detergents. • The "Start/Pause" light blinks. • Kinks are present in the water inlet hose.

• "Water tap closed" • The water hose is frozen up. • Waste water is not pumped out. The appliance stops in the corresponding programme step; unplug it and check whether: • Kinks are present in the drain hose, or the hose is blocked for another reason. • Filter or pump is blocked (see chapter "Draining Residual Water/Cleaning The Filter"; make sure the water has cooled before draining the appliance). • The drain hose is frozen up. After problem has been removed, push the "Reset" button for at least 3 seconds; afterwards restart the desired programme. If the fault occurs again, contact our After-Sales Service (see next chapter). "Clean pump" GB 9 Failure indication lights up Indication on display (if available) from "F03" to "F43" (except "F18" and "F24") "F24" Description Causes Solutions "Electrical module fault" Push the "Reset" button for at least 3 seconds. May appear for very water-soaking laundry, or if you added too much laundry for a programme destined for small loads only. Do not overload the washing machine.

Push the "Reset" button for at least 3 seconds to stop the programme. Select and start "Rinse and Spin" programme to complete the interrupted wash programme properly. "Waterstop fault" For models with big display, the red "Waterstop" symbol will also light up in this case. • Then: • Plug in the appliance again. • Select and start the desired programme again. • If your washing machine has a "Dosing Aid" function, and you used it: check if the dosing values set for the different programme groups correspond to the dosing values recommended for the detergents you use (see details in separate Instructions for the "Dosing Aid"). • Select and start the "Rinse & Spin" programme. • Afterwards select and start the desired programme again, using less detergent. See also paragraph "The machine is at a standstill..

.. " on first page of Troubleshooting Guide. "F02" or "FA" "Service" "F18" or "FoD" If any of the faults described above persist, unplug the appliance, turn off the water tap and contact our After-Sales Service (see next chapter). GB 10 AFTER-SALES SERVICE Before contacting After-Sales Service: 1.

Try to remedy the problem yourself (see "Troubleshooting Guide"). 2. Restart the programme to check whether the problem has solved itself. 3. If the washing machine continues to function incorrectly, call our After-Sales Service.

Specify: • The nature of the problem. • The washing machine model. • The service code (number after the word SERVICE). The After-Sales Service sticker can be found inside the door. • Your full address. • Your telephone number and area code. After-Sales Service phone numbers and addresses are given on the guarantee card. • a Stacking Kit Shelf, by which your dryer can be fixed on top of your washing machine to save space and to facilitate loading and unloading your dryer in that high position.



[You're reading an excerpt. Click here to read official WHIRLPOOL](http://yourpdfguides.com/dref/4859092)

[AWO/C 7210 user guide](http://yourpdfguides.com/dref/4859092)

<http://yourpdfguides.com/dref/4859092>

- a Cover Panel Kit, by which your washing machine can be built under a continuous kitchen worktop, for example. Check with our AfterSales Service or your specialist dealer if this is possible for your washing machine model.

TRANSPORT/HANDLING Never lift the appliance by the worktop when transporting. 1. 2. 3. 4. 5. Pull out the mains plug. Turn off the tap. Check that machine door and detergent dispenser are properly closed. Disconnect the inlet and drain hoses.

Eliminate all water from the hoses and from the appliance (see "Draining Residual Water/Cleaning The Filter"). 6. Fit the transport bolts (obligatory). GB 11

ELECTRICAL CONNECTION For Great Britain only Warning - this appliance must be earthed Fuse replacement If the mains lead of this appliance is fitted with a BS 1363A 13amp fused plug, to change a fuse in this type of plug use an A.S.

T.A. approved fuse to BS 1362 type and proceed as follows: 1. Remove the fuse cover (A) and fuse (B). 2.

Fit replacement 13A fuse into fuse cover. 3. Refit both into plug. Important: The fuse cover must be refitted when changing a fuse and if the fuse cover is lost the plug must not be used until a correct replacement is fitted. Correct replacement are identified by the colour insert or the colour embossed in words on the base of the plug. Replacement fuse covers are available from your local electrical store. For the Republic of Ireland only The information given in respect of Great Britain will frequently apply, but a third type of plug and socket is also used, the 2-pin, side earth type. Socket outlet / plug (valid for both countries) If the fitted plug is not suitable for your socket outlet, Please contact After-Sales service for further instruction. Please do not attempt to change plug yourself. This procedure needs to be carried out by a qualified technician in compliance with the manufactures instructions and current standard safety regulations.

GB 12 .



[You're reading an excerpt. Click here to read official WHIRLPOOL AWO/C 7210 user guide](http://yourpdfguides.com/dref/4859092)
<http://yourpdfguides.com/dref/4859092>