



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL AWO/C 72200. You'll find the answers to all your questions on the WHIRLPOOL AWO/C 72200 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual WHIRLPOOL AWO/C 72200**  
**User guide WHIRLPOOL AWO/C 72200**  
**Operating instructions WHIRLPOOL AWO/C 72200**  
**Instructions for use WHIRLPOOL AWO/C 72200**  
**Instruction manual WHIRLPOOL AWO/C 72200**

GB

- A.** "Door open" indication
- This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately, e.g.:
- B.** "Service" indication
- C.** "Water tap closed" indication
- D.** "Clean pump" indication



- E.** Programme selector
- F.** "Start/Pause" button
- G.** "Temperature" button
- H.** "Spin" button (incl. "Rinse hold")
- I.** "Start delay" button
- J.** "Dosing Aid" button
- K.** "Soil level" button
- L.** Programme sequence indicator
- M.** "Reset/Drain" button
- N.** Child lock button combination
- O.** Detergent overdosage indication

Programme	Temperature	Care Labels	Max. Load kg	Type of wash / Notes <i>- respect the manufacturer's recommendations on the care label</i>	Detergents and Additives				Special options				Dosing aid	Start delay	Spin/Rinse hold	Spin Max Spin Speed rpm
					Pre-wash	Main Wash	Softener	Clean+	Rapid	Pre-wash	Intensiv rinse	Soil level				
Mixed	cold - 60°C		4.0	Slightly to normally soiled robust laundry made of cotton, linen, artificial fibres and their blends. Effective one-hour programme. Make sure to wash only similar colours together in one wash load. If soil level requires, add oxygen-based stain remover.	-	Yes	*	-	-	-	*	*	*	*	*	Max.
Cotton	cold - 95°C		7.0	Normally to heavily soiled towels, underwear, table and bed linen etc. made of cotton and linen.	*	Yes	*	*	* <sup>2)</sup>	*	*	* <sup>2)</sup>	*	*	*	Max.
Synthetics	cold - 60°C		3.0	Normally soiled blouses, shirts, overalls, etc. made of polyester (Dolien, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	*	Yes	*	*	*	*	*	*	*	*	*	Max.
Delicates	cold - 40°C		1.5	Curtains and delicate clothing, dresses, skirts, shirts and blouses.	*	Yes	*	-	-	*	-	*	*	*	1000 <sup>1)</sup>	
Wool/ Handwash	cold - 40°C		1.0	Woolens, labelled with the Woolmark and identified as machine washable, as well as textiles made of silk, linen, wool and viscose marked as handwashable. This programme is tested and approved by The Woolmark Company for machine- and handwashable wool. Select spin speed according to the manufacturer's recommendations on the care label.	-	Yes	*	-	-	-	*	*	*	*	1000 <sup>1)</sup>	
White	cold - 60°C		7.0	Normally to heavily soiled and robust white cotton laundry. Save energy by selecting a lower wash temperature and adding an oxygen-based bleach product, in addition to your detergent.	-	Yes	*	*	-	-	*	*	*	*	Max.	
Light colours	cold - 60°C		4.5	White and pastel shaded garments made of delicate fabrics. Gentle wash programme to avoid graying or yellowing of your laundry. Use heavy duty detergent. If necessary also stain removers or bleaches on oxygen basis. Do not use liquid detergent.	*	Yes	*	*	-	*	-	*	*	*	1000 <sup>1)</sup>	
Dark	cold - 60°C		4.5	Black and dark garments made of cotton, cotton blends and polyester. Special programme to reduce colour fading and local discolouration. Prefer to use a special liquid detergent for dark garments with this programme.	*	Yes	*	-	*	*	*	*	*	*	1000 <sup>1)</sup>	
SuperEco	cold - 60°C		7.0	Heavily soiled and robust laundry made of cotton, synthetics and their blends. Economical energy consumption by prolonged washing duration - ideal to be run overnight to profit from more favourable energy rates. Avoid noise of spinning at night by setting the spin speed to "0" and start spin programme in the morning, or by softening programme start with "Start delay", accordingly. For garments with a high share of synthetic fibres, we recommend to use a laundry net.	-	Yes	*	-	-	-	*	*	*	*	Max.	
AquaEco	cold - 40°C		3.0	Lightly soiled laundry made of synthetic fibres, or synthetics mixed with cotton garments. Saving programme with a very low water consumption. Use liquid detergent and the lowest recommended amount for 3kg laundry. Do not use softener.	-	Yes	-	-	-	-	-	*	*	*	Max.	
Speed 15'	cold - 30°C		3.0	Briefly worn clothing made of cotton, artificial fibres and blends with cotton. Refresh programme. Use lowest recommended detergent amount.	-	Yes	*	-	-	-	-	*	*	*	Max.	
Sport	cold - 30°C		3.0	Normally soiled and sweaty sportswear made of cotton jersey or microfibres. This programme includes a prewash cycle - you can add detergent also to the prewash chamber. Do not add any softener.	*	Yes	-	-	-	*	*	*	*	*	Max.	
Spin	-	-	7.0	Intensive spin programme. Same as the spin cycle in the "Cotton" programme.	-	-	-	-	-	-	-	-	-	*/-	Max.	
Rinse & Spin	-	-	7.0	Rinse and intensive spin programme. Same as the last rinse and the final spin in the "Cotton" programme.	-	-	*	-	-	-	*	-	-	*	Max.	

<sup>0)</sup> option / Yes = dosing required  
<sup>1)</sup> For improved garment care spin speed is restricted in these programmes.  
<sup>2)</sup> Selectable for programmes Cotton 20 - 60°C only.

The wool/handwash cycle of this machine has been tested and approved by The Woolmark Company for the washing of Woolmark garments labelled as "machine wash" or "hand wash" provided that the garments are washed according to the instructions on the garment label and those issued in this programme chart. M0619

Whirlpool is a registered trademark of Whirlpool USA.  
**5019 301 01300**



[You're reading an excerpt. Click here to read official WHIRLPOOL AWO/C 72200 user guide](http://yourpdfguides.com/dref/4912983)  
<http://yourpdfguides.com/dref/4912983>

**Manual abstract:**

“Door open” indication This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately, e.g.: B. “Service” indication C. “Water tap closed” indication D. “Clean pump” indication L C D A B M E F G J I K O H N Special options Prewash E. Programme selector F. “Start/Pause” button G. “Temperature” button H. “Spin” button (incl. “Rinse hold”) I. “Start delay” button J. “Dosing Aid” button K. “Soil level” button L. Programme sequence indicator M.

“Reset/Drain” button N. Child lock button combination O. Detergent overdosage indication Dosing aid Start delay Programme Temperature Care Labels Max. Load kg Detergents and Additives Type of wash / Notes - respect the manufacturer's recommendations on the care label Slightly to normally soiled robust laundry made of cotton, linen, artificial fibres and their blends. Effective one-hour programme.

Make sure to wash only similar colours together in one wash load. If soil level requires, add oxygen-based stain removers. Normally to heavily soiled towels, underwear, table and bed linen etc. made of cotton and linen. Normally soiled blouses, shirts, overalls, etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton. Curtains and delicate clothing, dresses, skirts, shirts and blouses. @@@@Select spin speed according to the manufacturer's recommendations on the care label. Normally to heavily soiled and robust white cotton laundry. Save energy by selecting a lower wash temperature and adding an oxygen-based bleach product, in addition to your detergent.

White and pastel shaded garments made of delicate fabrics. Gentle wash programme to avoid graying or yellowing of your laundry. Use heavy duty detergent, if necessary also stain removers or bleaches on oxygen basis. Do not use liquid detergent. Black and dark garments made of cotton, cotton blends and polyester. Special programme to reduce colour fading and local discolouration. @@@@Economical energy consumption by prolonged washing duration - ideal to be run overnight to profit from more favourable energy rates. Avoid noise of spinning at night by setting the spin speed to “0” and start spin programme in the morning, or by defining programme start with “Start delay” accordingly. For garments with a high share of synthetic fibres, we recommend to use a laundry net. @@Saving programme with a very low water consumption.

@@Do not use softener. @@Refresh programme. Use lowest recommended detergent amount. @@@@Do not add any softener. Intensive spin programme. Same as the spin cycle in the “Cotton” programme. Rinse and intensive spin programme. @Max. Max. 1000 l) 1000 l) cold - 60°C cold - 60°C cold - 60°C 7.

0 4.5 4.5 Max. 1000 l) 1000 l) SuperEco Eco cold - 60°C 7.0 - Yes i - - - i i i i i Max. AquaEco Speed 15' Sport Spin Rinse & Spin cold - 40°C cold - 30°C cold - 30°C 3.0 3.0 3.0 - - i - - - Yes Yes Yes - - - i - - i - - - - - i - - - - - i - - - - - i - i - - - i i i i i i i i i i / - i Max. Max.

Max. Max. Max. - - - - 7.0 7.0 i : option / Yes : dosing required l) For improved garment care spin speed is restricted in these programmes. 2) Selectable for programmes Cotton 20 - 60°C only. The wool/handwash cycle of this machine has been tested and approved by The Woolmark Company for the washing of Woolmark garments labelled as “machine wash” or “hand wash” provided that the garments are washed according to the instructions on the garment label and those issued in this programme chart. M0619 Whirlpool is a registered trademark of Whirlpool USA. 5019 301 01300 CONSUMPTION DATA Programme Mixed Cotton Cotton \*\* Cotton \*\* Cotton Cotton \*\* Synthetics Synthetics Delicates Wool/Handwash White (with Clean+) Light colours Dark SuperEco AquaEco Speed 15' Sport (with Prewash) SET A START DELAY Temperature (°C) 40 95 60 60 40 40 60 40 30 40 40 40 40 60 40 30 30 Load (kg)

4.  
0 7.0 7.0 3.5 7.0 3.  
5 3.0 3.0 1.5 1.0 7.

0 4.5 4.5 7.0 3.0 3.0 3.0 Water (l) 45 74\* 54 40 69 40 50\* 46 60 45 69 65 45 69 19 30 56 Energy (kWh) without “Rapid” 0.50 2.10 0.91 0.

85 0.80 0.65 0.80 0.50 0.50 0.50 0.80 0.50 0.60 0.

84 0.45 0.20 0.60 Approx. programme duration (hours : minutes) without “Rapid” 1:00 2:10 4:00 3:00 3:15 3:00 1:35 1:20 0:45 0:40 3:30 1:20 1:40 4:00 1:00 0:15 1:34 with “Rapid” 2:30 \*\*\* 2:15 \*\*\* 1:14 0:59 1:15 1:13 Consumption values were measured in normalized conditions in compliance with standard IEC/EN 60 456.

Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash. Water and energy consumption refer to the default setting of the programmes; selecting special options or modifying spin speed or temperature will change the consumption data. @@@@\*\* Reference programmes for Energy Label. @@• Select programme, temperature, spin speed and options. @@• Press the “Start/Pause” button .

@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@Any time you try to change a programme setting with active child lock, the display will briefly show the key-like symbol. The programme setting cannot be changed anymore. The only change possible is to switch the washer off by turning the programme selector to the “Off/O” position. To deactivate the child lock: • Press again the 2 buttons marked with the key symbol simultaneously for at least 3 seconds. FAILURE INDICATIONS In case of any failures or irregularities, consult the “Troubleshooting Guide” in your Instructions for Use. @@@@“Clean pump” Waste water is not pumped out. @@@@• Select programme, options and start delay BEFORE using the “Dosing Aid” button. For any details, refer to the separate “Dosing Aid” Instructions for Use. PROGRAMME END • All the lights of the programme sequence indicator are off and the “Door open” indication lights up. 1.

Turn the programme selector to the “Off/O” position. 2. Close the water tap. 3. Open the door and unload the machine. 4. Leave the door ajar to allow the drum to dry. ADD DETERGENTS, CLOSE THE DOOR AND SELECT THE PROGRAMME Add detergents as indicated on the front page and as described in the chapter “Detergent and Additives” in your Instructions for Use. • Turn the programme selector to the desired programme; the light of the “Start/Pause” button blinks. • The temperature and spin speed indicated on the display can be altered by pressing the “Temperature” button or the “Spin” button .



[You're reading an excerpt. Click here to read official WHIRLPOOL AWO/C 72200 user guide](http://yourpdfguides.com/dref/4912983)  
<http://yourpdfguides.com/dref/4912983>

*SELECT ANY DESIRED OPTION* When the combination of programme and additional option(s) is not possible, the indication switch off automatically. Unsuitable combinations of options are deselected automatically. @@@ • Use with the maximum load. @@ Respect the manufacturer's dosing instructions. @@ Chlorine or perborate bleaches must not be used! "Rapid" button • Enables quicker washing by shortening the programme duration. • Recommendable for small loads or only lightly soiled laundry. "Prewash" button • The child lock cannot be activated or deactivated when the programme selector is in the "Off/O" position. To activate the child lock: • Turn the programme selector to a programme position, or run a programme as usual.

Whirlpool is a registered trademark of Whirlpool USA.  
5019 301 01300 .



[You're reading an excerpt. Click here to read official WHIRLPOOL AWO/C 72200 user guide](http://yourpdfguides.com/dref/4912983)  
<http://yourpdfguides.com/dref/4912983>