



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL AWO/D 41700. You'll find the answers to all your questions on the WHIRLPOOL AWO/D 41700 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual WHIRLPOOL AWO/D 41700**  
**User guide WHIRLPOOL AWO/D 41700**  
**Operating instructions WHIRLPOOL AWO/D 41700**  
**Instructions for use WHIRLPOOL AWO/D 41700**  
**Instruction manual WHIRLPOOL AWO/D 41700**

## CONTENTS

DEFINITION OF USE  
BEFORE USING THE WASHING MACHINE  
PRECAUTIONS AND GENERAL RECOMMENDATIONS  
DESCRIPTION OF THE WASHING MACHINE  
DOOR  
CHILD SAFETY (IF AVAILABLE)  
BEFORE THE FIRST WASH CYCLE  
PREPARATION OF THE WASHING  
DETERGENTS AND ADDITIVES  
REMOVING THE FILTER/  
DRAINING RESIDUAL WATER  
CARE AND MAINTENANCE  
TROUBLESHOOTING GUIDE  
AFTER-SALES SERVICE  
ACCESSORIES  
TRANSPORT/HANDLING  
ELECTRICAL CONNECTION



[You're reading an excerpt. Click here to read official WHIRLPOOL AWO/D 41700 user guide](http://yourpdfguides.com/dref/4843442)  
<http://yourpdfguides.com/dref/4843442>

**Manual abstract:**

Contact After-Sales Service or your local retailer. • Check that the accessories and supplied parts are all present. • If the appliance was exposed to the cold prior to delivery, keep it at room temperature for a few hours before operating. • Water pressure (flow pressure): 100-1000 kPa (1-10 bar). • Use only new hoses to connect the washing machine to the water supply. Used hoses must not be used and should be discarded. 5.Drain • Connect the drain hose to the siphon or hook it over the edge of a sink by means of the “U” bend supplied. • If the washing machine is connected to an integrated drainage system, ensure the latter is equipped with a vent to avoid simultaneous loading and draining of water (siphoning effect). 2.

Remove the transport bolts • The washing machine is fitted with transport bolts to avoid any possible damage to the interior during transport. Before using the machine, it is imperative that the transport bolts are removed. • After their removal, cover the openings with the 4 enclosed plastic caps. 6.Electrical connection • Electrical connections must be carried out by a qualified technician in compliance with the manufacturer’s instructions and current standard safety regulations.

- Data regarding voltage, power consumption and protection requirements is given on the inside of the door. • The appliance must be connected to the mains by means of a socket with an earth connection in accordance with current regulations. The washing machine must be earthed by law. The manufacturer declines all liability for damage to property or injury to persons or animals due to non-compliance with the directions given above. • Do not use extension leads or multiple sockets.
- Before any maintenance on the washing machine disconnect it from the mains supply. • After installation, access to the mains plug or to disconnection from mains supply must be ensured at all times via a double-pole switch. • Do not operate the washing machine if it has been damaged during transport. Inform the After-Sales Service. • Mains cable replacement is only to be carried out by After-Sales Service. • The appliance must only be used in the household for the prescribed uses. 3.Install the washing machine • Remove the protective film from the control panel (if available on your model). • Move the appliance without lifting it by the worktop. • Water inlet: Cold water only (if no other information on your programme chart) • Water tap: 3/4” threaded hose connector Minimum housing dimensions: Width: Height: Depth: 600 mm 850 mm 600 mm GB 2 Black process 45.

0° 100.0 LPI IFU Delta-Domino\_LR-HR-STEAM-GB NEW.fm Page 3 Monday, September 15, 2008 3:59 PM PRECAUTIONS AND GENERAL RECOMMENDATIONS 1.Safety instructions • The washing machine is appropriate for indoor use only. • Do not store flammable fluids near the appliance. • Children must not be allowed to play with the washing machine or to climb into the drum (see also the following page chapter “Child Safety”). • This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. • If you want to place a dryer on top of your washing machine, first contact our After-Sales Service or your specialist dealer to verify if this is possible. Placing a dryer on your washing machine is only admitted if the dryer is fixed on the washing machine by using an appropriate stacking kit available through our After-Sales Service or your specialist dealer. • Do not leave the appliance plugged in when not in use.

• Turn off the tap when not in use. • Before any cleaning and maintenance switch off the machine or disconnect it from the mains. • Never open the door forcibly or use it as a step. • If necessary, the power cable may be replaced with an identical one obtained from our AfterSales Service. The power cable must only be replaced by a qualified technician.

consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The symbol on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

4.Energy saving The water consumption of your washing machine is optimized; in some programmes you therefore cannot see the water through the door glass when the machine is in operation. • Achieve the best use of energy, water, detergent and time by using the recommended maximum load size. • This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic

Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative 5.EC Declaration of Conformity • The appliance conforms to the following European Standards: 2006/95/EC Low Voltage Directive 2004/108/EC Electromagnetic Compatibility Directive GB 3 Black process 45.0° 100.0 LPI IFU Delta-Domino\_LR-HR-STEAM-GB NEW.fm Page 4 Monday, September 15, 2008 3:59 PM DESCRIPTION OF THE WASHING MACHINE 1 1 2 3 4 5 2 3 4 5 6 6 7 7 8 8 1. 2.

3. 4. 5. 6. 7. 8. Worktop Control panel Detergent dispenser Service plate (inside the door) Door Child safety device (if provided, inside the door) Pump access behind plinth or cover (depending on the model) Adjustable feet DOOR To open the door, hold the door handle, press the inside handle (if available on your model) and pull the door. Close the door by pressing it without excessive force until it clicks shut. CHILD SAFETY (IF AVAILABLE) To protect the appliance against improper use, turn the plastic screw on the interior of the door by using a coin. • Slot vertical: the door will not lock.

• Slot horizontal - normal position: the door can be locked again. BEFORE THE FIRST WASH CYCLE To remove any residual water used in testing by the manufacturer, we recommend that you carry out a short wash cycle without laundry. 1. Open the tap. 2. Close the door. 3. Pour a little detergent (about 30 ml) into the main wash chamber of the detergent dispenser. 4. Select and start a short programme (see separate “Programme Chart”).

GB 4 Black process 45.0° 100.0 LPI IFU Delta-Domino\_LR-HR-STEAM-GB NEW.fm Page 5 Monday, September 15, 2008 3:59 PM PREPARATION OF THE WASHING 1.



[You're reading an excerpt. Click here to read official WHIRLPOOL AWO/D 41700 user guide](http://yourpdfguides.com/dref/4843442)  
<http://yourpdfguides.com/dref/4843442>

Sort the laundry according to... • Type of fabric / care label symbol Cottons, mixed fibres, easy care/synthetics, wool, handwash items. • Colour Separate coloured and white items. Wash new coloured articles separately.

- Size Wash items of different sizes in the same load to improve washing efficiency and distribution in the drum. • Delicates Wash small items (e.g. nylon stockings, belts etc.) and items with hooks (e.g. bras) in a cloth bag or pillow case with zip. Always remove curtain rings or wash curtains with the rings inside a cotton bag. Stain removal • Blood, milk, eggs etc. are generally removed by the automatic enzyme phase of the programme.
- To remove red wine, coffee, tea, grass and fruit stains etc. add a stain remover to the main wash chamber of the detergent dispenser. • Pre-treat heavily-soiled areas with stain remover if necessary. Dyeing and bleaching • Only use dyes and bleaches that are suitable for washing machines. • Follow the Manufacturer's instructions.
- Plastic and rubber parts of the washing machine can be stained by dyes or bleaches. Loading the laundry 1. Open the door. 2. Load the articles one at a time loosely into the drum, without overfilling.

Observe the load sizes given in the quick reference guide. Note: overloading the machine will result in unsatisfactory washing results and creased laundry. 3. Close the door. 2. Empty all pockets Coins, safety pins etc. can damage your laundry as well as the appliance drum and tub. 3. Fasteners Close zips and fasten buttons or hooks; loose belts or ribbons should be tied together. DETERGENTS AND ADDITIVES Keep detergents and additives in a safe, dry place out of the reach of children! The choice of detergent depends on: • Type of fabric (cottons, easy care/synthetics, delicate items, wool).

Note: Use only specific detergents for washing wool and garments made of microfibrils (like sports or swimwear). • Colour. • The wash temperature. • Degree and type of soiling. @@@@1. Stop the appliance and unplug it. 2. @@ "A" / "B"). 3. Place a container beneath it.

@@@4. Open the filter but do not remove it completely. Slowly turn the filter counterclockwise (fig. C) until the water begins to drain out. 5.

Wait until all the water has drained. 6. Now unscrew the filter completely and remove it. 7. Tilt the appliance forwards carefully to allow the water to flow out.

8. Clean the filter and the filter chamber. 9. Check that the pump rotor moves freely. 10. Re-insert the filter and screw it in clockwise as far as it will go. 11. @@ Check that the filter is inserted properly and securely. 12. Reinstall the plinth or the cover, depending on the model.

13. Plug in the appliance again. @@ • A little neutral detergent (non abrasive) can also be used. @@@@ To clean the dispenser drawer: 1. @@2. Remove the cover grid from the softener chamber. @@3. Wash all the parts under running water. 4. Clean the dispenser compartment with a damp cloth.

5. @@ If your supply hose has a transparent hose coating (fig. @@@@ Close the tap and loosen the inlet hose on the tap. 2. @@3.

Now unscrew the inlet hose on the rear of the washing machine. 4. @@5. Refit the mesh filter and screw the inlet hose on again. 6.

@@@@ Appliance does not start • Door is not properly closed (see also "ull; Mesh filter of water supply hose is blocked (see "Care And Maintenance". • The water hose is frozen up. @@@@ Waste water is not pumped out. @@@@ • The drain hose is frozen up. @@@@ "Electrical module fault" Make sure that the water tap is open. If yes: • Switch the washing machine off or turn the programme selector to the "Off/O" position; then switch it on again or turn the programme selector to a wash programme. If there is still a failure: • Select and start the "Drain" programme or push the "Reset" button for at least 3 seconds. "Water level too high" (after programme cancellation or false operating). @@@@ Then: • Plug in the appliance again. @@ • Select and start the desired programme again.

"Overfoaming" Too much foam interrupted the wash programme. • Select and start the "Rinse & Spin" programme. • Afterwards select and start the desired programme again, using less detergent. If any of the faults described above persist, unplug the appliance, turn off the water tap and contact our After-Sales Service (see next chapter). from "F40" to "F43" "F24" "F02" or "FA" "Service" "Fod" GB 12 Black process 45.0° 100.0 LPI IFU Delta-Domino\_LR-HR-STEAM-GB NEW.fm Page 13 Monday, September 15, 2008 3:59 PM AFTER-SALES SERVICE Before contacting After-Sales Service: 1. Try to remedy the problem yourself (see "Troubleshooting Guide"). 2.

Restart the programme to check whether the problem has solved itself. 3. If the washing machine continues to function incorrectly, call our After-Sales Service. The After-Sales Service sticker can be found inside the door. • Your full address.

- Your telephone number and area code. After-Sales Service phone numbers and addresses are given on the guarantee card. Alternatively, consult the dealer where you purchased the appliance. Specify: • The nature of the problem. • The washing machine model.
- The service code (number after the word SERVICE). ACCESSORIES For some models, you can obtain via our AfterSales Service or your specialist dealer: • a Pedestal Drawer which can be installed beneath your washing machine. @@@@ Be aware that: • the appliance MUST be installed under a continuous worktop. • according to the legal safety regulations, the installation of the appliance MUST be carried out by an authorized technician or by our After-Sales Service. • the appliance MUST be installed using the Cover Panel Kit which can be obtained from specialist dealers or our After-Sales Service. TRANSPORT/HANDLING Never lift the appliance by the worktop when transporting. Pull out the mains plug. Turn off the tap. Check that machine door and detergent dispenser are properly closed. Disconnect the inlet and drain hoses.

Eliminate all water from the hoses and from the appliance (see "Removing The Filter/ Draining Residual Water"). 6. Fit the transport bolts (obligatory). GB 13 1. 2. 3. 4. 5. Black process 45.0° 100.

0 LPI IFU Delta-Domino\_LR-HR-STEAM-GB NEW.fm Page 14 Monday, September 15, 2008 3:59 PM ELECTRICAL CONNECTION For Great Britain only Warning - this appliance must be earthed Fuse replacement If the mains lead of this appliance is fitted with a BS 1363A 13amp fused plug, to change a fuse in this type of plug use an A.S.T.A.

approved fuse to BS 1362 type and proceed as follows: 1. Remove the fuse cover (A) and fuse (B). 2. Fit replacement 13A fuse into fuse cover. 3.

Refit both into plug. Important: The fuse cover must be refitted when changing a fuse and if the fuse cover is lost the plug must not be used until a correct replacement is fitted.



[You're reading an excerpt. Click here to read official WHIRLPOOL AWO/D 41700 user guide](http://yourpdfguides.com/dref/4843442)  
<http://yourpdfguides.com/dref/4843442>

*Correct replacement are identified by the colour insert or the colour embossed in words on the base of the plug. Replacement fuse covers are available from your local electrical store. For the Republic of Ireland only The information given in respect of Great Britain will frequently apply, but a third type of plug and socket is also used, the 2-pin, side earth type. Socket outlet / plug (valid for both countries) If the fitted plug is not suitable for your socket outlet, Please contact After-Sales service for further instruction. Please do not attempt to change plug yourself. This procedure needs to be carried out by a qualified technician in compliance with the manufactures instructions and current standard safety regulations. GB 14 Black process 45.0° 100.*

*0 LPI .*



[You're reading an excerpt. Click here to read official WHIRLPOOL AWO/D 41700 user guide](http://yourpdfguides.com/dref/4843442)  
<http://yourpdfguides.com/dref/4843442>