




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL AWO/D 4310. You'll find the answers to all your questions on the WHIRLPOOL AWO/D 4310 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual WHIRLPOOL AWO/D 4310
User guide WHIRLPOOL AWO/D 4310
Operating instructions WHIRLPOOL AWO/D 4310
Instructions for use WHIRLPOOL AWO/D 4310
Instruction manual WHIRLPOOL AWO/D 4310

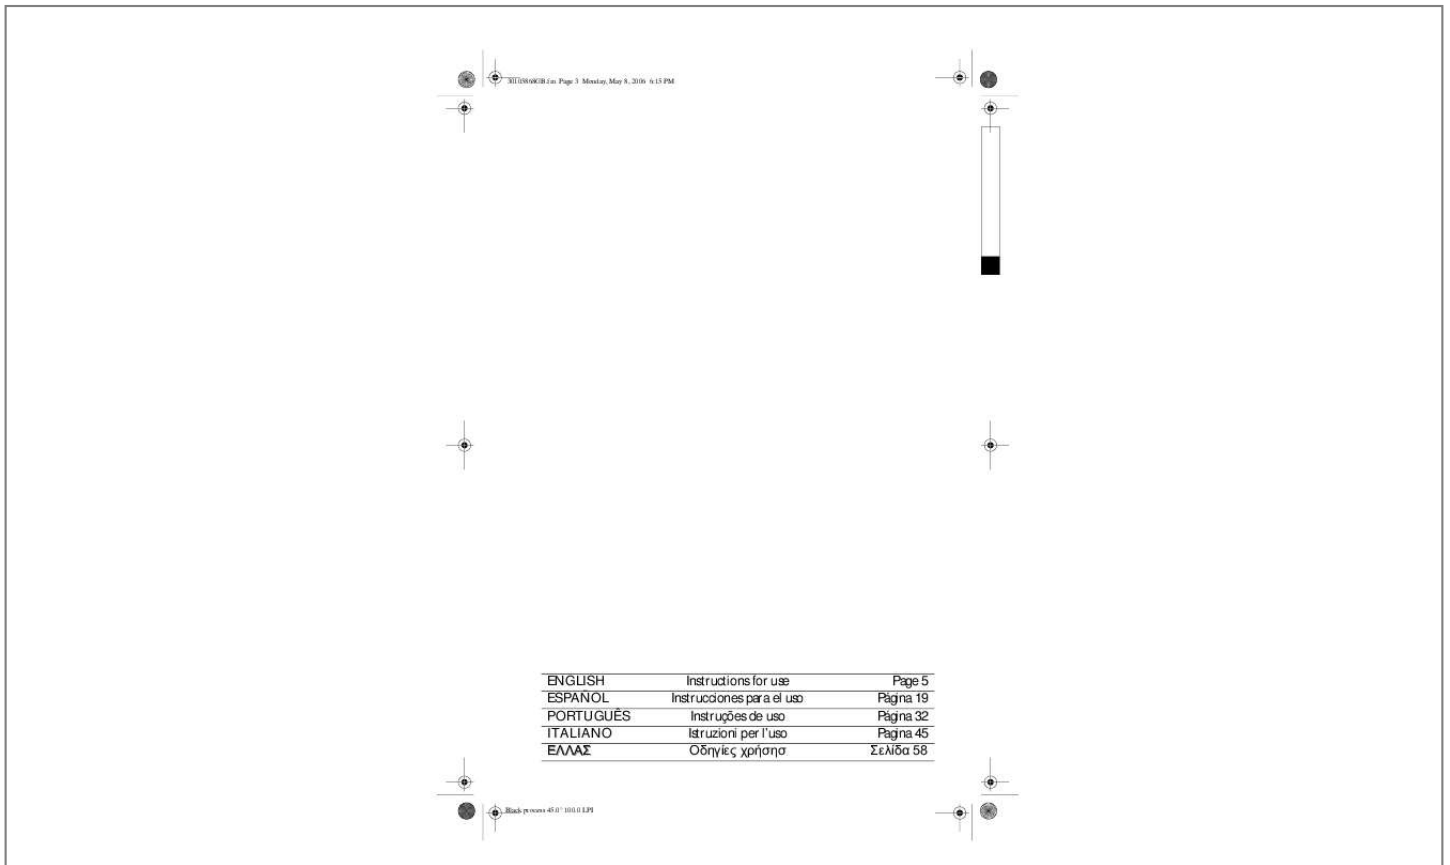

[You're reading an excerpt. Click here to read official WHIRLPOOL AWO/D 4310 user guide](http://yourpdfguides.com/dref/4854650)
<http://yourpdfguides.com/dref/4854650>

Manual abstract:

Contact After-Sales Service or your local retailer. • Check that the accessories and supplied parts are all present. • Used hoses must not be used and should be discarded. 5. Drain • Connect the drain hose to the siphon or hook it over the edge of a sink by means of the “U” bend supplied. • If the washing machine is connected to an integrated drainage system, ensure the latter is equipped with a vent to avoid simultaneous loading and draining of water (siphoning effect). 6. Electrical connection • Electrical connections must be carried out by a qualified technician in compliance with the manufacturer's instructions and current standard safety regulations. • Data regarding voltage, power consumption and protection requirements is given on the inside of the door. • The appliance must be connected to the mains by means of a socket with an earth connection in accordance with current regulations.

The washing machine must be earthed by law. The manufacturer declines all liability for damage to property or injury to persons or animals due to non-compliance with the directions given above. • Do not use extension leads or multiple sockets. • Before any maintenance on the washing machine disconnect it from the mains supply. • After installation, access to the mains plug or to disconnection from mains supply must be ensured at all times via a double-pole switch.

• Do not operate the washing machine if it has been damaged during transport. Inform the After-Sales Service. • Mains cable replacement is only to be carried out by After-Sales Service. • The appliance must only be used in the household for the prescribed uses. 2.

Remove the transport bolts • The washing machine is fitted with transport bolts to avoid any possible damage to the interior during transport. Before using the machine, it is imperative that the transport bolts are removed. • After their removal, cover the openings with the 4 enclosed plastic caps. 3. Install the washing machine • Remove the protective film from the control panel (if available on your model) • Move the appliance without lifting it by the worktop. • Install the appliance on a solid and level floor surface, preferably in a corner of the room. • Make sure that all four feet are stable and resting on the floor and then check that the washing machine is perfectly level (use a spirit level). • Do not exceed the detergent dosages indicated in the manufacturer's instructions. • The Eco-Ball - a special system in the outlet - will prevent detergent loss from the drum to avoid detergent loss into the environment. • Use “Prewash” for heavily soiled laundry only! Save detergent, time, water and energy consumption by not selecting “Prewash” for slightly to normally soiled laundry.

• Pretreat stains with stain remover or soak dried in stains in water before washing to reduce the necessity of a hot wash programme. • Save energy by using a 60° C instead of a 95° C wash programme or a 40° C instead of a 60° C wash programme. • Save energy and time by selecting a high spin speed to reduce the water content in laundry before using a tumble dryer (for machines with adjustable spin speed). 2. Disposing of packaging and scrapping old washing machines • The washing machine is built from reusable materials. It must be disposed of in compliance with current local waste disposal regulations. • Before scrapping, remove all detergent residues and cut off the power cable so that the washing machine is made unusable. • This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The symbol on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal. • Turn off the tap. • Clean the outside of the washing machine with a damp cloth. Do not use abrasive detergents.

• Never open the door forcibly or use it as a step. 2. 3. 4. 5.

6. 7. 8. • Slot vertical: the door will not lock. 1. Open the tap. 2. Close the door. 3. Pour a little detergent (about 30 ml) into the main wash chamber of the detergent dispenser.

4. Select and start a short programme (see separate quick reference guide). 8 Black process 45.0° 100.0 LPI 30105868GB.fm Page 9 Monday, May 8, 2006 6:15 PM PREPARATION OF THE WASHING 1. Sort the laundry according to... • Type of fabric / care label symbol Cottons, mixed fibres, easy care/synthetics, wool, handwash items.

• Colour Separate coloured and white items. Wash new coloured articles separately. • Loading Wash items of different sizes in the same load to improve washing efficiency and distribution in the drum. • Delicates Wash small items (e.g. nylon stockings, belts etc.) and items with hooks (e.g. bras) in a cloth bag or pillow case with zip. Always remove curtain rings or wash curtains with the rings inside a cotton bag.

Stain removal • Blood, milk, eggs etc. are generally removed by the automatic enzyme phase of the programme. • To remove red wine, coffee, tea, grass and fruit stains etc. add a stain remover to the main wash chamber of the detergent dispenser. • Pre-treat heavily-soiled areas with stain remover if necessary. Dyeing • Only use dyes that are suitable for washing machines. • Follow the Manufacturer's instructions. • Plastic and rubber parts of the washing machine can be stained by dyes. Loading the laundry 1. Open the door.

2. Load the articles one at a time loosely into the drum, without overfilling. Observe the load sizes given in the quick reference guide. Note: overloading the machine will result in unsatisfactory washing results and creased laundry 3. Close the door. 2. Empty all pockets Coins, safety pins etc. can damage your laundry as well as the appliance drum and tub. 3. Fasteners Close zips and fasten buttons or hooks; loose belts or ribbons should be tied together.

DETERGENTS AND ADDITIVES The choice of detergent depends on: • type of fabric (cottons, easy care/synthetics, delicate items, wool). Note: Use only specific detergents for washing wool • colour • the wash temperature • degree and type of soiling Remarks: Any whitish residues on dark fabrics are caused by insoluble compounds used in modern phosphate-free powder detergents. If this occurs, shake or brush out the fabric or use liquid detergents. Use only detergents and additives specifically produced for domestic washing machines.



[You're reading an excerpt. Click here to read official WHIRLPOOL](#)

[AWO/D 4310 user guide](#)

<http://yourpdfguides.com/dref/4854650>

When using descaling agents, dyes or bleaches for the pre-wash, make sure that they are suitable for use in domestic washing machines.

Descalers could contain products which could damage your washing machine. Do not use any solvents (e.g. turpentine, benzene).

@@@Insufficient detergent may result in grey laundry in time and also calcifies the heating system, drum and hoses.

Water Hardness Chart Water hardness 1 2 3 4 Characteristics soft average hard very hard German °dH 0-7 7-14 14-21 over 21 French &dA"). 3. Place a container beneath it. 4. Open the filter but do not remove it completely. Slowly turn the filter counterclockwise (fig. "B") until the water begins to drain out. 5. Wait until all the water has drained. 6.

Now unscrew the filter completely and remove it. 7. Clean the filter and the filter chamber. 8. Check that the pump rotor moves freely. 9. Re-insert the filter and screw it in clockwise as far as it will go. 10. @@Check that the filter is inserted properly and securely. 11.

Reinstall the plinth. 12. Plug in the appliance again. 13. @@Remove the plinth.

Place a container beneath it. 1. Open the filter but do not remove it completely. @@2. Wait until all the water has drained.

3. Now unscrew the filter completely and remove it. 4. Tilt the appliance forwards carefully to allow the water to flow out. 5. Re-insert the filter and screw it in clockwise as far as it will go. 6. Reinstall the plinth. Before using the washing machine again: 1. Pour approx.

@@2. Plug in the appliance again. @@• A little neutral detergent (non abrasive) can also be used. @@@@@"A"). 2. Remove the cover grid from the fabric softener compartment. @@"B"). 3. Wash all the parts under running water. 4.

@@If your supply hose has a transparent hose coating (fig. @@@@Close the tap and loosen the inlet hose on the tap. 2. @@3. Now unscrew the inlet hose on the rear of the washing machine.

4. @@5. Refit the mesh filter and screw the inlet hose on again. 6. @@This enables faults to be detected in good time and the safety system can react appropriately.

These faults are frequently so minor that they can be removed within a few minutes. The washing machine will not start, no indicator lamps are on. @@The washing machine will not start... and the "Start/Pause" indicator lamp flashes. @@Open the water tap and press the "Start/Pause" button.tenance"/"Mesh Filters For Water Connection"). •the water hose is frozen up. @@@@b.

@@The "Clean pump" indication lights up. @@The washing machine stops in the appropriate programme step. Unplug the appliance. @@@@• the drain hose is frozen up. Plug in the appliance again. @@@@"Service" indication lights up The appliance stops during the programme. For models with a remaining time display, a failure code between "F02" and "F35", "FA" or "Fod" appears on that display. If a failure code between "F02" and "F35" appears on the display: Select and start the "Drain" programme or push the "Reset" button for at least 3 seconds. Then select and start the desired programme again.

If the fault persists, unplug the appliance and contact After-Sales Service (see "After-Sales Service").

@@@Then: 1. connect the appliance to the electrical supply; 2. @@Turn off the tap and notify After Sales Service); 3. select and start the desired programme again. @@If failure code "Fod" appears on the display: Too much foam interrupted the washing programme.

Avoid excessive detergent dosing. 1. Select and start the "Rinse & Spin" programme. 2. Afterwards, select and start the desired programme again, using less detergent.

If the fault persists, unplug the appliance and contact our After Sales Service. 16 Black process 45.0° 100.0 LPI 30105868GB.fm Page 17 Monday, May 8, 2006 6:15 PM AFTER-SALES SERVICE Before contacting After-Sales Service: 1. Try to remedy the problem yourself (see "Troubleshooting Guide"). 2. Restart the programme to check whether the problem has solved itself. 3. If the washing machine continues to function incorrectly, call After-Sales Service.

The After-Sales Service sticker can be found inside the door. •Your full address. •Your telephone number and area code. After-Sales Service phone numbers and addresses are given on the guarantee card. Alternatively, consult the dealer where you purchased the appliance. Specify: •The nature of the problem. •The washing machine model. •The service code (number after the word SERVICE). ACCESSORIES Via our After-Sales Service or your specialist dealer, you can obtain: •a Pedestal Drawer which can be installed beneath your washing machine. @@@@Be aware that: •the appliance MUST be installed under a continuous worktop.

•according to the legal safety regulations, the installation of the appliance MUST be carried out by an authorized technician or by our After-Sales Service. •the appliance MUST be installed using the intermediate cover panel of the UBS Base Set which can be obtained from specialist dealers or our After-Sales Service. TRANSPORT / HANDLING Never lift the appliance by the worktop when transporting. 1. 2.

3. 4. Pull out the mains plug. Turn off the tap. Disconnect the inlet and drain hoses.

Eliminate all water from the hoses and from the appliance (see "Removing the Filter", "Draining Residual Water"). 5. Fit the transport bolts (obligatory) 17 Black process 45.0° 100.0 LPI 30105868GB.fm Page 18 Monday, May 8, 2006 6:15 PM ELECTRICAL CONNECTION For Great Britain only Warning - this appliance must be earthed Fuse replacement If the mains lead of this appliance is fitted with a BS 1363A 13amp fused plug, to change a fuse in this type of plug use an A.S.T.A. approved fuse to BS 1362 type and proceed as follows: 1.

Remove the fuse cover (A) and fuse (B). 2. Fit replacement 13A fuse into fuse cover. 3. Refit both into plug. Important: The fuse cover must be refitted when changing a fuse and if the fuse cover is lost the plug must not be used until a correct replacement is fitted. Correct replacement is identified by the colour insert or the colour embossed in words on the base of the plug. Replacement fuse covers are available from your local electrical store. For the Republic of Ireland only The information given in respect of Great Britain will frequently apply, but a third type of plug and socket is also used, the 2-pin, side earth type. Socket outlet / plug (valid for both countries) If the fitted plug is not suitable for your socket outlet, Please contact Whirlpool Service for further instruction.

Please do not attempt to change plug yourself. This procedure needs to be carried out by a qualified Whirlpool technician in compliance with the manufactures instructions and current standard safety regulations. 18 Black process 45.0° 100.0 LPI .



[You're reading an excerpt. Click here to read official WHIRLPOOL AWO/D 4310 user guide](http://yourpdfguides.com/dref/4854650)
<http://yourpdfguides.com/dref/4854650>