



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL AWO 3561/5. You'll find the answers to all your questions on the WHIRLPOOL AWO 3561/5 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual WHIRLPOOL AWO 3561/5
User guide WHIRLPOOL AWO 3561/5
Operating instructions WHIRLPOOL AWO 3561/5
Instructions for use WHIRLPOOL AWO 3561/5
Instruction manual WHIRLPOOL AWO 3561/5

CONTENTS

BEFORE USING THE WASHING MACHINE
PRECAUTIONS AND GENERAL
RECOMMENDATIONS
DESCRIPTION OF THE WASHING MACHINE
DOOR
CHILD SAFETY (IF AVAILABLE)
BEFORE THE FIRST WASH CYCLE
PREPARATION OF THE WASHING
DETERGENTS AND ADDITIVES
REMOVING THE FILTER
DRAINING RESIDUAL WATER
CARE AND MAINTENANCE
TROUBLESHOOTING GUIDE
AFTER SALES SERVICE
TRANSPORT / HANDLING
ELECTRICAL CONNECTION



[You're reading an excerpt. Click here to read official WHIRLPOOL AWO 3561/5 user guide](http://yourpdfguides.com/dref/4844704)
<http://yourpdfguides.com/dref/4844704>

Manual abstract:

fm Page 17 Thursday, December 30, 2004 10:53 AM CONTENTS BEFORE USING THE WASHING MACHINE PRECAUTIONS AND GENERAL RECOMMENDATIONS DESCRIPTION OF THE WASHING MACHINE DOOR CHILD SAFETY (IF AVAILABLE) BEFORE THE FIRST WASH CYCLE PREPARATION OF THE WASHING DETERGENTS AND ADDITIVES REMOVING THE FILTER DRAINING RESIDUAL WATER CARE AND MAINTENANCE TROUBLESHOOTING GUIDE AFTER SALES SERVICE TRANSPORT / HANDLING ELECTRICAL CONNECTION Black process 45.0° 100.0 LPI 30105536aGB.fm Page 18 Thursday, December 30, 2004 10:53 AM BEFORE USING THE WASHING MACHINE 1. Removing the packaging and inspection • After unpacking, make sure that the washing machine is undamaged. If in doubt, do not use the washing machine. Contact After-Sales Service or your local retailer • Check that the accessories and supplied parts are all present • Keep the packaging materials (plastic bags, polystyrene parts, etc.) out of reach of children, as they are potentially dangerous 5. Drain • Connect the drain hose to the siphon or hook it over the edge of a sink by means of the “U” bend supplied • If the washing machine is connected to an integrated drainage system, ensure the latter is equipped with a vent to avoid simultaneous loading and draining of water (siphoning effect) 6. Electrical connection • Electrical connections must be carried out by a qualified technician in compliance with the manufacturer's instructions and current standard safety regulations • Data regarding voltage, power consumption and protection requirements is given on the inside of the door.

• The appliance must be connected to the mains by means of a socket with an earth connection in accordance with current regulations. The washing machine must be earthed by law. The manufacturer declines all liability for damage to property or injury to persons or animals due to non-compliance with the directions given above • Do not use extension leads or multiple sockets • Before any maintenance on the washing machine disconnect it from the mains supply • After installation, access to the mains plug or to disconnection from mains supply must be ensured at all times via a double-pole switch • Do not operate the washing machine if it has been damaged during transport. Inform the After-Sales Service • Mains cable replacement is only to be carried out by After-Sales Service • The appliance must only be used in the household for the prescribed uses 2. Remove the transport bolts • The washing machine is fitted with transport bolts to avoid any possible damage to the interior during transport.

Before using the machine, it is imperative that the transport bolts are removed 3. Install the washing machine • Remove the protective film from the control panel • Move the appliance without lifting it by the worktop • Install the appliance on a solid and level floor surface, preferably in a corner of the room • Make sure that all four feet are stable and resting on the floor and then check that the washing machine is perfectly level (use a spirit level). 4. Water inlet • Connect the water supply inlet hose in accordance with the regulations of your local water company • Water inlet: Cold water only • Water tap: 3/4” threaded hose connector • Water pressure (flow pressure): 100-1000 kPa (1-10 bar). Minimum housing dimensions: Width: Height: Depth: 600 mm 825 mm 600 mm 18 Black process 45.

0° 100.0 LPI 30105536aGB.fm Page 19 Thursday, December 30, 2004 10:53 AM PRECAUTIONS AND GENERAL RECOMMENDATIONS 1. Packaging • The packaging material is entirely recyclable, and marked with the recycling symbol . Adhere to current local regulations when disposing of packaging material 3. General recommendations • Do not leave the appliance plugged in when not in use • Turn off the tap • Before any cleaning and maintenance switch off the machine or disconnect it from the mains • Clean the outside of the washing machine with a damp cloth. Do not use abrasive detergents • Never open the door forcibly or use it as a step • Children must not be allowed to play with the washing machine or to climb into the drum (see also the following page chapter “Child Safety”) • If necessary, the power cable may be replaced with an identical one obtained from our AfterSales Service. The power cable must only be replaced by a qualified technician 2. Disposing of packaging and scrapping old washing machines • The washing machine is built from reusable materials. It must be disposed of in compliance with current local waste disposal regulations • Before scrapping, remove all detergent residues and cut off the power cable so that the washing machine is made unusable 4.

EC Declaration of Conformity • The appliance conforms to the following European Standards: Low voltage directive 73/23/EEC 89/336/EEC Electromagnetic Compatibility Directive 93/68/EC CE Marking Directive. 19 Black process 45.0° 100.0 LPI 30105536aGB.fm Page 20 Thursday, December 30, 2004 10:53 AM DESCRIPTION OF THE WASHING MACHINE 1. 2. 3. 4. 5. 6.

7. 8. 9. @@@@1. Open the tap.

2. Close the door. . 3. @@Select and start a short programme (see quick reference guide).

20 Black process 45.0° 100.0 LPI 30105536aGB.fm Page 21 Thursday, December 30, 2004 10:53 AM PREPARATION OF THE WASHING 1. Sort the laundry according to... • Type of fabric / care label symbol Cottons, mixed fibres, easy care/synthetics, wool, handwash items • Colour Separate coloured and white items. Wash new coloured articles separately • Loading Wash items of different sizes in the same load to improve washing efficiency and distribution in the drum. • Delicates Wash small items (e.

g. nylon stockings, belts etc.) and items with hooks (e.g. bras) in a cloth bag or pillow case with zip. Always remove curtain rings or wash curtains with the rings inside a cotton bag Stain removal • Blood, milk, eggs etc. are generally removed by the automatic enzyme phase of the programme • To remove red wine, coffee, tea, grass and fruit stains etc. add a stain remover to the detergent dispenser chamber • Pre-treat heavily-soiled areas with stain remover if necessary Dyeing • Only use dyes that are suitable for washing machines • Follow the Manufacturer's instructions • Plastic and rubber parts of the washing machine can be stained by dyes Loading the laundry 1. Open the door. 2.

Load the articles one at a time loosely into the drum, without overfilling. Observe the load sizes given in the quick reference guide. Note: overloading the machine will result in unsatisfactory washing results and creased laundry 3. Close the door. 2. Empty all pockets Coins, safety pins etc. can damage your laundry as well as the appliance drum and tub. 3. Fasteners Close zips and fasten buttons or hooks; Loose belts or ribbons should be tied together DETERGENTS AND ADDITIVES The choice of detergent depends on: • type of fabric (cottons, easy care/synthetics, delicate items, wool).



[You're reading an excerpt. Click here to read official WHIRLPOOL](http://yourpdfguides.com/dref/4844704)

[AWO 3561/5 user guide](http://yourpdfguides.com/dref/4844704)

<http://yourpdfguides.com/dref/4844704>

Note: Use only specific detergents for washing wool • colour • the wash temperature • degree and type of soiling Remarks: Any whitish residues on dark fabrics are caused by insoluble compounds used in modern phosphate-free powder detergents.

If this occurs, shake or brush out the fabric or use liquid detergents. Use only detergents and additives specifically produced for domestic washing machines.

When using descaling agents, dyes or bleaches for the pre-wash, make sure that they are suitable for use in domestic washing machines. Descalers could contain products which could damage your washing machine. Do not use any solvents (e.g. turpentine, benzene). Do not machine wash fabrics that have been treated with solvents or flammable liquids. Dosage Follow the dosage recommendations on the detergent pack. They depend on: • degree and type of soiling • size of wash follow the detergent manufacturer's instructions for a full load; half load: 3/4 the amount used for a full load; Minimum load (about 1 kg): 1/2 the amount used for a full load • water hardness in your area (ask for information from your water company).

Soft water requires less detergent than hard water (refer to the water hardness table in the operating instructions). 21 Black process 45.0° 100.0 LPI 30105536aGB.fm Page 22 Thursday, December 30, 2004 10:53 AM Notes: Too much detergent can result in excess foam formation, which reduces washing efficiency. If the washing machine detects too much foam, it may prevent spinning. Insufficient detergent may result in grey laundry in time and also calcifies the heating system, drum and hoses. Water Hardness Chart Water hardness 1 2 3 4 Characteristics soft average hard very hard German °dH 0-7 7-14 14-21 over 21 French °fH 0-12 12-25 25-37 over 37 English °eH 0-9 9-17 17-26 over 26 Where to put detergent and additives The detergent drawer has three chambers (fig. "A"). Chamber • Detergent for the prewash Chamber • Detergent for the main wash • Stain remover • Water softener (water hardness class 4)

When using liquid detergent, remove the coloured insert from the detergent container and insert it in the first gap in chamber (fig. "A"). The insert has a scale to make dosing easier. Chamber • Fabric Softener • Liquid starch Only pour additives in up to the "MAX" mark. A Notes: • Keep detergents and additives in a safe, dry place out of the reach of children. • Liquid detergents can be used for programmes with prewash.

In this case, a powder detergent must be used for the main wash. • To prevent dispensing problems when using highly concentrated powder and liquid detergents, use the special detergent ball or bag supplied with the detergent and place it directly inside the drum. • When using descaling agents, bleaches or dyes, make sure that they are suitable for washing machines. Descalers could contain components that can attack parts of your washing machine. • Do not use any solvents in the washing machine (e.

g. turpentine, benzene). • If you use starch powder, proceed as follows: 1. Wash your laundry using the desired wash programme. 2. Mix the starch to water in a beaker. 3. Select the "Rinse and Spin" programme, reduce the speed to 800 rpm and start the programme. 4. @@ Pour the starch solution into chamber .

while the water is running into the detergent drawer. 6. @@@@ • If the pump is blocked by a foreign body (e.g. @@1. Stop the appliance and unplug it. 2.

Open the filter cover. @@3. Place a container beneath it.

4. Open the filter but do not remove it completely. @@5. Wait until all the water has drained. 6.

Now unscrew the filter completely and remove it. 7. Clean the filter and the filter chamber. 8. Check that the pump rotor moves freely.

9. @@10. Pour about 1 litre of water water is entering. @@@@ • the water tap is closed. @@ Open the tap and press the "Start/Pause" button.

@@@@ Close the door and press the "Start/Pause" button again. @@ If individual heavy items are loaded (e.g. @@@@ @@@@ @@@@ @@@@ For models with fault display, the "Water tap closed" indicator lamp lights up or "FH" flashes on the display. For models with LCD display, the display shows:

For models with no fault display, the washing machine stops in the appropriate programme step.

Stop the appliance and unplug it. 26 Black process 45.0° 100.0 LPI 30105536aGB.fm Page 27 Thursday, December 30, 2004 10:53 AM b. Draining fault Waste water not pumped out. In models with LCD display, the display shows: For models with a fault display, depending on the model, "FP" lights up and remains lit or flashes. If a "Clean pump" indication is fitted, the red indication next to it lights up. For models with no fault display, the washing machine stops in the appropriate programme step. Stop the appliance and unplug it.

Check whether: • kinks are present in the drain hose; • the pump or the filter is blocked (see "Removing the filter") IMPORTANT: make sure the water has cooled before draining the appliance. • the drain hose is frozen up Plug in the appliance once again. Select and start the "Drain/Reset" programme. If the fault occurs again, please contact After Sales Service (see "After Sales Service"). c.

Fault in an electrical component The appliance stops during the programme. If a digital or LCD display is fitted, "F4" to "F31" are also displayed. Select and start the "Drain" or "Reset" programme. Next, select and start the desired programme. For models with no fault display, the washing machine stops in the appropriate programme step.

Switch the washing machine off and back on again to continue the programme. If the fault persists, please contact After Sales Service (see "After Sales Service"). d. Water Stop fault (if available) The "Water Stop" may have been triggered by: 1. excess foaming 2. a leak in the washing machine In this case the pump is switched on automatically in order to drain the water In models with LCD display, the display shows: "Water Stop Fault" For models with a fault display, the "Water Stop" indicator light lights up. The display shows "FA" or alternately "F" and "A" and the pump is running. Switch off the appliance, unplug it and make sure that the water tap is closed. Carefully tilt the appliance forwards to allow the water to flow out. Then: 1.

Plug in the appliance. 2. Turn the water tap on (if water immediately flows into the appliance again, without the appliance running, there is a fault. Shut the water tap, then call After-Sales Service). 3. Select and start the desired programme again. 27 Black process 45.0° 100.0 LPI 30105536aGB.fm Page 28 Thursday, December 30, 2004 10:53 AM AFTER SALES SERVICE Before contacting After Sales Service: 1.

Try to remedy the problem yourself (see "Troubleshooting Guide").



[You're reading an excerpt. Click here to read official WHIRLPOOL](#)

[AWO 3561/5 user guide](#)

<http://yourpdfguides.com/dref/4844704>

2. Restart the programme to check whether the problem has solved itself. 3. If the washing machine continues to function incorrectly, call After Sales Service. Specify: • The nature of the problem. • The washing machine model. @@ • Your full address. • Your telephone number and area code. @@@@2.

3. 4. Pull out the mains plug. Turn off the tap. Disconnect the inlet and drain hoses. @@5. Fit the transit bolts (obligatory) 28 Black process 45.0° 100.0 LPI 30105536aGB.fm Page 29 Thursday, December 30, 2004 10:53 AM ELECTRICAL CONNECTION For Great Britain only Warning - this appliance must be earthed Fuse replacement If the mains lead of this appliance is fitted with a BS 1363A 13amp fused plug, to change a fuse in this type of plug use an A.

S.T.A. approved fuse to BS 1362 type and proceed as follows: 1. Remove the fuse cover (A) and fuse (B). 2. Fit replacement 13A fuse into fuse cover. 3. Refit both into plug. Important: The fuse cover must be refitted when changing a fuse and if the fuse cover is lost the plug must not be used until a correct replacement is fitted.

Correct replacement are identified by the colour insert or the colour embossed in words on the base of the plug. Replacement fuse covers are available from your local electrical store. For the Republic of Ireland only The information given in respect of Great Britain will frequently apply, but a third type of plug and socket is also used, the 2-pin, side earth type. Socket outlet / plug (valid for both countries) If the fitted plug is not suitable for your socket outlet, Please contact Whirlpool Service for further instruction. Please do not attempt to change plug yourself.

This procedure needs to be carried out by a qualified Whirlpool technician in compliance with the manufactures instructions and current standard safety regulations. 29 Black process 45.0° 100.0 LPI.



[You're reading an excerpt. Click here to read official WHIRLPOOL AWO 3561/5 user guide](http://yourpdfguides.com/dref/4844704)
<http://yourpdfguides.com/dref/4844704>