



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL AWO 5125. You'll find the answers to all your questions on the WHIRLPOOL AWO 5125 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual WHIRLPOOL AWO 5125
 User guide WHIRLPOOL AWO 5125
 Operating instructions WHIRLPOOL AWO 5125
 Instructions for use WHIRLPOOL AWO 5125
 Instruction manual WHIRLPOOL AWO 5125


GB AWO 5125

A. "Door open" indication

This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately, e.g.:

- B. "Service" indication
- C. "Water tap closed" indication
- D. "Clean pump" indication

PROGRAMME CHART

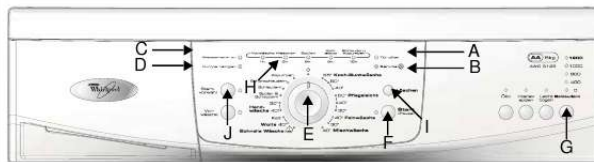

- E. Programme selector
- F. "Start/Pause" button
- G. Spin speed selector
- H. Programme sequence indicator
- I. "Reset" button
- J. "Start delay" button

Programme	Care Labels	Type of wash/Notes <i>- for temperature selection, respect the manufacturer's recommendations on the care label</i>	Max Load kg	Detergents and additives			Special options					Max Spin Speed rpm
				Pre-wash	Main Wash	Softener	Start delay Start- vorwahl	Pre-wash Vor- wäsche	Eco Öko	Intensive rinse Intensiv Spülen	Easy ironing Leicht Eiseln	
Cotton 40 - 60 - 95 °C	Koch-Buntwäsche 40 - 60 - 95 °C	Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. With heavily soiled laundry the additional "Pre-wash" option can be selected as well.	5.0	*	Yes	*	*	*	*	*	*	1200
Synthetics 30 - 40 - 60 °C	Pflegeleicht 30 - 40 - 60 °C	Normally soiled blouses, shirts, overalls etc. made of polyester (Diofen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2.5	*	Yes	*	*	*	*	*	*	1000 ¹⁾
Delicates 30 - 40 °C	Feinwäsche 30 - 40 °C	Curtains and delicate clothing, dresses skirts, shirts and blouses.	1.5	*	Yes	*	*	*	—	—	*	1000 ¹⁾
Daily load 40 °C	Mischwäsche 40 °C	Slightly to normally soiled textiles made of cotton and/or synthetics.	3.0	—	Yes	*	*	—	—	*	*	1200
Quick wash 30 °C	Schnelle Wäsche 30 °C	Shortly worn outer clothing made of cotton, polyester, polyamide and blends with cotton.	3.0	—	Yes	*	*	—	—	—	*	1200
Wool Cold - 40 °C	Wolle kalt - 40 °C	Only woollens with a felt-free finish, labelled with the woolmark and identified as machine washable.	1.0	—	Yes	*	*	—	—	—	*	1000 ¹⁾
Handwash 30 - 40 °C	Handwäsche 30 - 40 °C	Textiles made of linen, silk, wool and viscose marked as "handwashable".	1.0	—	Yes	*	*	—	—	—	*	400 ²⁾
Rinse & Spin	Spülen & Schleudern	Same as the last rinse and the final spin in the "Cotton" programme.	5.0	—	—	*	*	—	—	*	—	1200
Spin	Schleudern	In this programme spinning is intensive. Same as the spin cycle in the "Cotton" programme.	5.0	—	—	—	*	—	—	—	*	1200
Gentle Spin	Schonschleudern	In this programme spinning is gentle. Same as the spin cycle in the "Wool" programme.	1.0	—	—	—	*	—	—	—	*	1000 ¹⁾
Drain	Abpumpen	Water is drained only without any spinning	—	—	—	—	—	—	—	—	—	—

*: optional / Yes: dosing required
¹⁾ For improved garment care, spin speed is restricted to 1000 rpm in this programme.
²⁾ For improved garment care, spin speed is restricted to 400 rpm in this programme.

Whirlpool is a registered trademark of Whirlpool USA
 5019 301 10268



[You're reading an excerpt. Click here to read official WHIRLPOOL AWO 5125 user guide](http://yourpdfguides.com/dref/4914850)
<http://yourpdfguides.com/dref/4914850>

Manual abstract:

"Door open" indication This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately, e.g.: B. "Service" indication C. "Water tap closed" indication D. "Clean pump" indication PROGRAMME CHART E. F. G. H. Programme selector "Start/Pause" button Spin speed selector Programme sequence indicator C D H J E F I A B G and Start delay indicators I.

"Reset" button J. "Start delay" button Type of wash/Notes Programme Care Labels - for temperature selection, respect the manufacturer's recommendations on the care label Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. @@Normally soiled blouses, shirts, overalls etc. @@Curtains and delicate clothing, dresses skirts, shirts and blouses.

@@Shortly worn outer clothing made of cotton, polyester, polyamide and blends with cotton. Only woollens with a felt-free finish, labelled with the woolmark and identified as machine washable. Textiles made of linen, silk, wool and viscose marked as "handwashable". Max Detergents and additives Load Pre- Main Softener wash Wash kg Special options Start delay Prewash Eco Öko Intensive Easy rinse ironing Intensiv Spülen Variable spin Max Spin Speed rpm StartVorvorwahl wäsche Leicht Schleudern Bügeln 40 - 60 - 95 °C Cotton Koch-Buntwäsche 40 - 60 - 95 °C 5.0 □ Yes □ □ □ □ □ □ □ 1200 30 - 40 - 60 °C Synthetics Delicates 30 - 40 °C 40 °C 30 - 40 - 60 °C Pflegeleicht Feinwäsche 30 - 40 °C 40 °C 2.

5 1.5 3.0 3.0 1.0 1.0 5.0 5.0 1.0 — □ □ ————— Yes Yes Yes Yes Yes Yes ————— □ □ □ □ □ □ □ ——— □ □ □ □ □ □ □ □ — □ □ ————— □ ————— □ — □ — □ □ □ □ □ □ □ □ — 1000 1) 1000 1) 1200 1200 1000 1) 400 2) 1200 1200 1000 1) — Daily load Mischwäsche □ ——— □ ————— Quick wash 30 °C Schnelle Wäsche 30 °C Cold - 40 °C Wool kalt - 40 °C Wolle Handwash 30 - 40 °C Handwäsche 30 - 40 °C Rinse & Spin Spin Gentle Spin Drain Spülen & Schleudern Schleudern Schonschleudern Abpumpen ——— Same as the last rinse and the final spin in the "Cotton" programme. In this programme spinning is intensive.

Same as the spin cycle in the "Cotton" programme. In this programme spinning is gentle. Same as the spin cycle in the "Wool" programme. Water is drained only without any spinning. □ ——— □: 1) 2) optional / Yes : dosing required For improved garment care, spin speed is restricted to 1000 rpm in this programme. For improved garment care, spin speed is restricted to 400 rpm in this programme. Whirlpool is a registered trademark of Whirlpool USA 5019 301 10268 CONSUMPTION DATA Programme Cotton Cotton Cotton with "Eco"*** Cotton Synthetics Synthetics Delicates Daily load Quick wash Wool Handwash Handwash Temperature (°C) 95 60 60 40 60 40 30 40 30 40 40 30 Load (kg) 5.0 5.0 5.0 5.

0 2.5 2.5 1.5 3.0 3.
0 1.0 1.0 1.0 Water (l) 54** 49 49 49 50** 45 50 45 40 55 45 45 Energy (kWh) 1.90 1.
05 0.95 0.60 0.70 0.55 0.50 0.45 0.40 0.60 0.60 0.

50 Approx. Programme Duration (hours : minutes)* 2:00 2:10 2:20 2:00 1:30 1:15 0:45 1:00 0:30 0:45 0:40 0:40 START DELAY The "Start Delay" allows to run the machine at the consumer's convenience, for example at night when electricity is cheaper. •Select programme, temperature and options. •Press the "Start Delay" button to select the delay time by 1, 3, 6, 9 or 12 hours. •Press the "Start/Pause" button. The indication next to the "Start Delay" button lights up and goes off when the programme starts. •Once having pressed the "Start/Pause" button, the countdown of the time delay begins. When the programme starts, the start delay indicator light goes off and is replaced by the programme sequence indication. •After the "Start/Pause" button has been pressed, the number of hours preselected can be reduced by pressing again the "Start Delay" button. To cancel the "Start Delay".

.before you press the "Start/Pause" button: •Turn the programme selector to another position or press the "Reset" button.

@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@ "Clean pump" Waste water is not pumped out. @@@@1. Turn the programme selector to the "Off/O" position.

2. Close the water tap. 3. Open the door and unload the machine. 4.

Leave the door ajar to allow the drum to dry. CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START 1. Press the "Start/Pause" button to pause the programme. The light flashes. 2. @@3. Press the "Start/Pause" button again. @@Do not add detergent for this programme. @@ • Press the "Reset" button for at least 3 seconds. @@@@* The remaining time indicator can deviate from the values in the table, because it takes into account the household conditions applicable at that time.

** To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out. *** Reference Programme for Energy Label. ADD DETERGENTS, CLOSE THE DOOR AND SELECT THE PROGRAMME Add detergent as indicated on the front page and as described in the chapter "Detergent and Additives" in your Instructions for Use. Close the door and turn the programme selector to the desired programme and temperature. The indication lamp next to the "Start/Pause" button flashes. SELECT ANY DESIRED OPTION Push the button(s) of any option(s) desired - the respective indication lights up. When the combination of programme and additional option(s) is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically. "Prewash" button • Only for heavily soiled loads (for example sand, granular dirt) sensible. Increases the cycle time by approximately 15 min.

"Eco" button • With a modified temperature profile and a slightly prolonged washing duration, the optimum combination of excellent washing result and even lower energy consumption is achieved. "Intensive rinse" button • More water is added and rinse cycle is prolonged. • This option is particularly suitable for areas with very soft water, washing baby linen and helps people with allergies. @@@@ • Press the button to set another spin speed.



[You're reading an excerpt. Click here to read official WHIRLPOOL](#)

[AWO 5125 user guide](#)

<http://yourpdfguides.com/dref/4914850>

• If spin speed "0" is selected, the final spinning is cancelled but intermediate spin peaks remain during rinse.
The water is drained out only. Whirlpool is a registered trademark of Whirlpool USA 5019 301 10268 .



[You're reading an excerpt. Click here to read official WHIRLPOOL](#)

[AWO 5125 user guide](#)

<http://yourpdfguides.com/dref/4914850>