



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL AWOE 91200/1 SILVER. You'll find the answers to all your questions on the WHIRLPOOL AWOE 91200/1 SILVER in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual WHIRLPOOL AWOE 91200/1 SILVER
User guide WHIRLPOOL AWOE 91200/1 SILVER
Operating instructions WHIRLPOOL AWOE 91200/1 SILVER
Instructions for use WHIRLPOOL AWOE 91200/1 SILVER
Instruction manual WHIRLPOOL AWOE 91200/1 SILVER

CONTENTS

DEFINITION OF USE
BEFORE USING THE WASHING MACHINE
PRECAUTIONS AND GENERAL
RECOMMENDATIONS
DESCRIPTION OF THE WASHING MACHINE
DOOR
BEFORE THE FIRST WASH CYCLE
PREPARATION OF THE WASHING
DETERGENTS AND ADDITIVES
DRAINING RESIDUAL WATER/
REMOVING THE FILTER
CARE AND MAINTENANCE
TROUBLESHOOTING GUIDE
AFTER-SALES SERVICE
ACCESSORIES
TRANSPORT/HANDLING
ELECTRICAL CONNECTION



[You're reading an excerpt. Click here to read official WHIRLPOOL AWOE 91200/1 SILVER user guide](http://yourpdfguides.com/dref/4842596)
<http://yourpdfguides.com/dref/4842596>

Manual abstract:

Contact After-Sales Service or your local retailer. @@ • If the appliance was exposed to the cold prior to delivery, keep it at room temperature for a few hours before operating. • Water pressure (flow pressure): 100-1000 kPa (1-10 bar). • Use only new hoses to connect the washing machine to the water supply. Used hoses must not be used and should be discarded. 5.Drain • Connect the drain hose to the siphon or hook it over the edge of a sink by means of the "U" bend supplied. • If the washing machine is connected to an integrated drainage system, ensure the latter is equipped with a vent to avoid simultaneous loading and draining of water (siphoning effect). 2.Remove the transport bolts • The washing machine is fitted with transport bolts to avoid any possible damage to the interior during transport.

Before using the machine, it is imperative that the transport bolts are removed. • After their removal, cover the openings with the 4 enclosed plastic caps. 6.Electrical connection • Electrical connections must be carried out by a qualified technician in compliance with the manufacturer's instructions and current standard safety regulations. • Data regarding voltage, power consumption and protection requirements is given on the inside of the door. • The appliance must be connected to the mains by means of a socket with an earth connection in accordance with current regulations. The washing machine must be earthed by law. The manufacturer declines all liability for damage to property or injury to persons or animals due to non-compliance with the directions given above. • Do not use extension leads or multiple sockets. • Before any maintenance on the washing machine disconnect it from the mains supply. • After installation, access to the mains plug or to disconnection from mains supply must be ensured at all times via a double-pole switch. • Do not operate the washing machine if it has been damaged during transport. Inform the After-Sales Service. • Mains cable replacement is only to be carried out by After-Sales Service. • The appliance must only be used in the household for the prescribed uses. 3.Install the washing machine • Remove the protective film from the control panel (if available on your model). • Move the appliance without lifting it by the worktop. • Install the appliance on a solid and level floor surface, preferably in a corner of the room. • Make sure that all four feet are stable and resting on the floor and then check that the washing machine is perfectly level (use a spirit level).

• In case of wooden or so-called "floating floors" (for instance certain parquet or laminate floors), place the appliance on a 60 x 60 cm sheet of plywood at least 3 cm in thickness which is secured to the floor. • Make sure that the ventilation openings in the base of your washing machine (if available on your model) are not obstructed by a carpet or other material. 4.Water inlet • Connect the water supply inlet hose in accordance with the regulations of your local water company. Cold water only • Water inlet: (if no other information on your programme chart) 3/4" threaded hose • Water tap: connector Minimum housing dimensions: Width: Height: Depth: GB 2 600 mm 850 mm 600 mm PRECAUTIONS AND GENERAL RECOMMENDATIONS 1.Safety instructions • The washing machine is appropriate for indoor use only. • Do not store flammable fluids near the appliance. • Children must be supervised to ensure that they do not play with the appliance. • This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. • If you want to place a dryer on top of your washing machine, first contact our After-Sales Service or your specialist dealer to verify if this is possible. Placing a dryer on your washing machine is only admitted if the dryer is fixed on the washing machine by using an appropriate stacking kit available through our After-Sales Service or your specialist dealer. • Do not leave the appliance plugged in when not in use. • Turn off the tap when not in use. • Before any cleaning and maintenance switch off the machine or disconnect it from the mains. • Never open the door forcibly or use it as a step. • If necessary, the power cable may be replaced with an identical one obtained from our AfterSales Service. The power cable must only be replaced by a qualified technician. health, which could otherwise be caused by inappropriate waste handling of this product. The symbol on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

4.Energy saving The water consumption of your washing machine is optimized; in some programmes you therefore cannot see the water through the door glass when the machine is in operation. • Achieve the best use of energy, water, detergent and time by using the recommended maximum load size. • Do not exceed the detergent dosages indicated in the manufacturer's instructions. • The Eco-Ball - a special system in the outlet - will prevent detergent loss from the drum to avoid detergent loss into the environment. • Use "Prewash" (if available on your model) for heavily soiled laundry only! Save detergent, time, water and energy consumption by not selecting "Prewash" for slightly to normally soiled laundry. • Pretreat stains with stain remover or soak dried in stains in water before washing to reduce the necessity of a hot wash programme. • Save energy by using a 60° C instead of a 95° C wash programme or a 40° C instead of a 60° C wash programme.

• Save energy and time by selecting a high spin speed to reduce the water content in laundry before using a tumble dryer. 2.Packaging • The packaging material is entirely recyclable, and marked with the recycling symbol. Adhere to current local regulations when disposing of packaging material. 3.Disposing of packaging and scrapping old washing machines • The washing machine is built from reusable materials. It must be disposed of in compliance with current local waste disposal regulations. • Before scrapping, remove all detergent residues and cut off the power cable so that the washing machine is made unusable.



[You're reading an excerpt. Click here to read official WHIRLPOOL AWOE 91200/1 SILVER user guide](http://yourpdfguides.com/dref/4842596)
<http://yourpdfguides.com/dref/4842596>

• This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human 5.

EC Declaration of Conformity • The appliance conforms to the following European Standards: 2006/95/EC Low Voltage Directive 2004/108/EC Electromagnetic Compatibility Directive GB 3 DESCRIPTION OF THE WASHING MACHINE 1. 2. 3. 4. 5.

6. 7. Worktop Control panel Detergent dispenser Service plate (inside the door) Door Pump access / filter behind plinth (and emergency hose, depending on the model) Adjustable feet DOOR To open the door, hold the door handle and pull the door. Close the door by pressing it without excessive force until it clicks shut. BEFORE THE FIRST WASH CYCLE To remove any residual water used in testing by the manufacturer, we recommend that you carry out a short wash cycle without laundry.

1. Open the tap. 2. Close the door. of the detergent dispenser. 3. Pour a little detergent (about 30 ml) into the main wash chamber 4. Select and start a short programme (see separate "Programme Chart"). GB 4 PREPARATION OF THE WASHING 1. Sort the laundry according to.

.. • Type of fabric / care label symbol Cottons, mixed fibres, easy care/synthetics, wool, handwash items. • Colour Separate coloured and white items. Wash new coloured articles separately. • Size Wash items of different sizes in the same load to improve washing efficiency and distribution in the drum. • Delicates Wash small items (e.g. nylon stockings, belts etc.) and items with hooks (e.

g. bras) in a cloth bag or pillow case with zip. Always remove curtain rings or wash curtains with the rings inside a cotton bag. Stain removal • Blood, milk, eggs etc. are generally removed by the automatic enzyme phase of the programme.

• To remove red wine, coffee, tea, grass and fruit stains etc. add a stain remover to the main wash chamber of the detergent dispenser. • Pre-treat heavily-soiled areas with stain remover if necessary. Dyeing and bleaching • Only use dyes and bleaches that are suitable for washing machines. • Follow the Manufacturer's instructions.

• Plastic and rubber parts of the washing machine can be stained by dyes or bleaches. Loading the laundry 1. Open the door. 2. Load the articles one at a time loosely into the drum, without overfilling. Observe the load sizes given in the programme chart. Note: overloading the machine will result in unsatisfactory washing results and creased laundry. 3. Close the door. 2.

Empty all pockets Coins, safety pins etc. can damage your laundry as well as the appliance drum and tub. 3. Fasteners Close zips and fasten buttons or hooks; loose belts or ribbons should be tied together. DETERGENTS AND ADDITIVES Keep detergents and additives in a safe, dry place out of the reach of children! The choice of detergent depends on: • Type of fabric (cottons, easy care/synthetics, delicate items, wool). Note: Use only specific detergents for washing wool and garments made of microfibrils (like sports or swimwear). • Colour. • The wash temperature. • Degree and type of soiling. Remarks: • Any whitish residues on dark fabrics are caused by insoluble compounds used in phosphate-free powder detergents.

If this occurs, shake or brush out the fabric or use liquid detergents. • Use only detergents and additives specifically produced for domestic washing machines. @@@@ • Do not use any solvents (e.g. turpentine, benzine).

@@@@@ Soft water requires less detergent than hard water (refer to the water: • Pull out the emergency hose from the washing machine's base.

@@@@@ • Proceed to clean the filter as described above. @@@@ • A little neutral detergent (non abrasive) can also be used. @@@@@@ To clean the dispenser drawer: 1. @@@2.

Remove the cover grid from the softener chamber. @@@3. Wash all the parts under running water. 4. Clean the dispenser compartment with a damp cloth. 5. @@@ If your supply hose has a transparent hose coating (fig. @@@@@@ Close the tap and loosen the inlet hose on the tap. 2. @@@3.

Now unscrew the inlet hose on the rear of the washing machine. 4. @@@5. Refit the mesh filter and screw the inlet hose on again. 6. Turn on the tap and ensure that the connections are completely water-tight. B Safety valve inspection window C GB 9 TROUBLESHOOTING GUIDE Your washing machine is equipped with various automatic safety functions. These enable faults to be detected in good time and the safety system can react appropriately. These faults are frequently so minor that they can be removed within a few minutes. Problem Appliance does not start, no indicator lamps are on Causes, Solutions, Tips • Plug is not properly inserted in socket.

• Socket or fuse does not function correctly (use a table lamp or similar appliance to test it). • the "On/Off" button has not been pressed (if available on your model). Appliance does not start • Door is not properly closed (see also "Child Safety"). although "Start/Pause" has • The "Child lock/Lock buttons" feature has been activated (if available been pressed on your model). To unlock the buttons, push the two buttons marked with the key symbol simultaneously and hold them at least for 3 seconds.

The key symbol on the display disappears and the programme can be started. Appliance stops during the • "Rinse hold" position of the "Variable spin" button is activated, and the "Rinse hold" programme, and the "Start/ symbol lights up in the programme sequence indicator. Press the "Start/ Pause" light blinks Pause" button to start the drain programme. • Programme has been changed - reselect desired programme and press "Start/Pause". • Programme has been interrupted and eventually door has been opened - close door and restart programme by pressing "Start/Pause".

• The appliance's safety system has been activated (see "Description of red indications" in your programme chart). • Water tap is not opened or water inlet hose is kinked or blocked ("Water tap closed" indication lights up). Detergent dispenser • Separator in main wash chamber is not correctly installed or not adapted to contains residues from use of powder and liquid detergent (see "Detergents And Additives"). detergent and/or additives • Water entering is not enough; the mesh filters of the water supply could be blocked (see "Care And Maintenance"). Appliance vibrates during • Transport bolts have not been removed; before using the washing spin cycle machine, it is imperative that the transport bolts are removed. • Appliance is not level / not standing firmly on all four feet (see separate "Installation Guide"). Final spin results are poor The appliance has an imbalance detection and correction system.



[You're reading an excerpt. Click here to read official WHIRLPOOL AWOE 91200/1 SILVER user guide](http://yourpdfguides.com/dref/4842596)
<http://yourpdfguides.com/dref/4842596>

If individual heavy items are loaded (e.g. bathrobes), this system may reduce the spin speed automatically or even interrupt the spin completely in order to protect the washing machine.

• Heavy item(s) prevented spinning; add smaller articles of laundry and repeat spin cycle. • Excessive foam formation prevented spinning; select and start "Rinse & Spin" programme. Avoid excessive detergent dosing (see "Detergents And Additives"). • "Variable spin" button has been set to a low spin speed. Detergent residues on whitish residues on dark fabrics are caused by insoluble compounds used in laundry after wash phosphate-free powder detergents. - avoid overdosing of detergent - use liquid detergent - select "Intensive Rinse" option if possible - brush out the fabric Programme time initially Normal capacity of the appliance to adapt to factors that can have an effect on displayed is lengthened / the wash programme time, e.g.: Excess of foam formation, load imbalance due shortened by a period of to heavy items of laundry, prolonged heating time resulting from reduced inlet time (only for appliances water temperature. having a display which Due to such influences, the programme time is recalculated and updated if indicates the remaining necessary. On the display, an animation appears during such update programme time) periods.

GB 10 Description of red indications Indication on big display (if available on your model) Description Causes Solutions Appliance has no or insufficient water supply. The "Start/Pause" light blinks. Check whether: • Water tap is fully open and water supply pressure is sufficient. • Kinks are present in the water inlet hose. • Mesh filter of water supply hose is blocked (see "Care And Maintenance").

• The water hose is frozen up. • The safety valve inspection window of your water supply hose is red (provided your appliance has a water supply hose as shown on picture "B" - see previous chapter "Care And Maintenance"); replace the hose by a new one available through our After-Sales Service or your specialist dealer. After problem has been removed, restart programme by pressing "Start/Pause". If the fault occurs again, contact our After-Sales Service (see next chapter). Waste water is not pumped out.

The appliance stops in the corresponding programme step; unplug it and check whether: • Kinks are present in the drain hose, or the hose is blocked for another reason. • Filter or pump is blocked (see chapter "Draining Residual Water/ Removing The Filter"); make sure the water has cooled before draining the appliance). • The drain hose is frozen up. After problem has been removed, push the "Reset" button for at least 3 seconds; afterwards restart the desired programme. If the fault occurs again, contact our After-Sales-Service (see next chapter). Red indication lights up "Water tap closed" --- "Clean pump" --- GB 11 Red indication lights up Indication on display Description Causes Solutions "Electrical module fault" Push the "Reset" button for at least 3 seconds.

"Electrical module fault" Make sure that the water tap is open. @@@@ Turn the programme selector to a wash programme again, shortly press the "Reset/Drain" button and press "Start /Pause" within 15 seconds to start the Drain programme. "Waterstop fault" Turn the programme selector to the "Off/O" position, pull out the mains plug and turn the water tap off. Tilt the appliance forward carefully to allow collected water to flow out from the bottom.

Then: • Plug in the appliance again. • Turn the water tap on (if water immediately flows into the appliance without the appliance being started, there is a failure; turn off the tap and notify the After-Sales Service). • Select and start the desired programme again. "Overfoaming" Too much foam interrupted the wash programme. • Select and start the "Rinse & Spin" programme. • Afterwards select and start the desired programme again, using less detergent. If any of the faults described above persist, unplug the appliance, turn off the water tap and contact our After-Sales Service (see next chapter). from "F02" to "F35" (except "F24") from "F40" to "F43" "F24" "F02" or "FA" "Service" "Fod" GB 12 AFTER-SALES SERVICE Before contacting After-Sales Service: 1. Try to remedy the problem yourself (see "Troubleshooting Guide"). 2.

Restart the programme to check whether the problem has solved itself. 3. If the washing machine continues to function incorrectly, call our After-Sales Service. The After-Sales Service sticker can be found inside the door. • Your full address.

• Your telephone number and area code. After-Sales Service phone numbers and addresses are given on the guarantee card. Alternatively, consult the dealer where you purchased the appliance. Specify: • The nature of the problem. • The washing machine model.

• The service code (number after the word SERVICE). ACCESSORIES For some models, you can obtain via our AfterSales Service or your specialist dealer: • a Pedestal Drawer which can be installed beneath your washing machine. It raises your machine to allow for more comfortable loading and unloading, as you now no longer need to bend as far to access the door. Furthermore, it offers a great space-management tool and storage solution. • a Stacking Kit Shelf, by which your dryer can be fixed on top of your washing machine to save space and to facilitate loading and unloading your dryer in that high position.

TRANSPORT/HANDLING Never lift the appliance by the worktop when transporting. 1. 2. 3. 4.

5. Pull out the mains plug. Turn off the tap. Check that machine door and detergent dispenser are properly closed. Disconnect the inlet and drain hoses. Eliminate all water from the hoses and from the appliance (see "Draining Residual Water/ Removing The Filter"). 6. Fit the transport bolts (obligatory). GB 13 ELECTRICAL CONNECTION For Great Britain only Warning - this appliance must be earthed Fuse replacement If the mains lead of this appliance is fitted with a BS 1363A 13amp fused plug, to change a fuse in this type of plug use an A.S.

T.A. approved fuse to BS 1362 type and proceed as follows: 1. Remove the fuse cover (A) and fuse (B). 2.

Fit replacement 13A fuse into fuse cover. 3. Refit both into plug. Important: The fuse cover must be refitted when changing a fuse and if the fuse cover is lost the plug must not be used until a correct replacement is fitted. Correct replacement are identified by the colour insert or the colour embossed in words on the base of the plug.

Replacement fuse covers are available from your local electrical store.



[You're reading an excerpt. Click here to read official WHIRLPOOL AWOE 91200/1 SILVER user guide](http://yourpdfguides.com/dref/4842596)
<http://yourpdfguides.com/dref/4842596>

For the Republic of Ireland only The information given in respect of Great Britain will frequently apply, but a third type of plug and socket is also used, the 2-pin, side earth type. Socket outlet / plug (valid for both countries) If the fitted plug is not suitable for your socket outlet, Please contact After-Sales service for further instruction. Please do not attempt to change plug yourself. This procedure needs to be carried out by a qualified technician in compliance with the manufactures instructions and current standard safety regulations. GB 14 .



[You're reading an excerpt. Click here to read official WHIRLPOOL
AWOE 91200/1 SILVER user guide
http://yourpdfguides.com/dref/4842596](http://yourpdfguides.com/dref/4842596)