



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL AWT 2084. You'll find the answers to all your questions on the WHIRLPOOL AWT 2084 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual WHIRLPOOL AWT 2084  
User guide WHIRLPOOL AWT 2084  
Operating instructions WHIRLPOOL AWT 2084  
Instructions for use WHIRLPOOL AWT 2084  
Instruction manual WHIRLPOOL AWT 2084

## QUICK REFERENCE GUIDE

GB



### BEFORE USING THE APPLIANCE FOR THE FIRST TIME:

- **IMPORTANT: MAKE SURE YOU HAVE READ THE INSTALLATION INSTRUCTIONS.**
- **IMPORTANT: REMOVE THE TRANSPORT SCREWS AND THE TRANSPORT BRACKET.**
- **First wash cycle without laundry:**
  1. Open the tap(s).
  2. Close the drum flaps.
  3. Pour a small amount of detergent (about 30 ml) into the detergent dispenser compartment (1 + 2).
  4. Close the lid.
  5. Select a short wash programme and a low spin speed (see programme chart).
  6. Switch on the appliance.This will remove any water remaining in the machine from the manufacturer's test run.

### NORMAL DAILY USE:

1. Open the tap(s).
2. Sort the laundry according to fabric type and colour, and load the machine.
3. Close the drum flaps.
4. Add detergent and any additives required into the dispenser.
5. Close the lid.
6. Select the programme, temperature, spin speed and special options.
7. Switch on the appliance.

Read these user instructions carefully to learn about all the functions of your washing machine.

31



[You're reading an excerpt. Click here to read official WHIRLPOOL AWT 2084 user guide](http://yourpdfguides.com/dref/4852022)  
<http://yourpdfguides.com/dref/4852022>

**Manual abstract:**

**IMPORTANT: REMOVE THE TRANSPORT SCREWS AND THE TRANSPORT BRACKET.** First wash cycle without laundry: 1. Open the tap(s). 2. Close the drum flaps. 3. Pour a small amount of detergent (about 30 ml) into the detergent dispenser compartment . 4. Close the lid. 5. Select a short wash programme and a low spin speed (see programme chart). 6. Switch on the appliance. This will remove any water remaining in the machine from the manufacturer's test run. **NORMAL DAILY USE:** 1.

2. 3. 4. 5. 6.

7. Open the tap(s). Sort the laundry according to fabric type and colour and load the machine. Close the drum flaps. Add detergent and any additives required into the dispenser. Close the lid. Select the programme, temperature, spin speed and special options. Switch on the appliance. Read these user instructions carefully to learn about all the functions of your washing machine. 31 GB CONTENTS PAGE INSTALLATION INSTRUCTIONS WASHING MACHINE AND ACCESSORIES PROTECTING THE ENVIRONMENT SAFETY INSTRUCTIONS TRANSPORT / HANDLING PREPARING THE WASH DETERGENT AND ADDITIVES DYEING AND BLEACHING STARCHING REMOVING THE FOREIGN BODY TRAP DRAINING RESIDUAL WATER MAINTENANCE AND CLEANING TROUBLESHOOTING GUIDE AFTER-SALES SERVICE 33 36 37 37 37 38 39 39 39 40 40 41 43 44 PAGE PAGE PAGE PAGE PAGE PAGE PAGE PAGE PAGE PAGE PAGE PAGE PAGE 32 INSTALLATION INSTRUCTIONS HOW TO UNPACK THE APPLIANCE 1.

Cut and remove the shrink-wrap. 2. Remove the top protection and the protection corners. 3. Remove the bottom protection by tilting and turning the appliance on one rear bottom corner. 4. Open the lid by pulling at the handle. Remove the polystyrene cushion. **HOW TO REMOVE THE TRANSPORT SCREWS AND THE TRANSPORT BRACKET** The appliance is fitted with the transport screws and the transport bracket to prevent internal damage while being moved. Before using the appliance, the transport bracket at the back **MUST** be removed.

1. Unscrew the two screws A and the four screws B with a flat screwdriver or a N° 8 hex nut screwdriver. 2. Remove the transport bracket. 3. Replace the four outer screws B into the machine again and tighten. 4. @@@@ @@@@ • If the floor is uneven, adjust the levelling feet as required (do not insert pieces of wood, cardboard etc. under the feet). • The appliance can be installed in a 40 cm width and 63 cm depth space.

Note: It is important to avoid blocking the openings on the underside of the appliance when installing on a carpet floor. **ADJUSTMENT OF THE APPLIANCE 1.** To move the appliance into its operating position: Pull the mobility lever situated on the bottom of the front (optional on certain models) a little bit by hand and pull it in the final driving position by foot. Afterwards push the mobility lever back into the original, stable position. The front feet can be adjusted in order to level the appliance. 2. Loosen the locknut using a wrench. 3. Adjust the height of the foot, turning it by hand. 4.

Tighten the locknut by turning it anti-clockwise towards the appliance casing. **IMPORTANT: Do not run the appliance while the mobility lever is pulled and the appliance is standing on the trolleys.** 33 **INSTALLATION INSTRUCTIONS WATER SUPPLY** • Water supply: cold water only • Tap: 3/4" threaded hose connection • Pressure: 100-1000 kPa (1-10 bar). Should the appliance be installed in a room which is subject to extremely low temperatures, you need to empty water at the end of each wash programme. Please follow the instructions given in the chapter titled "Draining Residual Water" and disconnect the water inlet hose. **WATER INLET HOSE(S) 1.** Carefully screw the hose connection to the tap preferably by hand. Make sure there are no kinks in the hose and that it is not crushed. 2. Check water-tightness of tap and appliance connections by turning the tap completely on.

• If the hose is too short, replace it with a suitable length of pressure resistant hose (1000 kPa min., EN 50084 approved type). • The appliance can be connected without a non-return valve. • Install the appliance in accordance with regulations of your local water company. For Great Britain & Ireland only: Water inlet: - hot (see A) fill hose; - and cold (see B) fill hose.

The warm water inlet temperature must not exceed 60° C. 34 **INSTALLATION INSTRUCTIONS DRAIN HOSE** • Drain hose connection to water outlet. 1. Unhook the drain hose from the right and left hose connection, see A in figure. Important: Do NOT loosen the drain hose connection from the clip on the right side, see B in figure, otherwise there is the risk of leakage (danger of scalding with hot water).

2. Fix the "U" bend supplied to the free end of the drain hose. 3. Fit the drain hose either to the siphon or hook it over the edge of a sink or bath tub with the "U" bend. Small hand basins are not suitable. The edge of the tub must be no higher than 100 cm above the floor. 4. If you need to add an extension, use a flexible hose of the same type and secure the unions with screw-on hose clips. Maximum overall drain hose length: 2.50 m.

Maximum drain height ("U" bend): 100 cm. Minimum drain height: 55 cm. Important: Make sure there are no kinks in the drain hose and take precautions against it falling while the appliance is running. **ELECTRICAL CONNECTIONS** • • Electrical connections must be made in accordance with local regulations. The appliance must be connected to the mains exclusively by means of a socket with an earth connection in accordance with established regulations. The appliance must be earthed by law. The manufacturer declines all liability for damage to property or injury to persons or animals deriving either directly or indirectly from failure to observe the above directions. The data of voltage, power consumption and the required electrical protection are supplied on the rear of the appliance. The electrical power cable must be replaced, if necessary, exclusively by original power cable by authorised Customer service. The appliance conforms to European safety regulations, EC directive n.

93/68/EC. Do not use extension leads or multisockets. • • • 35 **WASHING MACHINE AND ACCESSORIES 1.** 2. 3.

4. 5. 6. Lid Detergent dispenser Drum flaps Pump and foreign body trap Mobility lever (depending on model) After-Sales Service sticker (behind the foreign body trap cover). 36 **PROTECTING THE ENVIRONMENT** • Packing The packing material is 100% recyclable as indicated by the recycling symbol.

Appliance The appliance is built from recyclable materials. If you decide to scrap the appliance ensure you observe local waste disposal by-laws. @@@@ @@@@ Use low temperatures or short programmes for lightly soiled laundry. @@@@ @@@@ 93/68/EC. @@@@ @@@@ Do not attempt to force the lid open. Do not allow children to play with the appliance or enter the drum. @@ Unplug the appliance. 2. Turn off the tap(s). 3.

Remove the water supply and drain hose. 4. @@@@ 5. Replace the transport bracket. 6. Transport the washing machine upright. 37 **PREPARING THE WASH 1.** @@ • Colour Separate whites and coloured items.



[You're reading an excerpt. Click here to read official WHIRLPOOL AWT 2084 user guide](http://yourpdfguides.com/dref/4852022)  
<http://yourpdfguides.com/dref/4852022>

Wash new coloured items separately. @@@@ Use the special programme for handwash fabrics.

@@@2. @@3. @@ To remove red wine, coffee, tea, grass and fruit stains etc. add a stain removing agent or a chlorine bleach. Particularly stubborn stains should be treated before the wash.

• **LOADING THE LAUNDRY** 1. Lift the machine lid. 2. Open the drum by pressing the small flap and holding the large flap. 3.

Unfold the laundry and place it loosely in the drum. 4. Close the drum flaps carefully and check if they are properly locked. **LOAD CAPACITY** See the maximum load on the programme chart. • **Note:** Overloading will lead to unsatisfactory washing results and creased laundry. **38 DETERGENT AND ADDITIVES CHOOSING THE RIGHT DETERGENT** The type of detergent depends on: • type of fabric (cottons, synthetics, delicate items, wool). You can use any make or type of detergent recommended for domestic washing machines. **Note:** Use only specific detergents for wool. • colour; • washing temperature; • degree and type of soiling. **Notes:** • Whitish residues on dark fabrics are caused by insoluble water softeners used in modern phosphate-free powder detergents.

If you notice this problem, shake or brush the affected items or use a liquid detergent. • **Keep detergents and additives in a dry place and out of reach of children.** • Use only detergents and additives specifically produced for domestic appliances. If you use water softeners, descaling agents and dyes, make sure they are suitable for washing machine use. • **Do not use solvents (turpentine, benzine, etc.). Do not wash fabrics that have been treated with solvents or flammable liquids.** **DOSAGE** Follow the instructions on the detergent pack in relation to: • the degree and type of soiling; • the size of the load; - full load: follow the detergent manufacturer's instructions; - half load: 3/4 the amount used for a full load; - minimum load (about 1 kg): half the amount used for a full load; • water hardness in your area (ask for information from your water company): soft water requires less detergent than hard water. **Notes:** • Too much detergent can result in excess foam formation, which reduces washing efficiency. If the appliance detects excessive foam it may prevent spinning. • The laundry will become grey if you use too little detergent. Too little detergent will also lead to increased scale deposits on the heating element and drum. • If using chlorine bleach, follow the bleach instructions carefully and remove. A small quantity of water can remain in the soap dispenser. It is advisable to carry the dispenser in an upright position.

3. Wash the dispenser using running water. **Note:** The siphon caps in the dispenser are also removable for cleaning. 4. Replace the siphon caps in the dispenser (if removed).

Make sure that they lock in place. 5. Replace the dispenser by locating the bottom tabs in the door holes and pivot until both of the upper buttons lock. **WATER INLET HOSE(S)** • Periodically check the hose for brittleness and cracks and replace if necessary. **WATER HOSE MESH FILTERS** Check and clean regularly. Unplug the appliance. Turn off the tap. Unscrew the hose from the tap. Clean the mesh filter carefully under running water without removing it. 5.

Screw the hose connection back onto the tap by hand. 6. Unscrew the hose from the appliance. 7. Remove the filter from the appliance connection with pliers and clean it. 8. Refit the filter and screw the hose connection to the appliance. 9. Turn on the tap to check that the connections are completely watertight. 10.

Plug in the appliance to the electrical outlet. • 1. 2. 3. 4.

**41 MAINTENANCE AND CLEANING RECOVERING AN OBJECT THAT FALLS BETWEEN THE DRUM AND THE TUB** If accidentally an object falls between the drum and the tub you can recover it thanks to a removable plastic lifter: 1. Unplug the appliance. 2. Remove the laundry from the drum. 3. Close the drum flaps and turn the drum to the opposite of the flaps. 4. Press the plastic tip while sliding the plastic lifter from left to right. The plastic lifter will fall into the drum. 5. Open the drum: through the hole inside the drum you can recover the object. 6. Refit the plastic lifter from inside the drum: Position the plastic tip above the hole on the right side of the drum. Then slide the plastic lifter from right to left until it clips. 7.

Plug in the appliance to the electrical outlet. **42 TROUBLESHOOTING GUIDE** This appliance is equipped with safety functions which detect faults at an early stage and react appropriately. Often, however, the faults detected are small enough to be solved in a matter of minutes. Detergent and additive product residues in dispenser at end of wash. Check whether: • the siphon is correctly installed and clean (see "Maintenance and Cleaning" / "Dispenser Cleaning Instructions"); • enough water is being supplied. The mesh filters could be clogged (see "Maintenance and Cleaning" / "Water Hose Mesh Filters"). The appliance will not start, no lamp lights up. Check whether: • the appliance is plugged in; • the wall socket is functioning correctly (use a table lamp or similar). The appliance vibrates during the spin cycle. Check whether: • the appliance is level and solidly installed on all feet (see "Installation instructions"); • the transport screws and transport bar have been removed.

Before starting up the appliance, the transport screws and the transport bracket must be removed (see "Installation instructions"). The appliance will not start, but the pilot light is on. Check whether: • the appliance lid is properly closed; • a programme has been selected; • the programme is started; • the water tap is open. The appliance stops during the programme. Check whether: • the "Rinse Hold" button is pressed: terminate this option; • the water tap is open; • the pump / foreign body trap are blocked (see "Removing the Foreign Body Trap"); Final spin results are poor. • the appliance has an imbalance detection and correction system. If individual heavy articles are loaded (bathmat, bathrobe, etc.) this system may reduce the spin speed automatically to protect the appliance. @@ Use less detergent. @@@@ • the drain hose is frozen.

Reselect the desired programme and start again to continue with the programme (do not add detergent for this programme). If the fault re-occurs, contact After-Sales Service (see "After-Sales Service"). • the "Rinse Hold" button is pressed: terminate this option. **43 AFTER-SALES SERVICE** Before contacting After-Sales Service: 1. Try to solve the problem (see "Troubleshooting Guide"). 2. Restart the programme to see if the fault is repeated. If after the above checks the appliance does not work properly, get in touch with the nearest After-Sales Service Centre. Please give: • a short description of the fault, • the exact type and model of the appliance, • the number after the word SERVICE of the After-Sales Service sticker behind the foreign body trap cover, • Your complete address (including postal code) and telephone number.



[You're reading an excerpt. Click here to read official WHIRLPOOL AWT 2084 user guide](http://yourpdfguides.com/dref/4852022)  
<http://yourpdfguides.com/dref/4852022>