



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL AWT 2261 /1. You'll find the answers to all your questions on the WHIRLPOOL AWT 2261 /1 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual WHIRLPOOL AWT 2261 /1
 User guide WHIRLPOOL AWT 2261 /1
 Operating instructions WHIRLPOOL AWT 2261 /1
 Instructions for use WHIRLPOOL AWT 2261 /1
 Instruction manual WHIRLPOOL AWT 2261 /1

CB AWT 2261 /1

"Cold"
 "Machine Off"
 "No Spin"

Programme duration figures (guideline) are valid for maximum temperature wash with no special functions.

 * : option / Yes: dosing required
 †) Do not use liquid detergents.

| Programme | Type of wash / Notes | Max. load kg | Detergents and additives | | | | | Options | | | Temperature Selector °C | Maximum Spin Speed rpm | Programme time approx. min. |
|---------------------|---|-----------------|--------------------------|-----------|----------|--------|-----------------|-----------|------------|---------------|----------------------------|---------------------------|--------------------------------|
| | | | Prewash | Main Wash | Softener | Bleach | Intensive Rinse | Half Load | Rinse Hold | | | | |
| Cotton with Prewash | Heavily soiled sheets, tablecloths, underclothes, shirts etc. in hard wearing and high temperature resistant cotton. <i>The maximum load for heavily soiled washing is 3.5 kg.</i> | 5.0 | Yes †) | Yes | * | * | * | * | * | * | from 40 to 95 | 600 | 130 |
| Cotton | Moderately soiled sheets, tablecloths, underclothes, towels etc. in hard wearing and high temperature resistant cotton. | 5.0 | — †) | Yes | * | * | * | * | * | * | from 40 to 95 | 600 | 115 |
| Coloured | Average soiled blouses, shirts etc. made of polyester (Dolon, Trevira); polyamide (Perlon, Nylon), or cotton blends. | 2.0 | — †) | Yes | * | — | * | * | * | * | from 40 to 60 | 600 | 100 |
| Quick Wash | Blouses, shirts, cotton blouses, dark coloured terry towelling, jeans, etc. lightly soiled. | 5.0 | — †) | Yes | * | — | * | * | * | * | from 40 to 40 | 600 | 85 |
| Synthetics | Lightly soiled shirts, blouses etc., made of polyester (Dolon, Trevira), polyamide (Perlon, Nylon) or cotton blends. | 2.0 | — †) | Yes | * | — | * | * | * | * | from 40 to 40 | 600 | 70 |
| Rinse + Spin | This programme allows starch or softener to be added. <i>It is followed by an intensive spin cycle.</i> | 5.0 | — †) | — | * | — | — | * | * | 40 | 600 | 20 | |
| Spin | <i>Programme for intensive spin cycle.</i> | 5.0 | — †) | — | — | — | — | — | — | — | 600 | 15 | |
| Delicate | Delicate fabrics and curtains (dresses, skirts, shirts, blouses, etc.). | 1.5 | — †) | Yes | * | — | — | — | * | from 40 to 40 | 600 | 55 | |
| Wool | Machine washable woollens with pure new wool label. <i>If the "Rinse Hold" option is selected don't leave the wash to soak for too long.</i> | 1.0 | — †) | Yes | * | — | — | — | — | from 40 to 40 | 600 | 45 | |
| Rinse + Spin | This programme allows starch or softener to be added. <i>It is followed by a gentle spin cycle.</i> | 1.5 | — †) | — | * | — | — | — | * | 40 | 600 | 15 | |
| Spin | <i>Programme for gentle spin cycle.</i> | 1.5 | — †) | — | — | — | — | — | — | — | 600 | 10 | |
| Drain | <i>Drain only, without spin cycle. Alternative way to end programmes after a "Rinse Hold".</i> | — | — †) | — | — | — | — | — | — | — | — | 5 | |

N.B. This machine is controlled by sensors. Please avoid excessive detergent dosing.

Whirlpool is a registered trademark of Whirlpool USA.
5019 312 10053/A



[You're reading an excerpt. Click here to read official WHIRLPOOL AWT 2261 /1 user guide](http://yourpdfguides.com/dref/4918516)
<http://yourpdfguides.com/dref/4918516>

Manual abstract:

h : option / Yes: dosing required 1) Do not use liquid detergents. Temperature Selector Maximum Programme Spin time Speed approx. rpm min. Max. load Programme Type of wash / Notes kg Heavily soiled sheets, tablecloths, underclothes, shirts etc. in hard wearing and high temperature Cotton with resistant cotton. Prewash The maximum load for heavily soiled washing is 3.5 kg. Cotton Coloured Moderately soiled sheets, tablecloths, underclothes, towels etc. in hard wearing and high temperature resistant cotton.

Average soiled blouses, shirts etc. @@lightly soiled. @@This programme allows starch or softener to be added. It is followed by an intensive spin cycle. Programme for intensive spin cycle.

@@Machine washable woollens with pure new wool label. If the "Rinse Hold" option is selected don't leave the wash to soak for too long. This programme allows starch or softener to be added. It is followed by a gentle spin cycle. Programme for gentle spin cycle.

Drain only, without spin cycle. Alternative way to end programmes after a "Rinse Hold". 1) 1) 1) 1) — from from to 40 to 40 600 600 600 600 1) Yes Yes — — h h h — — h — 1) 1) h — — — 1) 600 — 1) N.B. This machine is controlled by sensors. Please avoid excessive detergent dosing. Whirlpool is a registered trademark of Whirlpool USA. 5019 312 10053/A ENERGY AND WATER CONSUMPTION DATA Programme Temperature Load Water Energy Programme time (min) 115 115 100 100 85 70 55 45 (°C) Cotton + Intensive Rinse Cotton Coloured Coloured Quick Wash + 1/2 Load Synthetics + 1/2 Load Delicate Wool 95 60 60 40 40 40 40 40 (kg) 5.0 5.0 2.

0 2.0 2.5 2.0 1.5 1.0 (l) 72 64 60 60 54 54 70 70 (kWh) 1.80 1.15 0.80 0.40 0.

50 0.40 0.65 0.55 Terminate the "Rinse Hold" option. • Press the "Rinse Hold" button again; the programme will terminate automatically with the spin cycle corresponding to the previously selected wash programme.

• If you do not wish to spin the clothes, switch off the appliance by turning the spin speed knob to the Off position " ". The pilot light goes out. Turn the programme selector to the "Drain" position and switch on the appliance. PROGRAMME START Open the water inlet tap and select the desired spin speed, turning the spin speed and "On/Off" knob to the desired position (the indicated spin speed or "No Spin"). The pilot lamp lights up.

DOOR LOCK During the running programme, the door cannot be opened. The door locks automatically in all programmes. If the programme is stopped or if an electrical power failure occurs, the door unlocks automatically after about 1 minute. PROGRAMME END • 1. 2. 3. 4. 5. The programme selector knob is at "STOP", the pilot lamp lights. Turn the spin speed knob to the Off position " ".

The pilot light goes out. Cancel the options by pressing the appropriate buttons. Turn the water supply tap off. Wait for the door to unlock (about 1 minute). Open the door and the drum flaps and unload the machine. 3. @@The pilot light lights. TO STOP, RESET A PROGRAMME BEFORE THE END 1. @@The pilot light goes out. 2.

Set the programme selector on "Drain". 3. @@@@To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out. PREPARATION OF WASH CYCLE 1. Close the drum flaps and check that they are properly locked.

2. Add detergents and additives into the dispenser to no more than the "MAX" level mark, as follows: • Programme with pre and main wash • Main wash programme without prewash • Fabric softeners and conditioners • Chlorine bleach • Stain remover agents • Anti-scale agents (if necessary) 3. Turn the programme selector knob clockwise to the desired programme. 4. Turn the temperature knob to the required temperature.

PRESS ANY DESIRED OPTION BUTTON(S) "Intensive Rinse" button • The water level increases for improved rinsing efficiency. • This option is particularly suitable for areas with very soft water when washing baby linen and helps people with skin allergies. • For improved garment care it is advised to use the option for the Cotton 90° C and the Coloured 60° C programme. "Half Load" button • Reduces the water consumption in the "Cotton" and "Synthetics" programmes especially during the rinse. • Especially suitable for lightly soiled or small loads (reduces the quantity of detergent). • Not suitable for high temperature programmes. "Rinse Hold" button • The laundry remains in the last rinse water, without progressing to the spin cycle to avoid creasing and prevent colours from changing. @@@@The pilot light goes out. 2. Select the new programme, temperature and options.

Whirlpool is a registered trademark of Whirlpool USA. 5019 312 10053/A.



[You're reading an excerpt. Click here to read official WHIRLPOOL](#)

[AWT 2261 /1 user guide](#)

<http://yourpdfguides.com/dref/4918516>