




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL AWT 5108/1. You'll find the answers to all your questions on the WHIRLPOOL AWT 5108/1 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual WHIRLPOOL AWT 5108/1
User guide WHIRLPOOL AWT 5108/1
Operating instructions WHIRLPOOL AWT 5108/1
Instructions for use WHIRLPOOL AWT 5108/1
Instruction manual WHIRLPOOL AWT 5108/1

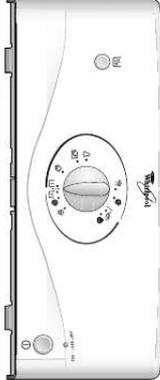

ⓘ "On/Off"

Programme duration figures (Gallitima) are valid for maximum temperature wash with no speed functions.

⊕ - color / Recycling symbol
① - Do not use third detergent.

Programme	Type of wash / Notes	Wash load (kg)	Programme duration (h:m)	Temperature (°C)	Maximum spin speed (rpm)	Programme zone (min.)
Wash	Heavily soiled cotton, polyester, undergarments, shirts etc. in warm washing and high temperature	5.0	1:15	90	400	130
Wash	Medium soiled cotton, polyester, undergarments, shirts etc. in warm washing and high temperature	5.0	1:00	90	400	115
Wash	Lightly soiled cotton, polyester, undergarments, shirts etc. in warm washing and high temperature	5.0	0:45	90	400	100
Wash	Very soiled polyester, shirts etc. in warm washing and high temperature	2.0	0:45	60	400	70
Wash	Very soiled polyester, shirts etc. in warm washing and high temperature	2.0	0:45	40	400	30
Wash	Programme for intensive stain cycle	5.0	1:15	90	400	130
Wash	Delicates (Delicate fabrics and garments (linens, silks, tulle, lace, etc.))	1.5	0:45	40	400	55
Wash	Wool (Wool, woolen, wool, synthetic wool, etc.)	1.0	0:45	40	400	45
Wash	Wool (Wool, woolen, wool, synthetic wool, etc.)	1.5	0:45	40	400	55
Wash	Wool (Wool, woolen, wool, synthetic wool, etc.)	1.5	0:45	40	400	55
Wash	Wool (Wool, woolen, wool, synthetic wool, etc.)	1.5	0:45	40	400	55

N.B. This machine is controlled by sensors. Please avoid excessive detergent dosing.

Whirlpool is a registered trademark of Whirlpool Corporation
5019 312 00008



[You're reading an excerpt. Click here to read official WHIRLPOOL AWT 5108/1 user guide](http://yourpdfguides.com/dref/4859396)
<http://yourpdfguides.com/dref/4859396>

Manual abstract:

The maximum load for heavily soiled washing is 3.5 kg. Moderately soiled sheets, tablecloths, underclothes, towels etc. in hard wearing and high temperature resistant cotton. Averagely soiled blouses, shirts etc. made of polyester (Diolen, Trevira); polyamide (Perlon, Nylon), or cotton blends. Lightly soiled shirts, blouses etc., made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or cotton blends. This programme allows starch or softener to be added. It is followed by an intensive spin cycle.

Programme for intensive spin cycle. Delicate fabrics and curtains (dresses, skirts, shirts, blouses, etc.). Machine washable woollens with pure new wool label. If the Rinse Hold option is selected don't leave the wash to soak for too long.

This programme allows starch or softener to be added. It is followed by a gentle spin cycle. Programme for gentle spin cycle. Drain only, without spin cycle. Alternative way to end programmes after a Rinse Hold .

Detergents and additives Prewash Main Wash Options Softener Bleach Half Load Temperature Maximum Spin Speed Programme time approx. °C rpm min.
5.0 5.0 2.0 2.0 5.0 5.0 1.5 1.

0 1.5 1.5 Yes 1) 1) Yes Yes 1) Yes 1) 90 400 130 Yes 1) 1) 1) 90 400 115 60 400 100 40 400 70 Cold 400 20 400 Yes Yes 1) 1) 1) 15 40 400 55 40 400 45 Cold 400 15 400 10 5 N.B. This machine is controlled by sensors. Please avoid excessive detergent dosing. Whirlpool is a registered trademark of Whirlpool USA. 5019 312 00008
Programme (°C) 90 60 60 40 30 40 40 (min) 115 115 100 100 70 55 45 (kg) 5.0 5.0 2.
0 2.0 1.0 1.5 1.0 (l) 72 72 66 66 54 70 70 (kWh) 1.
80 1.15 0.80 0.40 0.30 0.

65 0.55 ENERGY AND WATER CONSUMPTION DATA Temperature Load Water Energy Programme time DOOR LOCK TO STOP, RESET A PROGRAMME BEFORE THE END Cotton Cotton Coloured Coloured Synthetics + 1/2 Load Delicate Wool Prewash cycle increases programme duration approximately 15 min. @@@@The door locks automatically in all programmes. @@PROGRAMME END PREPARATION OF WASH CYCLE 1. Close the drum flaps and check that they are properly locked. 2. @@@@ Not suitable for high temperature programmes. @@@@1. Press the On/Off button. The pilot light goes out.

2. Cancel the options by pressing the appropriate buttons. 3. Turn the water supply tap off. 4. Wait for the door to unlock (about 1 minute). 5. Open the door and the drum flaps and unload the machine. 1. Press the On/Off button to switch off the appliance.

The pilot light goes out. 2. Set the programme selector on Drain . 3. Press the On/Off button to start the Drain programme.

Only open the door when the programme selector is at STOP and the door is unlocked (after approximately 1 minute). NOTES AND INDICATIONS FOR USE SELECTING A NEW PROGRAMME, SPIN SPEED, OPTIONS AFTER PROGRAMME START 1. Press the On/Off button to switch off the appliance. The pilot light goes out. 2.

Select the new programme and options. 3. Press the On/Off button to switch on the appliance. The pilot light lights. After switching your washing machine on, it does not start immediately: it needs some seconds in order to lock the door, fill water and then drum starts turning. Spinning has an interrupted start-up: the drum starts and stops running several times, to improve spin efficiency and to better balance the laundry. At the end of the spinning cycle the drum goes on reversing for some minutes: this helps you unloading the laundry. @@.



[You're reading an excerpt. Click here to read official WHIRLPOOL AWT 5108/1 user guide](http://yourpdfguides.com/dref/4859396)
<http://yourpdfguides.com/dref/4859396>