




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL AWT 5108/A. You'll find the answers to all your questions on the WHIRLPOOL AWT 5108/A in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual WHIRLPOOL AWT 5108/A
User guide WHIRLPOOL AWT 5108/A
Operating instructions WHIRLPOOL AWT 5108/A
Instructions for use WHIRLPOOL AWT 5108/A
Instruction manual WHIRLPOOL AWT 5108/A

GB AWT 5108

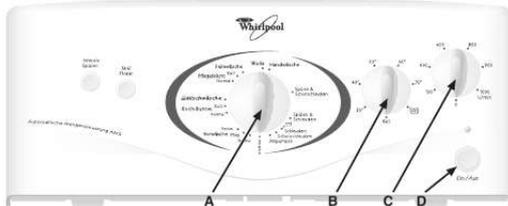

A. Programme Selection Knob
 B. Temperature Selection Knob
 C. "Spin Speed Selection" Knob
 D. "On/Off" Button

* : option / Yes; dosing required
 †) Do not use liquid detergents.
 ‡) For improved garment care, spin speed is restricted to 800 rpm in this programme.
 §) For improved garment care, spin speed is null in this programme.

Programme	Care Labels	Type of wash / Notes	Max. Load kg	Detergents and Additives					Special Options		Temperature °C	Max. Spin Speed rpm
				Pre-wash	Main wash	Softener	Bleach	Intensive Rinse	Rinse Hold	Spül-Stopp		
Cotton with prewash	Buntwäsche mit Vorwäsche	Heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	5,0	Yes †)	Yes	*	*	*	*	Max. 90	1000	
Synthetic with prewash	Pflegeleicht mit Vorwäsche	Heavily soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2,0	Yes †)	Yes	*	-	*	*	Max. 60	800 ‡)	
Delicate with prewash	Feinwäsche mit Vorwäsche	Heavily soiled curtains and delicate clothing, dresses, skirts, shirts and blouses.	1,5	Yes †)	Yes	*	-	-	*	Max. 40	800 ‡)	
Cotton Normal	Koch-Buntwäsche Normal	Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	5,0	-	Yes	*	*	*	*	Max. 90	1000	
Cotton short	Koch-Buntwäsche Kurz	Normally soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	3,0	-	Yes	*	-	*	*	Max. 60	1000	
Daily Mixed	Mischwäsche	Slightly to normally soiled textiles made of cotton and/or synthetic.	3,0	-	Yes	*	-	*	*	Max. 60	1000	
Synthetic	Pflegeleicht Normal	Normally to heavily soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2,0	-	Yes	*	-	*	*	Max. 60	800 ‡)	
Synthetic short	Pflegeleicht Kurz	Normally soiled overalls and sportswear made of cotton, polyester, polyamide and blends with cotton.	1,5	-	Yes	*	-	*	*	Max. 60	800 ‡)	
Delicate	Feinwäsche	Curtains and delicate clothing, dresses, skirts, shirts and blouses.	1,5	-	Yes	*	-	-	*	Max. 40	800 ‡)	
Wool	Wolle	Only woolsens with a fall-free finish, labelled with the woolmark and identified as machine washable. If you select "Rinse Hold" do not leave items to soak for too long.	1,0	-	Yes	*	-	-	*	Max. 40	800 ‡)	
Handwash	Handwäsche	Textiles made of silk, linen, wool and viscose marked as "handwashable". If you select "Rinse Hold" do not leave items to soak for too long. No spinning.	1,0	-	Yes	*	-	-	*	Max. 30	- §)	
Rinse + Gentle Spin	Spülen & Schonschleudern	Programme for treating delicate laundry with starch or softener.	2,0	-	-	*	-	-	*	-	800 ‡)	
Rinse + Spin	Spülen & Schleudern	Programme for treating cotton or linen laundry with starch or softener.	5,0	-	-	*	-	-	*	-	1000	
Spin	Schleudern	Programme to spin cotton or linen laundry intensively with maximum spin speed.	5,0	-	-	-	-	-	-	-	1000	
Gentle Spin	Schonschleudern	Programme to spin delicate laundry gently with a restricted spin speed.	2,0	-	-	-	-	-	-	-	800 ‡)	
Drain	Abpumpen	Drain only - no spinning. Alternative method of terminating programme after "Rinse Hold".	-	-	-	-	-	-	-	-	-	

N.B. This machine is controlled by sensors. Please avoid excessive detergent dosing.

Whirlpool is a registered trademark of Whirlpool USA.
 5019 312 10216



[You're reading an excerpt. Click here to read official WHIRLPOOL AWT 5108/A user guide](http://yourpdfguides.com/dref/4923911)
<http://yourpdfguides.com/dref/4923911>

Manual abstract:

B. C. D. Programme Selection Knob Temperature Selection Knob "Spin Speed Selection" Knob "On/Off" Button □ □ □ A Care Labels B C D Max. Load Type of wash / Notes kg i : option / Yes: dosing required 1) Do not use liquid detergents. 2) For improved garment care, spin speed is restricted to 800 rpm in this programme. @@90 Max. 60 Max. 40 Max. 90 Max.

40 Max. 30 -----Max. @@made of cotton and linen. Heavily soiled blouses, shirts, overalls etc. @@Heavily soiled curtains and delicate clothing, dresses, skirts, shirts and blouses.

Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. Normally soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. Slightly to normally soiled textiles made of cotton and/or synthetic. Normally to heavily soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton. Normally soiled overalls and sportswear made of cotton, polyester, polyamide and blends with cotton. Curtains and delicate clothing, dresses, skirts, shirts and blouses. Only woollens with a felt-free finish, labelled with the woolmark and identified as machine washable.

If you select "Rinse Hold" do not leave items to soak for too long. Textiles made of silk, linen, wool and viscose marked as "handwashable". If you select "Rinse Hold" do not leave items to soak for too long. No spinning. @@@@Drain only - no spinning. @@This machine is controlled by sensors. @@@@The indicator light of the "On/Off" button lights up. @@@@1. Press the "On/Off" button to switch off the machine. 2.

Cancel the option. 3. Turn the tap off. 4. Wait for the lid to unlock (about 1 minute).

5. @@Switch off machine by pressing the "On/Off" button. 2. Select the new programme. 3.

Start programme by pressing the "On/Off" button again. @@Press the "On/Off" button. 2. After the desired pause, press again the "ON/Off" button.

CANCEL PROGRAMME 1. Switch off the machine by pressing the "On/Off" button. 2. Set the programme selector to "Drain". 3. @@@@The data on the "Energy Label" refer to the programme "Cotton 60°C".

* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out. PREPARATION OF WASH CYCLE 1. Load the machine, close the drum doors and check that they are properly locked. 2. Add detergents and additives into the dispenser to no more than the "MAX" level mark, as follows: • Programme with pre and main wash • Main wash programme without prewash • Fabric softeners and conditioners • Chlorine bleach • Stain remover agents • Anti-scale agents (if necessary) 3. Turn the programme selector knob to the desired programme. 4. Turn the temperature selector knob to the desired temperature. 5. Turn the spin speed selector knob to the desired spin speed.

If the spin speed "0" is selected, the final spin is cancelled, but not the intermediate spins. The programme ends with a drain cycle. SELECT THE DESIRED OPTION Selecting or deselecting an option can be done at any time during the programme. The option will be applied as long as the corresponding programme phase has not been executed yet. "Intensive Rinse" button • One rinse cycle is added to ensure a more intensive rinse.

@@@@ • This function is particularly useful if you want to postpone spinning to a later time, or if you want to drain only. Note: The programme selector knob stops on . Whirlpool is a registered trademark of Whirlpool USA. 5019 312 10216 .



[You're reading an excerpt. Click here to read official WHIRLPOOL](#)

[AWT 5108/A user guide](#)

<http://yourpdfguides.com/dref/4923911>