



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL AWT 5108. You'll find the answers to all your questions on the WHIRLPOOL AWT 5108 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual WHIRLPOOL AWT 5108
 User guide WHIRLPOOL AWT 5108
 Operating instructions WHIRLPOOL AWT 5108
 Instructions for use WHIRLPOOL AWT 5108
 Instruction manual WHIRLPOOL AWT 5108

CB AWT 5108

A. Temperature Selection Knob
 B. "Programme Sequence" Indication
 C. "On/Off" Button
 D. "Spin Speed Selection" Knob

¹⁾ Do not use liquid detergents.
²⁾ For improved garment care, spin speed is restricted to 800 rpm in this programme.
³⁾ For improved garment care, spin speed is zero in this programme.

Programme	Care Labels	Type of wash / Notes	Max. load kg	Detergents and additives			Special Options		Temperature °C	Max. Spin Speed rpm
				Prewash	Main Wash	Softener	Half Load	Rinse Hold		
Cotton with prewash		Heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	5.0	Yes ¹⁾	Yes	*	*	*	Max. 90	1000
Synthetic with prewash		Heavily soiled blouses, shirts, overalls etc. made of polyester (Dolon, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2.0	Yes ¹⁾	Yes	*	*	*	Max. 60	800 ²⁾
Delicate with prewash		Heavily soiled curtains and delicate clothing, dresses, skirts, shirts and blouses.	1.5	Yes ¹⁾	Yes	*	—	*	Max. 40	800 ³⁾
Cotton		Normally soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	5.0	—	Yes	*	*	*	Max. 90	1000
Cotton short		Slightly to normally soiled bed linen, table linen and underwear, towels, shirts etc., made of cotton and linen.	3.0	—	Yes	*	*	*	Max. 60	1000
Synthetic		Slightly to normally soiled blouses, shirts, overalls etc. made of polyester (Dolon, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2.0	—	Yes	*	*	*	Max. 60	800 ²⁾
Synthetic short		Slightly soiled overalls and sportswear made of cotton, polyester, polyamide and blends with cotton.	1.5	—	Yes	*	*	*	Max. 60	800 ²⁾
Delicate		Curtains and delicate clothing, dresses, skirts, shirts and blouses.	1.5	—	Yes	*	—	*	Max. 40	800 ²⁾
Wool		Only woollens with a felt-free finish, labelled with the woolmark and identified as machine washable. <i>If you select "Rinse Hold" do not leave items to soak for too long.</i>	1.0	—	Yes	*	—	*	Max. 40	800 ²⁾
Silk		Textiles made of silk, linen, wool and viscose marked as "handwashable". <i>If you select "Rinse Hold" do not leave items to soak for too long. No spinning.</i>	1.0	—	Yes	*	—	*	Max. 30	— ³⁾
Rinse + Gentle Spin	—	Same as the last two rinses and the final spin in the "Synthetic" programme. Programme for treating wash with starch or softener.	2.0	—	—	*	—	*	—	800 ²⁾
Rinse + Spin	—	Same as the last rinse and the final spin in the "Cotton" programme. Programme for treating wash with starch or softener.	5.0	—	—	*	—	*	—	1000
Spin	—	In this programme spinning is intensive. Same as the spin cycle in the "Cotton" programme	5.0	—	—	—	—	—	—	1000
Gentle spin	—	In this programme spinning is gentle. Same as the spin cycle in the "Wool" programme.	2.0	—	—	—	—	—	—	800 ²⁾
Drain	—	Drain only - no spinning. Alternative method of terminating programme after "Rinse Hold".	—	—	—	—	—	—	—	—

N.B. This machine is controlled by sensors. Please avoid excessive detergent dosing.

Whirlpool is a registered trademark of Whirlpool USA.
5019 312 00066



[You're reading an excerpt. Click here to read official WHIRLPOOL AWT 5108 user guide](http://yourpdfguides.com/dref/4922573)
<http://yourpdfguides.com/dref/4922573>

Manual abstract:

B. C. D. @@@@load Type of wash / Notes kg Detergents and additives Prewash Main Softener Wash Special Options Half Rinse Load Hold Temperature °C Max. Spin Speed rpm Cotton with prewash Synthetic with prewash Delicate with prewash Cotton Cotton short Synthetic Synthetic short Delicate Wool Silk Rinse + Gentle Spin Rinse + Spin Spin Gentle spin Drain Heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. Heavily soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton. Heavily soiled curtains and delicate clothing, dresses, skirts, shirts and blouses. Normally soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. Slightly to normally soiled bed linen, table linen and underwear, towels, shirts etc., made of cotton and linen. Slightly to normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.

Slightly soiled overalls and sportswear made of cotton, polyester, polyamide and blends with cotton. Curtains and delicate clothing, dresses, skirts, shirts and blouses. Only woollens with a felt-free finish, labelled with the woolmark and identified as machine washable. @@@@No spinning. @@Programme for treating wash with starch or softener.

@@Programme for treating wash with starch or softener. In this programme spinning is intensive. Same as the spin cycle in the "Cotton" programme. In this programme spinning is gentle. Same as the spin cycle in the "Wool" programme. Drain only - no spinning. @@90 Max. 60 Max. 40 Max. 90 Max.

60 Max. 60 Max. 60 Max. 40 Max. 40 Max. @@@@The indicator light of the "On/Off" button lights up. @@@@1. Press the "On/Off" button to switch off the machine. 2. Cancel the options.

3. Turn the tap off. 4. Wait for the door to unlock (about 1 minute). 5.

@@Switch off the machine by pressing the "On/Off" button. 2. Select the new programme. 3. Start programme by pressing the "On/Off" button again.

@@Press the "On/Off" button. 2. After the desired pause, press again the "On/Off" button. CANCEL PROGRAMME 1. Switch off the machine by pressing the "On/Off" button. 2. Set the programme selector to "Drain". 3. @@@@* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out. PREPARATION OF WASH CYCLE 1.

Load the machine, close the drum flaps and check that they are properly locked. 2. Add detergents and additives into the dispenser to no more than the "MAX" level mark, as follows: • Programme with pre and main wash • Main wash programme without prewash • Fabric softeners and conditioners • Stain remover agents • Anti-scale agents (if necessary) 3. Turn the programme selector knob to the desired programme. 4. Turn the temperature selector knob to the desired temperature. 5. Turn the spin speed selector knob to the desired spin speed. If the spin speed "0" is selected, the final spin is cancelled, but not the intermediate spins. The programme ends with a drain cycle.

SELECT THE DESIRED OPTION Selecting or deselecting an option can be done at any time during the programme. The option will be applied as long as the corresponding programme phase has not been executed yet. "Half Load" button • Can be used for small loads and lightly soiled laundry. • Reduces the water consumption especially during the rinses. "Rinse Hold" button • The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from fading.

• This option is particularly recommended for the "Synthetic" or "Delicate" programmes. @@Remark: The program selector knob stop on " ". @@.



[You're reading an excerpt. Click here to read official WHIRLPOOL](#)

[AWT 5108 user guide](#)

<http://yourpdfguides.com/dref/4922573>