



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL AWT 7125/1. You'll find the answers to all your questions on the WHIRLPOOL AWT 7125/1 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual WHIRLPOOL AWT 7125/1
User guide WHIRLPOOL AWT 7125/1
Operating instructions WHIRLPOOL AWT 7125/1
Instructions for use WHIRLPOOL AWT 7125/1
Instruction manual WHIRLPOOL AWT 7125/1

CONTENTS

BEFORE USING THE WASHING MACHINE

FIRST WASH CYCLE

PRECAUTIONS AND GENERAL RECOMMENDATIONS

DESCRIPTION OF THE WASHING MACHINE

PREPARATION OF THE WASHING

DETERGENTS AND ADDITIVES

PROGRAMME SELECTION

CLEANING THE FOREIGN BODY TRAP

DRAINING RESIDUAL WATER

CARE AND MAINTENANCE

TROUBLESHOOTING GUIDE

AFTER-SALES SERVICE

TRANSPORT AND HANDLING

INSTALLATION

ELECTRICAL CONNECTION

GB 1



[You're reading an excerpt. Click here to read official WHIRLPOOL AWT 7125/1 user guide](http://yourpdfguides.com/dref/4849238)
<http://yourpdfguides.com/dref/4849238>

Manual abstract:

b. Remove the top protection and the protective corners. c. @@d. Open the lid by pressing it slightly down while raising the handle. Remove the polystyrene cushion (depending on model). e. Remove the blue protective film from the panel (depending on model). @@If in doubt, do not use the washing machine.

Contact After-Sales Service or your local retailer.

@@ • The technical data (voltage, power and fuses) are given on the rating plate on the rear of the appliance. • The appliance must be connected exclusively by means of a socket with an earth connection in accordance with current regulations. The appliance must be earthed by law. The manufacturer declines all liability for damage to persons or property deriving directly or indirectly from failure to observe the directions. • Do not use extension leads or multi sockets. • Before any maintenance on the washing machine disconnect it from the mains supply. • Access to the mains plug or to disconnection from the mains supply via a double-pole switch must be ensured at all times following the installation. • Do not operate the washing machine if it has been damaged during transport. Inform the After-Sales Service. • Mains cable replacement is only to be carried out by After-Sales Service. • The appliance must be connected to an effective earthing installation, in compliance with the regulations in force. In particular, appliances installed in premises containing a shower or a bath must be protected by a differential residual current device of at least 30 mA. Earthing the appliance is obligatory under the law. The manufacturer declines all liability for damage to persons or property deriving either directly or indirectly from failure to observe the directions above. • The washing machine may only be used in the household for the prescribed uses. Dimensions: Width: 400 mm Height: 900 mm Depth: 600 mm 2. Remove the transport bracket. • The appliance is fitted with transport screws and a transport bracket to prevent damage during transport. Before using the washing machine you must remove the transport bracket (see "Installation/Remove the transport bracket"). 3.

Install the washing machine • Place the appliance on a flat and stable floor surface. • Adjust the feet to ensure that the machine is stable and level (see "Installation/Adjust the feet"). 4. Water supply • Connect the water supply inlet hose in accordance with the regulations of your local water company (see "Installation/Connect the water inlet hose"). • Water supply: Cold water only • Tap: 3/4" threaded hose connection • Pressure: 100-1000 kPa (1-10 bar). 5. Drain hose • Connect the drain hose to the siphon or hook it over the edge of a sink with the "U" bend (see "Installation/Connect the water drain hose"). • If the washing machine is connected to a built-in drainage system, ensure the latter is equipped with a vent to avoid simultaneous loading and draining of water (siphoning effect). GB 2 Black process 45.0° 100.

0 LPI 31210441GB.fm Page 3 Friday, June 17, 2005 11:01 AM FIRST WASH CYCLE We recommend that the first wash cycle be carried out empty. This will remove any residual water used in the factory checks. 1. Turn on the tap.

2. Close the drum flaps. 3. Pour a small amount of detergent (about 30 ml) into the detergent dispenser . 4.

Select a short programme (see programme chart). 5. Press the "Start/Pause" button. PRECAUTIONS AND GENERAL RECOMMENDATIONS 1. Packing • The packaging materials are 100% recyclable and bear the recycling symbol . Adhere to local regulations when disposing of packaging material. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. • The washing machine is built from reusable materials. It must be disposed of in compliance with current local waste disposal regulations.

• Before scrapping, cut off the power cable so that the washing machine cannot be connected to the mains. • Remove detergent from compartment if you intend scrapping your appliance. 2. Energy saving tips • Achieve the best use of energy, water, detergent and time by using the recommended maximum load size. • Do not exceed the detergent dosages indicated in the manufacturer's instructions. • The Eco Ball - a special system in the outlet - will prevent detergent loss from the drum to avoid detergent loss into the environment. • Use "Prewash" for heavily soiled laundry only! Save detergent, time, water and energy consumption by not selecting "Prewash" for slight to normally soiled laundry. • Pretreat stains with stain remover or soak dried in stains in water before washing to reduce the necessity of a hot wash program. • Save energy by using a 60°C instead of a 95°C wash programme or a 40°C instead of a 60°C wash programme. • Save energy and time by selecting a high spin speed to reduce the water content in laundry before using a tumble dryer (for machines with adjustable spin speed).

4. Child safety • Children must not be allowed to play with or in the appliance. 5. General recommendations • Do not leave the appliance connected when not in use. Turn off the tap.

• Before cleaning or carrying out maintenance switch off the washing machine and disconnect it from the mains supply. • To clean the outside of the washing machine, use a neutral detergent and a damp cloth. • Do not use abrasive detergents. • Do not attempt to force the door open. • If necessary, the power cable may be replaced with an identical one obtained from our After-Sales Service.

The power cable must only be replaced by a qualified technician. 3. Disposing of packaging and old appliances • This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The symbol on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. 6. EC Declaration of Conformity • This washing machine has been designed, constructed and distributed in compliance with the safety requirements of EC Directives: 73/23/EEC Low Voltage Directive 89/336/EEC EMC Directive 93/68/EEC CE Marking Directive . GB 3 Black process 45.0° 100.

0 LPI 31210441GB.fm Page 4 Friday, June 17, 2005 11:01 AM DESCRIPTION OF THE WASHING MACHINE 1.



[You're reading an excerpt. Click here to read official WHIRLPOOL AWT 7125/1 user guide](http://yourpdfguides.com/dref/4849238)
<http://yourpdfguides.com/dref/4849238>

Door 2. Detergent dispenser 3. Drum flaps 4. Pump and foreign body trap 5. After-Sales Service sticker (behind the foreign body trap cover) 6. Mobility lever (depending on model) • To move the appliance: pull the handle out a little bit by hand and pull it out to the stop with the foot. 7. Adjustable feet 4 4 2 2 1 1 3 3 5 7 6 5 6 7 PREPARATION OF THE WASHING Sort the laundry 1.

Sort the laundry according to... • Type of fabric / care label symbol Cottons, mixed fibres, easy care/synthetics, wool, handwashed items. • Colour Separate whites and coloureds. Wash new coloured items separately. • Size Wash items of different sizes in the same load to improve efficiency and distribution in the drum. • Fabric delicacy Wash delicate articles separately: use a special programme for Pure New Wool, curtains and other delicates.

Always remove curtain glides or wash curtains with the glides inside a cotton bag. Use the special program for handwash fabrics. Wash stockings, belts and other small items or articles with hooks (e.g. bras) in special cotton bags for washing machines or in zipped pillow cases.

2. Empty pockets Coins, safety pins and similar items can damage your washing machine drum and tub. 3. Fasteners Close zips and fasten buttons or hooks; loose belts or ribbons should be tied together. Stain removal • Blood, milk, egg and other organic substances are generally removed by the enzyme phase of the programme. • To remove red wine, coffee, tea, grass and fruit stains etc. add a stain removing agent in detergents dispenser compartment or chlorine bleach in compartment (depending on model). • Particularly stubborn stains should be treated before the wash. Dyeing and bleaching Products usually consist of dye colour, fixing agent and salt. Pour the dye colour, the fixing agent and then the salt directly into the empty drum.

Load the laundry only afterwards. • Only use dyes and bleaches recommended for washing machines. • Follow the manufacturer's instructions. • Plastic and rubber parts of the machine may be stained by dyes or bleaches. Starching Dissolve/dilute the starch powder or liquid in approximately 80 - 100 ml water outside the washing machine in a small container. Load the washing machine and close the drum flaps. Pour the dissolved starch into the softener chamber of the detergent dispenser. Then close the lid, chose programme "Rinse and Spin" and start. GB 4 Black process 45.0° 100.

0 LPI 31210441GB.fm Page 5 Friday, June 17, 2005 11:01 AM Loading the laundry 1. Open the lid. 2. Open the drum door flaps by pressing the button and keep your second hand on the big drum door flap at the same time (2a), or by turning the knob (2b) - depending on model.

3. Place the items of laundry in the drum one by one without compressing them. Follow loads recommended in the "programme chart": overloading will result in unsatisfactory washing results and creased laundry. 4. To close the drum, move both door flaps to the middle again, putting the rear flap over the front flap.

Then slightly press on the middle of the flaps, as shown on picture 3, until you hear a "click". For checking if the drum is properly closed, shortly push on the front flap. Attention: Make sure that the drum door flaps are properly locked (for drum versions as shown on picture 2a, the button must protrude out beyond the edge of the big drum door flap). 1 2a 2b 3 GB 5 Black process 45.0° 100.0 LPI 31210441GB.fm Page 6 Friday, June 17, 2005 11:01 AM DETERGENTS AND ADDITIVES Choice of the right detergents and additives The type of detergent depends on: • type of fabric (cottons, easy care/synthetics, delicate items, wool). Note: use only specific detergents for wool. • colour; • washing temperature; • degree and type of soiling. Notes: Whitish residues on dark fabrics are caused by insoluble detergents components used in modern phosphate-free powder detergents.

If you notice this problem, shake or brush the affected items or use a liquid detergents. Keep detergents and additives in a dry place and out of reach of children. Use only detergents and additives specifically produced for domestic washing machines. If you use descaling agents, dyes or bleaches, make sure they are suitable for washing machine use. Descaler could contain components that can attack parts of your washing machine. Do not use solvents (turpentine, benzine, etc.). Do not machine wash fabrics that have been treated with solvents or flammable liquids. Dosage Follow the instructions on the detergent pack in relation to: • the degree and type of soiling; • the size of the lort/Pause" button lights up. After starting the programme, the sequence indication signals the Wash, Rinse and Spin phases.

Note: If there is a power interruption or if the appliance is connected during the cycle, the programme will start again at the point where it was interrupted.

Door lock For reasons of safety, the door is locked during certain phases of the cycle. At the end of the cycle or during an interruption, the door unlocks automatically after about 1 minute. Programme end • The remaining time indicator shows "0:00" and the "End" lamp lights up, or "End" is indicated on the display (depending on model). 1.

Turn the programme selector to the " " position. 2. Turn off the tap. 3. Open the door and drum flaps and unload the machine.

Change the programme or options during the cycle 1. Select the new programme with the programme selector. If necessary, select the additional options and the spin speed. The indicator lamp of the "Start/Pause" button flashes. Note: the "Start Delay" and "Prewash" options cannot be selected after a change of programme. 2. Press the "Start/Pause" button. The newly selected programme will start at the washing position where the previous programme was interrupted. Note: Do not add detergent for the new programme. If, for any reason, you want to interrupt the programme for a certain time and continue it later: 1.

Press the "Start/Pause" button. The indicator lamp flashes. 2. After the desired pause, press the "Start/Pause" button again. Programme interruption/pause Cancel programme If the current programme has to be terminated prematurely and cancelled, proceed as follows if your washing machine has no "Reset" button: 1. Turn the programme selector on "Drain". 2. Press the "Start/Pause" button to start the "Drain" programme. If your washing machine has a "Reset" button: press the "Reset" button for at least 3 seconds. GB 7 Black process 45.

0° 100.0 LPI 31210441GB.fm Page 8 Friday, June 17, 2005 11:01 AM "Favourites" button (depending on model) You can record tailor-made programmes for each type of laundry. The "Favourites" button allows you to start the tailor-made programmes directly.



[You're reading an excerpt. Click here to read official WHIRLPOOL](http://yourpdfguides.com/dref/4849238)

[AWT 7125/1 user guide](http://yourpdfguides.com/dref/4849238)

<http://yourpdfguides.com/dref/4849238>

To record a favourite programme: 1.

Select the type of wash (cotton, synthetics, wool). 2. Set the desired temperature and spin speed. 3.

Select the desired options. 4. Press the "Favourites" button for about 3 seconds until the statement "MEM" appears on the screen. Your tailor-made programme is recorded. To start a favourite programme: 1. Select the type of wash. 2. Press the "Favourites" button to display the settings of the programme you recorded earlier. 3. Press the "Start" button.

To modify a favourite programme: 1. Select the desired type of wash, temperature and spin speed. 2. Press the "Favourites" button for about 3 seconds as you did originally to record a first tailor-made programme. The new selections you made will replace those of the old recorded programme. You can re-programme your favourite programmes in this way as often as you like. GB 8 Black process 45.0° 100.0 LPI 31210441GB.fm Page 9 Friday, June 17, 2005 11:01 AM CLEANING THE FOREIGN BODY TRAP The appliance is provided with a self-cleaning pump.

@@which have been left in the laundry. 1. 2. 3. 4.

Unplug the appliance. Open the foreign body trap cover with a coin. Place a bowl beneath it. @@5. Wait until all the water has drained out.

6. Now unscrew the foreign body trap completely and extract it. 7. Remove any foreign items from the foreign body trap. 8. @@9. @@10. @@11. Close the foreign body trap cover. 12.

Reconnect the appliance. @@@@• Before transporting (moving) the machine. @@It is best in this case to drain the machine after every wash. • If the display shows "FP" (draining problem). 1. Stop the appliance and unplug it. 2. @@3. @@4. @@5.

Let the residual water flow into a shallow basin. 6. Wait until the flow stops. 7. @@8.

Reconnect the water supply hose and the power plug. @@@@Push in the buttons on each side of the dispenser. 2. Pull the dispenser towards you and remove. A small quantity of water can remain in the dispenser.

It is advisable to carry the dispenser in an upright position. 3. Wash the dispenser using running water. You can also remove the siphon caps in the dispenser for cleaning. 4. Replace the siphon caps in the dispenser (if removed). Make sure that they lock in place. 5. @@@@1. Unplug the appliance.

2. Turn off the tap. 3. Unscrew the hose from the tap. 4. @@@@5. Screw the flexible hose back onto the tap by hand. Do not use pliers (risk of squashing the joint). 6. Turn on the tap and check that the connections are water-tight.

7. @@Unplug the appliance. 2. Remove the laundry from the drum. 3.

Close the drum flaps turn the drum a half-turn. 4. @@5. It will fall into the drum. 6.

Open the drum: you can recover the object through the hole in the drum. 7. Refit the blade from inside the drum: Position the plastic tip above the hole on the right side of the drum. 8. Then slide the plastic blade from right to left until it clips. 9. Close the drum flaps again, turn the drum through half a turn and check the positioning of the blade at all its anchorage points. 10. Plug the appliance in again. 3 4 4 7 GB 11 Black process 45.

0° 100.0 LPI 31210441GB.fm Page 12 Friday, June 17, 2005 11:01 AM Appliance exterior and control panel • Clean using normal household cleaner (do not use abrasive products). • Wipe with a soft cloth. amount of detergent, to keep the interior of the appliance clean. Door seal • Clean from time to time with a damp cloth. Appliance interior • After each washing, leave the lid open for some time to allow the inside of the appliance to dry. • If you never or seldom wash your laundry at 95°C, we recommend to occasionally run a 95°C programme without laundry, adding a small Water inlet hose(s) • Check the hose regularly for brittleness and cracks. Replace if necessary. TROUBLESHOOTING GUIDE This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and allow you to react appropriately.

Often, however, the faults detected are small enough to be solved in a matter of minutes. For example: The Start/Pause button is flashing or no "End" appears on the LCD display (if available) at the programme end. The appliance will not start, no lamp or display (depending on model) lights up. Check whether: • the appliance is plugged in; • the wall socket is functioning correctly (use a table lamp or similar); • a programme is selected correctly. The appliance will not start, but the "Start/Pause" lamp is flashing.

Check whether: • the programme has been changed; • the appliance door is properly shut. Open and shut it again. Move the programme selection knob to "Drain" and press the "Start/Pause" button; if your washing machine has an LCD display, press the "Reset" button. Check whether: • Laundry is correctly washed by opening the drum door flaps and feel load humidity. When laundry is not washed, please reselect programme, options and press "Start/Pause" button to start a new programme.

• The safety system of the appliance was activated. See fault description table. Detergent and additive product residues in dispenser at end of wash. "dEM" appears on the LCD display (if available) every five seconds or the appliance doesn't start although the LCD display simulates a running wash cycle (remaining time indication is running fast). Check whether: • demonstration function was activated accidentally on your appliance; • deactivate the demonstration function by: 1. Moving the programme selector knob to "Drain". 2. Pressing buttons in the following sequence: "Prewash" button / "+ button" (temperature) / "Prewash" button / "+ button" (temperature). Check whether: • the detergent dispenser is properly installed and is not blocked (see "Care and Maintenance"); • the foreign body trap in the water inlet hose is not blocked (see "Care and Maintenance"). The appliance vibrates during the spin cycle.

Check whether: • the appliance is level and that all the feet are adjusted (see "Installation"); • the transport bracket has been removed. Before starting up the appliance, the transport screws and the transport bracket MUST be removed (see "Installation"). Final spin results are poor. The appliance stops during the programme. Check whether: • the "Rinse Hold" lamp is on, terminate this option by pressing the button again; • another programme has been selected. reselect the desired programme and press the "Start/Pause" button; • the "Start/Pause" lamp is flashing. Press the "Start/Pause" button; • the safety system of the appliance was activated. See fault description table. Check whether: • the pump impeller is obstructed (see "Cleaning The Foreign Body Trap"). • if the laundry is still too wet at the end of the programme: possibly add other items of clothing and repeat the spin cycle.



[You're reading an excerpt. Click here to read official WHIRLPOOL AWT 7125/1 user guide](http://yourpdfguides.com/dref/4849238)
<http://yourpdfguides.com/dref/4849238>

• there is foam on the washing: repeat a rinse-spin cycle and avoid excessive quantities of detergent. Note: The appliance has an imbalance detection and correction system. If individual heavy items are loaded (a bathrobe, for example), this system may reduce the spin speed automatically or interrupt the spin if it detects too great an imbalance at the start of the spin, in order to protect the appliance. Excessive foam formation may also prevent spinning. GB 12 Black process 45.

0° 100.0 LPI 31210441GB.fm Page 13 Friday, June 17, 2005 11:01 AM What should I do when the automatic safety system detects a malfunction? The programme is interrupted and various indicators (depending on model) point to the source of the fault. Fault description table: The display indicates: FH FP F5 to F15 FA F4 a. Water inlet fault (no or insufficient water supply) The display alternately shows "FH".

If fitted, the red "Water Tap" indication lights up. Switch off the appliance by turning the programme selector to the " " position and unplug it. Check whether: • the tap is fully turned on and the water supply pressure is sufficient; • the water inlet hose is kinked; • the mesh filter in the water inlet hose is blocked (see "Care and Maintenance"); • the water in the water inlet hose is frozen. • the appliance has a safety hose and the safety valve is open (red indicator in the safety valve inspection window). In this case replace it with a new safety hose. Reconnect the appliance. Reselect the desired programme and press the "Start/Pause" button to continue with the programme (do not add detergent for this programme). If the fault re-occurs, contact the After-Sales (see "After-Sales Service") b. Draining out fault The display alternately shows "FP". Switch the appliance off by turning the programme selector to the " " position and unplug it.

Check whether: • the drain hose is kinked (see "Installation"); • the pump impeller is obstructed (see "Cleaning The Foreign Body Trap"). • the water in the drain hose is frozen. • if water has remained in the drum, you can drain it by following the instructions in the chapter "Draining Residual Water".

IMPORTANT: Before draining, allow the wash water to cool down. Reconnect the appliance. Reselect the desired programme and press the "Start/Pause" button to continue with the programme (do not add detergent for this programme). If the fault re-occurs, contact After-Sales Service (see "After-Sales Service"). Fault description "Water inlet fault" "Draining fault" "Electrical components fault" "Water stop fault" "Foam detection / Overdosing of detergent" c. Electrical module fault The display shows "F5" to "F15". Select a programme and press the "Start/Pause" button again.

If the fault re-occurs, contact After-Sales Service (see "After-Sales Service"). d. Water Stop fault (depending on model) The pump operates and the display shows "FA". If fitted, the red "Water Stop" Indication lights up. Switch the appliance off by turning the programme selector to the " " position, unplug the appliance and turn off the water tap.

The "Water Stop" fault may have been triggered by: 1. too much foam. 2. a leak in the inlet hose or in the appliance. Tilt the appliance forwards carefully to allow the water to drain out.

Then: 1. Reconnect the appliance, 2. turn on water supply (if "Start/Pause" button is not pressed, but the machine begins to fill, turn off the water supply tap and contact After-Sales Service), 3. reselect the desired programme and press the "Start/Pause" button. If the fault occurs again, contact After-Sales Service (see "After-Sales Service"). e. Foam detection The display shows "F4" (if fitted, the red "Water Stop" indication lights up); too much foam interrupted the washing programme. 1. Press the "Start/Pause" button. 2.

Move the programme selector to the "Drain" programme. 3. Start this programme by pressing the "Start/Pause" button again. 4. After the "Drain" programme is finished, start the original washing programme again, but avoid excessive detergent dosing. If your washing machine has an LCD-display, 1. Cancel the preselected programme by pressing the "Reset" button. 2. After the "Drain" programme is finished, start the original washing programme again, but avoid excessive detergent dosing. GB 13 Black process 45.

0° 100.0 LPI 31210441GB.fm Page 14 Friday, June 17, 2005 11:01 AM AFTER-SALES SERVICE Before contacting After-Sales Service: 1. Try to remedy the problem yourself (see "Troubleshooting Guide"). 2.

Restart the programme to check whether the problem has solved itself. 3. If the machine continues to function incorrectly, call After-Sales Service. Specify: • The nature of the problem. • The exact model of the appliance.

• The service code (number after the word SERVICE). The After-Sales Service sticker is in the lid of the foreign body trap or on the rear of the machine. • Your full address. • Your telephone number and area code. As a priority, you should contact the After-Sales Service of the retailer who supplied you with the appliance. TRANSPORT AND HANDLING 1. Unplug the appliance. 2. Turn off the tap. 3.

Remove the water supply and drain hose. 4. Eliminate all water from the hoses and the appliance (see "Draining Residual Water"). Wait for the water to cool so as to avoid any accidents. 5. To facilitate moving the machine, pull the handle situated at the bottom front (optional on certain models) out a little by hand and pull it out to the stop with the foot. Afterwards push the handle back into the original stable position. 6. Transport the washing machine upright.

IMPORTANT: Do not use the appliance while the handle is pulled out.

GB 14 Black process 45.0° 100.0 LPI 31210441GB.fm Page 15 Friday, June 17, 2005 11:01 AM INSTALLATION Removal of transport bracket The appliance is fitted with a transport bracket to avoid any possible damage during transport. Before using the appliance, the transport bracket at the back **MUST** be removed.

1. Unscrew the two screws A and the four screws B with a flat screwdriver or a No. 8 hex nut box spanner. 2. Remove the transport bracket. 3. Replace the four outer screws B on the machine and tighten them. 4. Remove the two seals C from the hose holder and clip them into the openings of the machine D. Note: do not forget to replace and tighten the four outer screws. A D B 1 1 1 2 C 4 D 4 GB 15 Black process 45.0° 100.0 LPI 31210441GB.fm Page 16 Friday, June 17, 2005 11:01 AM Adjust the feet Install the appliance on a level surface, near to electrical, water and drain connections.



[You're reading an excerpt. Click here to read official WHIRLPOOL](http://yourpdfguides.com/dref/4849238)

[AWT 7125/1 user guide](http://yourpdfguides.com/dref/4849238)

<http://yourpdfguides.com/dref/4849238>

If the floor is uneven, adjust the feet (do not insert pieces of wood, cardboard etc.

under the feet): 1. Loosen the locknut using the wrench provided. 2. Adjust the height of the foot by hand. 3. Retighten the locknut by turning it anti-clockwise. Make sure that all feet are resting correctly on the floor and that the appliance is perfectly level and stable (use a spirit level). The appliance can be installed in an area 40 cm wide and 63 cm deep. Note: if you install the machine on thick carpet, adjust the feet to ensure that there is sufficient space under the machine for the air to circulate. Connect the water inlet hose.

1. Carefully screw the water inlet hose onto the tap by hand. 2. Make sure there are no kinks in the hose. 3.

Check water-tightness of tap and appliance connections by turning the tap completely on. @@Periodically check the hose for brittleness and cracks. Replace if necessary. @@@@• The inlet hose and the plastic enclosure contain electrical components: Do not cut the hose and do not immerse the enclosure in water. • If the flexible hose is damaged, unplug the appliance from the mains immediately and replace it.

If the flexible hose is too short, replace it with a 3 m Water Stop hose (available from After-Sales Service or from your dealer). This operation must be carried out exclusively by a qualified technician. Connect the water drain hose 1. Unhook the drain hose from the left and right hose connections, see arrow A in figure. Important: Do NOT loosen the drain hose connection from the right side, see arrow B in figure. Otherwise, there is the risk of leakage and of scalding with hot water. 2. Fix the "U" bend (C) to the free end of the drain hose. 3. Connect the drain hose to the siphon or hook it over the edge of a sink with the "U" bend.

Small hand basins are not suitable. The edge of the sink must be no more than 100 cm from the floor. If you need to add an extension, use a flexible hose of the same size and secure the unions with screw-on hose clips. Maximum overall drain hose length: 2.50 m. Maximum drain height ("U" bend): 100 cm. Minimum drain height: 55 cm. Important: Make sure there are no kinks in the drain hose and take precautions against it falling while the appliance is running. A C B GB 17 Black process 45.0° 100.

0 LPI 31210441GB.fm Page 18 Friday, June 17, 2005 11:01 AM ELECTRICAL CONNECTION Do not use extension leads or multi sockets. Electrical connections must be made in accordance with local regulations. 1) Warning - this appliance must be earthed This appliance is normally supplied with a mains lead having a plug fitted in the factory which has been checked for correct earth continuity. If the fitted plug is not suitable for your socket outlet, or if the machine's mains lead is not fitted with a plug, you should fit a suitable new, good quality plug by following the instructions in (2) below.

Any unsuitable plug should be cut off and disposed of in order to avoid a possible shock hazard should it be inserted into a socket. 2) CONNECTION TO A REWIRABLE PLUG - to be carried out only by a qualified electrician The wires in the mains lead are coloured in accordance with the following code: BLUE - "NEUTRAL" ("N") BROWN - "LIVE" ("L") GREEN AND YELLOW - "EARTH" ("E") Valid Only For Great Britain And Ireland To fit a new plug, proceed as follows: 2.1 Polarized Plugs (e.g. 3 pin, 13 amp plug conforming to BS 1363A) a.

The GREEN AND YELLOW wire must be connected to the terminal in the plug which is marked with the letter "E" or by the Earth symbol or coloured green and yellow. b. The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured blue. c. The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured brown. 2.2 Non-polarized plugs (e.g. 2 pin with side earth contact). The wire which is coloured GREEN AND YELLOW must be connected to the earth contact.

The other two wires should be connected to the two pins, irrespective of colour. Fuse replacement If the mains lead of this appliance is fitted with a BS 1363A 13amp fused plug, replace the fuse only with an A.S.T.A. approved type conforming to BS 1362 and proceed as follows: 1. Remove the fuse cover (A) and fuse (B). 2. Fit the replacement 13 A fuse into the fuse cover. 3.

Refit both into plug. GB 18 Black process 45.0° 100.0 LPI .



[You're reading an excerpt. Click here to read official WHIRLPOOL AWT 7125/1 user guide](http://yourpdfguides.com/dref/4849238)
<http://yourpdfguides.com/dref/4849238>