



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL AWT 7125/S. You'll find the answers to all your questions on the WHIRLPOOL AWT 7125/S in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual WHIRLPOOL AWT 7125/S**  
**User guide WHIRLPOOL AWT 7125/S**  
**Operating instructions WHIRLPOOL AWT 7125/S**  
**Instructions for use WHIRLPOOL AWT 7125/S**  
**Instruction manual WHIRLPOOL AWT 7125/S**

**GB AWT 7125/S**

**A. Temperature Selection Buttons**  
**B. "Programme Sequence" Indicator**  
**C. "Start/Pause" Button**  
**D. "End of Cycle" Indication**  
**E. "Start Delay" Button**  
**F. "Spin Speed Reduction" Button**

When you select an option, the corresponding indicator lights up, except if the combination of programme, additional options and temperature is not possible.

\* : option / Yes: dosing required  
<sup>1</sup> Do not use liquid detergents.  
<sup>2</sup> For improved garment care spin speed is restricted to 800 rpm in this programme.  
<sup>3</sup> For improved garment care spin speed is zero in this programme.

Programme	Care Labels	Type of wash / Notes	Max. load kg	Detergents and additives					Special Options					Temperature °C	Max. Spin Speed rpm
				Prewash	Main Wash	Softener	Bleach	Easy Ironing	Prewash	Intensive Rinse	Rinse Hold	Spin Speed Reduction	Start Delay		
	Cotton	Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. <i>For heavily soiled laundry the additional "Prewash" option can be selected as well.</i>	5.0	* <sup>1</sup>	Yes	*	*	*	*	*	*	*	*	20 to 95	1200
	Synthetics	Normally soiled blouses, shirts, overalls etc. made of polyester (Dioten, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2.0	* <sup>1</sup>	Yes	*	—	*	*	*	*	*	*	20 to 60	800 <sup>2)</sup>
	Daily Mixed	Slightly to normally soiled textiles made of cotton and/or synthetics.	3.0	—	Yes	*	—	*	—	*	*	*	*	30 to 60	1200
	Rapid Plus	Shortly worn outer clothing made of cotton, polyester, polyamide or blends with cotton.	3.0	—	Yes	*	—	—	—	*	*	*	*	20 to 30	1200
	Delicates	Curtains and delicate clothing, dresses, skirts, shirts and blouses.	1.5	* <sup>1</sup>	Yes	*	—	—	*	—	*	* <sup>2)</sup>	*	20 to 40	800 <sup>2)</sup>
	Silk	Textiles made of silk, linen, wool and viscose marked as "handwashable". <i>If you select "Rinse Hold" do not leave items to soak for too long.</i>	1.0	—	Yes	*	—	—	—	*	*	* <sup>1)</sup>	*	20 to 30	— <sup>3)</sup>
	Wool	Only woollens with a felt-free finish, labelled with the woolmark and identified as machine washable. <i>If you select "Rinse Hold" do not leave items to soak for too long.</i>	1.0	—	Yes	*	—	—	—	*	*	* <sup>2)</sup>	*	20 to 40	800 <sup>2)</sup>
	Rinse + Spin	<i>Programme for treating the laundry with starch and softener or to moisten the laundry. For delicate laundry reduce the spin speed to 400 - 800 rpm.</i>	5.0	—	Yes	*	—	—	*	*	*	*	—	1200	
	Spin	<i>Programme to spin cotton or linen laundry intensively with maximum spin speed.</i>	5.0	—	—	—	—	—	—	—	*	*	—	1200	
	Gentle spin	<i>Programme to spin delicate laundry gently with a restricted spin speed.</i>	1.5	—	—	—	—	—	—	—	*	* <sup>2)</sup>	—	800 <sup>2)</sup>	
	Drain	<i>Drain only - no spinning. Alternative method of terminating programme after "Rinse Hold".</i>	—	—	—	—	—	—	—	—	—	*	—	—	

**N.B. This machine is controlled by sensors. Please avoid excessive detergent dosing.**

Whirlpool is a registered trademark of Whirlpool USA.  
**5019 312 10139**



[You're reading an excerpt. Click here to read official WHIRLPOOL AWT 7125/S user guide](http://yourpdfguides.com/dref/4915992)  
<http://yourpdfguides.com/dref/4915992>

**Manual abstract:**

B. C. D. E. F. Temperature Selection Buttons "Programme Sequence" Indicator "Start/Pause" Button "End of Cycle" Indication "Start Delay" Button "Spin Speed Reduction" Button When you select an option, the corresponding indicator lights up, except if the combination of programme, additional options and temperature is not possible. □ : option / Yes: dosing required 1 2 A B C D E F Max. load Detergents and additives Prewash Main Wash Softener Bleach 3 Do not use liquid detergents. For improved garment care spin speed is restricted to 800 rpm in this programme. For improved garment care spin speed is zero in this programme.

Temperature Max. @@made of cotton and linen. @@Normally soiled blouses, shirts, overalls etc. @@@@Shortly worn outer clothing made of cotton, polyester, polyamide or blends with cotton. Curtains and delicate clothing, dresses, skirts, shirts and blouses.

Textiles made of silk, linen, wool and viscose marked as "handwashable". If you select "Rinse Hold" do not leave items to soak for too long. Only woollens with a felt-free finish, labelled with the woolmark and identified as machine washable. If you select "Rinse Hold" do not leave items to soak for too long.

Cotton 5.

0 □ 1) □ 1) — — □ 1) — — — — — — — Yes □ □ □ □ □ □ □ □ — — — □ — — — — — — — — — — □ □ □ — — — — — □ □ — — □ — — — — — □ □ □ — — — — — □ — — — — □ □ □ □ □ □ □ □ — — — □ □ □ □ □ 2) □ □ □ □ □ □ □ □ □ □ □ 20 to 95 1200 Synthetics Daily Mixed Rapid Plus Delicates Silk 2.0 3.0 3.0 1.5 1.0 1.0 5.0 5.0 1.5 Yes Yes Yes Yes Yes Yes Yes 20 to 60 30 to 60 20 to 30 20 to 40 20 to 30 20 to 40 800 2) 1200 1200 800 2) □ 3) □ 2) □ □ □ 2) — 3) 800 2) 1200 1200 800 2) Wool + Rinse + Spin Spin Gentle spin Drain — — — — — Programme for treating the laundry with starch and softener or to moisten the laundry.

For delicate laundry reduce the spin speed to 400 - 800 rpm. Programme to spin cotton or linen laundry intensively with maximum spin speed. Programme to spin delicate laundry gently with a restricted spin speed. Drain only - no spinning. Alternative method of terminating programme after "Rinse Hold". — — — — — — — — — — N.B. This machine is controlled by sensors. Please avoid excessive detergent dosing. Whirlpool is a registered trademark of Whirlpool USA.

5019 312 10139 CONSUMPTION DATA Temperature Selector Programme Cotton Cotton Daily Mixed Synthetics Rapid Plus Delicates Wool Silk (°C) 95/40 60 40 60/40 30 40 40 30 (kg) 5.0 5.0 3.0 2.0 3.

0 1.5 1.0 1.0 (l) 49\*/48 48 45 55/50 35 50 50 35 (kWh) 1.60/0.

60 0.95 0.45 0.70/0.50 0.40 0.50 0.50 0.40 Load Water Energy Approx. Programme Duration (hours : minutes)\* 2:00/2:05 2:05 1:00 1:30/1:15 0:30 0:45 0:45 0:35 Prewash cycle increases programme duration approximately 15 min.

Consumption values were measured in normalized conditions in compliance with standard IEC 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash. The data on the "Energy Label" refer to the programme "Cotton 60°C". @@@@• Press the button to set another spin speed. @@The programme ends with a drain cycle. @@• Select programme, temperature and options. @@@@• The indicator lamp shows the sequence reached by the programme. @@@@• 1. Turn the programme selector to the " " position. 2.

Turn the tap off. 3. Open the lid and the drum doors and unload the machine. CHANGE THE PROGRAMME OR OPTIONS DURING THE CYCLE 1. Select the new programme using the programme selector.

If necessary, select the additional options and the spin speed. @@@@. The new 2. Press the "Start/Pause" button programme selected continues at the same position where the previous programme was interrupted. Note: Do not add detergent for this programme.

PAUSE/INTERRUPT A PROGRAMME If, for any reason, you wish to interrupt the programme for a certain time and continue it later: 1. Press the "Start/Pause" button . The light flashes. 2. After the desired pause, press again on the "Start/Pause" button . CANCEL PROGRAMME 1. Set the programme selector to "Drain" . 2. Press the "Start/Pause" button to start the "Drain" programme . •PREPARATION OF WASH CYCLE 1.

Close the drum doors and check that they are properly locked. 2. Add detergents and additives into the dispenser to no more than the "MAX" level mark, as follows: •Programme with pre and main wash •Main wash programme without prewash •Fabric softeners and conditioners •Chlorine bleach •Stain remover agents •Anti-scale agents (if necessary) 3. Turn the programme selector knob to the desired programme. The remaining time display shows the duration of the chosen programme (in hours and minutes) and the indicator light of the "Start/ Pause" button flashes. The programme sequence and the predefined spin speed indication corresponding to the selected programme lights up. The preselected temperature can be altered by pressing the "+" or "-" button. SELECT THE DESIRED OPTION When you select an option authorized by the programme, the corresponding indicator lights up, except if the combination of programme, additional options and temperature is not possible. "Easy Ironing" button • Can be used together with "Cotton", "Synthetic" and "Daily Mixed" programmes to make ironing easier. •Increases the water quantity in rinsing and the clothes are spun in a softer manner.

"Prewash" button • Only for heavily soiled loads (for example sand, granular dirt). @@@@• This function is particularly useful if you want to postpone spinning to a later time, or if you want to drain only. Note: The programme with "Rinse Hold" stops when the "Rinse Hold" indicator light flashes on the "Programme Sequence Indicator". Whirlpool is a registered trademark of Whirlpool USA. 5019 312 10139 .



[You're reading an excerpt. Click here to read official WHIRLPOOL AWT 7125/S user guide](http://yourpdfguides.com/dref/4915992)  
<http://yourpdfguides.com/dref/4915992>