



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL AWZ 121/4. You'll find the answers to all your questions on the WHIRLPOOL AWZ 121/4 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual WHIRLPOOL AWZ 121/4
User guide WHIRLPOOL AWZ 121/4
Operating instructions WHIRLPOOL AWZ 121/4
Instructions for use WHIRLPOOL AWZ 121/4
Instruction manual WHIRLPOOL AWZ 121/4

TABLE OF CONTENTS	GB
DESCRIPTION OF THE DRYER	PAGE 12
FILTER	PAGE 12
BEFORE USING THE DRYER	PAGE 12
PRECAUTIONS	PAGE 12
PREPARING THE LAUNDRY	PAGE 13
SELECTING DRYING TIME OR PROGRAMME AND OPTIONS	PAGE 14
STARTING AND COMPLETING THE PROGRAMME	PAGE 15
INSTALLATION	PAGE 16
ELECTRICAL CONNECTION	PAGE 16
VENT CONNECTION	PAGE 18
DOOR REVERSIBILITY	PAGE 18
MAINTENANCE	PAGE 19
TROUBLE SHOOTING GUIDE	PAGE 19
AFTER-SALES SERVICE	PAGE 19

To get full satisfaction from your dryer, please read carefully your instruction manual.

11



[You're reading an excerpt. Click here to read official WHIRLPOOL AWZ 121/4 user guide](http://yourpdfguides.com/dref/4849172)
<http://yourpdfguides.com/dref/4849172>

Manual abstract:

11 DESCRIPTION OF THE DRYER 1. Work-top 2. Contact pin 3. Door (Door opening can be reversed). See "Door reversibility" section. To open the door: pull the handle out. To close the door: push the door gently until it closes. 4. Lint filter FILTER Clean the lint filter at the end of each drying cycle. 1.

Pull the filter upwards. 2. Brush lint using a soft brush or your fingertips. 3. Push it back into housing until it clicks.

Filter Indicator light (if available) It warns that the filter is dirty and needs to be cleaned. If the laundry is insufficiently dry, check that the filter is not clogged. BEFORE USING THE DRYER •After unpacking please make sure that the dryer is undamaged. In case of doubt do not use the dryer but call a qualified technician or your retailer. @@@@Packaging material The packaging material can be 100% recycled, as confirmed by the recycling symbol ().

2. Dryer The dryer is built from recyclable materials. If you decide to scrap the dryer act responsibly and observe local waste disposal by laws. Cut off the power cord so that the dryer cannot be connected to the mains. PRECAUTIONS Child safety •After use, set the programme selector to position "0". @@Turn the articles inside out. @@@@towels from thin underwear). C) By type of fabrics Cottons/linen: Towels, cotton jersey, bed and table linen made of cotton or linen. Synthetics: Blouses, shirts, overalls, etc. made of polyester or polyamide, as well as for cotton/ synthetic mixes.

D) By drying level •Sort into: iron dry, cupboard dry, etc. Do not tumble dry: Woollens, silk, delicate fabrics, nylon stockings, delicate embroidery, fabrics with metallic decorations, bulky items such as sleeping bags, etc. Attention: Do not dry articles which have been treated with a dry cleaning fluid or rubber articles (danger of fire or explosion). @@@@2. @@@@Press the button again to cancel the option. Delayed Start Delays dryer starting. @@After the desired time is selected, press the Start button. When the light flashes the delayed start is running. The delay can be changed or cancelled by selecting "0" with the programme selector knob. Opening the door stops the countdown.

@@Gentle Reduces the drying temperature. Suitable for delicate articles. Rapid (Cottons only) Max. 3,5 kg. Shortens the drying time (e.g. cloths or other laundry of equal size). Do not use the option for large items (e.g. sheets or similar).

Buzzer Pressing the button initiates a buzzer sound to signal at regular intervals, at the end of the drying cycle. 3. Additional Programmes Airing The laundry will be aired during 30 minutes without heating. Time programme (20 to 60 minutes) To gently finish dry or dry single items. Suitable for all fabrics. 14

SELECTING DRYING TIME OR PROGRAMME AND OPTIONS Time-steered dryer 1. Select the drying time and the options according to the table (see Programme Table). 2. Options (if available) To select an option, press the corresponding button. Press the button again to cancel the option.

Delayed start Delays dryer starting. @@It is possible to select a delay from 1 to 8 hours. @@The remaining time to the programme chart is shown on the selector. Opening the door stops the countdown. @@@@Gentle Reduces the drying temperature. @@3. @@@@2. If selected a buzzer sounds to signal the end of the drying cycle. It will sound at regular intervals for some time. 3.

@@@4. @@The "Machine On" light goes off. 5. Clean the lint filter at the end of each drying cycle. 6.

@@To operate the new programme press the Start button again. @@@@Remove the protective foil from the control panel. Level the dryer adjusting the 2 feet at the front. Take care not to trap the mains cable between the dryer and the wall. Stacking kit Your dryer can be stacked on top of your washing machine, using the stacking kit AMH 542, which is available from your dealer.

Minimum housing dimensions: Width: 600 mm Height: 850 mm Depth: 560 mm ELECTRICAL CONNECTION •• The electrical connection has to be carried out in compliance with local regulations. Information on the permissible operating voltage, the power consumption and the required fuse protection is given on the rating plate on the back of the dryer. The earthing of this dryer is compulsory by law. Do not use extension cords or multiple adapters. @@Do not operate the dryer if it has been damaged during transport. Contact a qualified service technician. @@@@2.2 Non-polarized plugs (e.g.

@@@approved type conforming to BS 1362 and proceed as follows: 2) CONNECTION TO A REWIRABLE PLUG - to be carried out only by a qualified electrician The wires in the mains lead are coloured in accordance with the following code: BLUE - "NEUTRAL" ("N") BROWN - "LIVE" ("L") GREEN AND YELLOW - "EARTH" ("E") To fit a new plug, proceed as follows: 2.

1 Polarized Plugs (e.g. 3 pin, 13 amp plug conforming to BS 1363A) a. The GREEN AND YELLOW wire must be connected to the terminal in the plug which is marked with the letter "E" or by the Earth symbol or coloured yellow or green and yellow. b. The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured black. c. The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured red. 1. Remove the fuse cover (A) and the fuse (B).

2. Fit the replacement 13 A fuse into the fuse cover. 3. Refit both into the plug. For all other types of plug, the supply socket should be protected by a 16 A fuse or circuit breaker at the distribution board.

17 VENT CONNECTION When delivered from the factory the vent hose with an adaptor is in the drum. N.B.: When vent hose is not supplied it is recommended to use the kit AMH 577 which is available from your dealer Vent hose mounting 1. Place a towel or the packaging beside the dryer.

2. @@3. Push the adaptor inside the hose (see diagram). @@@@The vent hose should not sag down. •Do not mount any filter on the end of the hose. The filter could block, reducing the performance of your dryer. ••Do not connect the vent hose to the heating system. @@•Keep the room free of dust. •The minimum distance from the air opening to the wall must be at least 10 cm. DOOR REVERSIBILITY To change the direction of opening of the door 1.

Unplug the dryer. 2. Open the door. 3. Remove the contact pin at the upper part of the door with a spanner. Turn the contact pin 90° and take it out. 4. Unscrew the 2 screws at the door hinge and remove the door. 5. Unscrew the 2 screws above and below the door lock system.

6. To remove the door lock: •Press the hook at the upper part down with a screwdriver, pull it forward and take the lock system out. 7. To change the door opening: •Turn the door. •Re-fit the door with the 2 screws at the preferred position.

•Hang the door lock system at the opposite side of the door and latch it. •Fix the 2 screws above and below the door lock system.



[You're reading an excerpt. Click here to read official WHIRLPOOL](http://yourpdfguides.com/dref/4849172)

[AWZ 121/4 user guide](http://yourpdfguides.com/dref/4849172)

<http://yourpdfguides.com/dref/4849172>

8. Replace the contact pin in the top of the door. 18 MAINTENANCE 1.

Wipe the cabinet with a mild household detergent. Avoid using abrasive cleaners. 2. Clean the lint filter at the end of each drying cycle. 3. If the lint filter mesh is clogged, clean it with water and a soft brush. 4. Wipe away fluff at the door seal and the inside of the do.



[You're reading an excerpt. Click here to read official WHIRLPOOL](#)

[AWZ 121/4 user guide](#)

<http://yourpdfguides.com/dref/4849172>