



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL AWZ 3281. You'll find the answers to all your questions on the WHIRLPOOL AWZ 3281 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual WHIRLPOOL AWZ 3281
 User guide WHIRLPOOL AWZ 3281
 Operating instructions WHIRLPOOL AWZ 3281
 Instructions for use WHIRLPOOL AWZ 3281
 Instruction manual WHIRLPOOL AWZ 3281

GB AWZ 3281



QUICK REFERENCE GUIDE
 please also carefully read
 the Instructions for Use
 and Installation Manual.

Options		Gentle Reduces Drying Intensity (recommended for delicate items)	Recommended Time Selection			Load Kg
			Spin Speed Washing machine			
Drying Times			rpm 800	rpm 1000	rpm 1200	
Cotton Max. 6 kg	Cupboard dry plus		85' 110'	-	60' 100'	3.5 5.0
	Cupboard dry		65' 90'	-	50' 75'	3.5 5.0
	Iron dry		55' 75'	-	30' 65'	3.5 5.0
Easy care Max. 2.5 kg	Cupboard dry plus		40'	20'	-	2.5
	Cupboard dry		35'	15'	-	2.5
	Iron dry		30'	10'	-	2.5
Airing	Laundry is aired for 6 minutes without heating.	-	-	-	-	-

Start	Starts the drying cycle.
On	The indicator lamp lights up when the dryer is on.
Filter	The indicator lamp lights up when the filter needs cleaning. Clean the filter at the end of every cycle.
DRYING TIME SEQUENCE INDICATORS	
Drying	The selector knob shows the progress of the cycle after drying start.
Airing	
End	

- Recommended drying times are based on spinning speeds of 800, 1000 and 1200 rpm.
- For reduced spinning speed a longer drying time should be selected.
- Drying times may be longer for towelling and heavier items.

5019 307 00404



[You're reading an excerpt. Click here to read official WHIRLPOOL AWZ 3281 user guide](http://yourpdfguides.com/dref/4913516)
<http://yourpdfguides.com/dref/4913516>

Manual abstract:

@@The indicator lamp lights up when the dryer is on. The indicator lamp lights up when the filter needs cleaning. Clean the filter at the end of every cycle. - 35' 15' 2.5 Filter 30' 10' 2.5 DRYING TIME SEQUENCE INDICATORS - - - Drying The selector knob shows Airing the progress of the cycle after drying start. End •••Recommended drying times are based on spinning speeds of 800, 1000 and 1200 rpm. For reduced spinning speed a longer drying time should be selected. Drying times may be longer for towelling and heavier items. 5019 307 00404 PREPARING THE LAUNDRY 1.

Check that all fastenings are closed and that pockets are empty. 2. Turn the articles inside out. 3. Place laundry loosely in the drum to make sure it doesn't become tangled.

Sort laundry as follows: A) By care symbols (on the collar or inside seam): Suitable for tumble drying Tumble drying with reduced drying intensity only Do not tumble dry B) By amount and thickness/weight Whenever the load to be dried exceeds dryer capacity, separate laundry according to weight (e.g. towels from thin underwear). C) By type of fabrics Cotton/linen: towels, cotton jersey, bed and table linen made of cotton or linen. Synthetics/Easy Care: blouses, shirts, overalls, etc.

made of polyester or polyamide, as well as cotton/synthetic mixes. D) By drying level •Sort into: iron dry, cupboard dry, etc. @@@@@@•Press the button again to cancel the option. STARTING AND COMPLETING A DRYING CYCLE 1. @@@@@@2. @@The dryer indicator lamp "On" switches off. @@Set the time selector knob to the programme "Airing". 2. @@@@3. @@Open the door.

2. Pull the filter upwards. 3. Remove lint using a soft brush or your fingertips. 4. Push the filter firmly back into place. BUILT-IN INSTALLATION To built in the dryer 1. It is recommended to not remove the worktop. 2. Connect the dryer to an external ventilation system in order to prevent steam from damaging your furniture during the years.

TROUBLESHOOTING GUIDE If a fault occurs, before contacting our AfterSales Service, make the following checks to try and remedy the problem: Drying takes too long / laundry is not dry enough: •Was the correct drying time selected? •Was the inserted laundry too wet (Washing machine spin speed less than 800 rpm)? •Is the lint filter dirty (filter indicator lamp on)? The dryer does not operate: •Is the power plug properly inserted into the mains electricity socket? •Is there a power failure? •Has the fuse blown? •Is the door properly closed? •Has the drying time been selected? •Has the Start button been pressed? Lint filter indicator lamp on: •Is the lint filter clean? @@Please specify: •The nature of the fault. •The dryer type and model. @@• Your full address and phone number. 5019 307 00404 .



[You're reading an excerpt. Click here to read official WHIRLPOOL
AWZ 3281 user guide
http://yourpdfguides.com/dref/4913516](http://yourpdfguides.com/dref/4913516)