



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL AWZ 410. You'll find the answers to all your questions on the WHIRLPOOL AWZ 410 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual WHIRLPOOL AWZ 410
User guide WHIRLPOOL AWZ 410
Operating instructions WHIRLPOOL AWZ 410
Instructions for use WHIRLPOOL AWZ 410
Instruction manual WHIRLPOOL AWZ 410

3Gb20105.fm5 Page 2 Thursday, February 28, 2002 4:33 PM

CONTENTS

BEFORE USING THE WASHER-DRYER
FIRST WASH CYCLE
PRECAUTIONS AND GENERAL RECOMMENDATIONS
DESCRIPTION OF THE WASHER-DRYER
CHILD SAFETY DEVICE
PREPARING LAUNDRY
DETERGENT AND ADDITIVES
WASHING PROGRAMME
REMOVING THE FILTER
DRAINING RESIDUAL WATER
CARE AND MAINTENANCE
TROUBLESHOOTING GUIDE
AFTER-SALES SERVICE
MOVING AND TRANSPORTING THE APPLIANCE
INSTALLATION



[You're reading an excerpt. Click here to read official WHIRLPOOL AWZ 410 user guide](http://yourpdfguides.com/dref/4918965)
<http://yourpdfguides.com/dref/4918965>

Manual abstract:

fm5 Page 2 Thursday, February 28, 2002 4:33 PM CONTENTS BEFORE USING THE WASHER-DRYER FIRST WASH CYCLE PRECAUTIONS AND GENERAL RECOMMENDATIONS DESCRIPTION OF THE WASHER-DRYER CHILD SAFETY DEVICE PREPARING LAUNDRY DETERGENT AND ADDITIVES WASHING PROGRAMME REMOVING THE FILTER DRAINING RESIDUAL WATER CARE AND MAINTENANCE TROUBLESHOOTING GUIDE AFTER-SALES SERVICE MOVING AND TRANSPORTING THE APPLIANCE INSTALLATION 3Gb20105.fm5 Page 3 Thursday, February 28, 2002

4:33 PM Home Appliances BEFORE USING THE WASHER-DRYER 1.Removing the packaging and inspection • After unpacking, make sure that the washerdryer is undamaged. If in doubt do not use the washer-dryer. Contact After-Sales Service or your local retailer. • Keep the packaging material (plastic bags, polystyrene parts, etc.) out of the reach of children, as they are potentially dangerous. 5.Drain • Connect the drain hose to the siphon or hook it over the edge of a sink with the "U" bend (see "Installation/Connecting the water drain hose"). • If the washer-dryer is connected to a built-in drainage system, ensure the latter is equipped with a vent to avoid simultaneous loading and draining of water in the washer-dryer (siphoning effect).

2.Removing the transit bolts • The washer-dryer is fitted with transit bolts to prevent internal damage during transport. Before using the washer-dryer you must remove the transit bolts (see "Installation/ Removal of the transit bolts"). 6.Electrical Connection • Electrical connections must be carried out by a qualified technician in compliance with the manufacturer's instructions and current standard safety regulations.

• Voltage information, power consumption and electrical protection data are supplied on the inside of the filter cover. • The appliance must be connected to the mains by means of a socket with an earth connection in accordance with current regulations. Regulations require that the appliance is earthed. The manufacturer declines all liability for injury to persons or pets, or damage to property directly or indirectly due to failure to observe the directions. • Do not use extension leads or multiple sockets.

• Before any maintenance work on the appliance disconnect it from the mains supply. • After installation, access to the mains plug or disconnection from the mains supply must be ensured at all times via a double-pole switch. • Do not operate the washer-dryer if it has been damaged during transport. Inform After-Sales Service. @@@@

• Supply: Cold water only • Tap: 3/4" threaded hose connector • Water pressure: 0.05-1.00 MPa (0.5-10 bar). Minimum housing dimensions: Width Height: Depth: 595 mm 850 mm 530 mm 3 3Gb20105.fm5 Page 4 Thursday, February 28, 2002 4:33 PM FIRST WASH CYCLE This initial cycle without laundry serves to eliminate any water remaining after your appliance was tested at the factory.

1.Open the water tap. 2.Close the door. 3.Pour a small amount of detergent (about 30 ml) into the detergent dispenser . 4.Select a short programme (see programme chart). 5.Press the "On/Off" button.

PRECAUTIONS AND GENERAL RECOMMENDATIONS 1.Packing • The packaging material is recyclable as indicated by the recycling symbol . Adhere to local regulations when disposing of packing and old appliances • The washer-dryer is manufactured from recyclable materials.

Dispose of the appliance in conformity with local waste disposal regulations. • Before scrapping, cut off the power cable so that it cannot be connected to the mains. • Remove detergent from the dispenser if you intend to scrap your washer-dryer. 2.Energy saving tips • To obtain the best use of energy, water, detergent and time, use the recommended maximum load size for the selected programme.

• Do not exceed manufacturers' recommended dosages as shown on the detergent package. • Use "Prewash" for heavily soiled laundry only! Save detergent, time, water and energy consumption by not selecting "Prewash" for slight to normally soiled laundry. You save on water, energy and time as a result. • Pretreat stains with stain remover or soak dried in stains in water before washing in the washerdryer, this reduces the necessity of a hot water programme. • Save energy by using a 60° C instead of a 90° C wash programme or a 40° C instead of a 60° C wash programme. • Save energy and time by selecting a high spin speed to reduce the water content in laundry before using the dryer (for machines with adjustable spin speed). 4.Child safety • Children must not be allowed to play with the washer-dryer. 5.General recommendations • When the washer-dryer is not in use unplug it and turn off the water tap.

• Prior to cleaning and maintenance switch off the washer-dryer and disconnect it from the mains. • To clean the outside of the washer-dryer, use a neutral detergent and a damp cloth. • Do not use abrasive detergents. • Do not attempt to force the door open. • If necessary, the power cable may be replaced with an identical one obtained from our AfterSales Service. The power cable must only be replaced by a qualified technician. 6.EC Declaration of conformity •

This washer-dryer has been designed, constructed and distributed in compliance with the safety regulations of EC Directives: 73/23/EEC Low Voltage Directive 89/336/EEC Electromagnetic Compatibility Directive 93/68/EC CE Marking Directive. 4 3Gb20105.fm5 Page 5 Thursday, February 28, 2002 4:33 PM Home Appliances DESCRIPTION OF THE WASHER-DRYER 1.

Worktop 2. 3. 4. 5. Control panel Detergent dispenser Door Door handle • To open the door press the button inside the handle and pull • Close the door by pressing it firmly (the lock will click into place) Filter (behind cover) After-Sales Service sticker (inside door) Adjustable feet Technical specifications sticker (inside cover) 3 1 2 4 7 5 6.

7. 8. 9. 8 9 6 CHILD SAFETY DEVICE An electrical device prevents the door from opening while the appliance is in operation. When the wash cycle ends, wait 2 minutes for the door to unlock.

5 3Gb20105.fm5 Page 6 Thursday, February 28, 2002 4:33 PM PREPARING LAUNDRY Sorting the laundry 1.Sort laundry as follows • Type of fabric/care label symbol Cotton, mixed fibres, synthetics, wool, handwash items. • Colour Separate whites from coloured items. Wash new coloured items separately. • Size Wash items of different sizes in the same load to improve washing efficiency and distribution in the drum. • Delicate items Wash delicates separately: use a special programme for Pure New Wool , curtains and other delicates. Remove curtain hooks or wash curtains with hooks inside a cloth bag. Use the special program for handwash fabrics. Wash small articles (e.

g. nylon stockings, belts etc.) and items with hooks (e.g. bras) in a special wash bag or in a zipped-up pillow case.



[You're reading an excerpt. Click here to read official WHIRLPOOL](http://yourpdfguides.com/dref/4918965)

[AWZ 410 user guide](http://yourpdfguides.com/dref/4918965)

<http://yourpdfguides.com/dref/4918965>

2. Empty pockets Coins, safety pins and similar items can damage your laundry and the appliance drum and tub. 3. Fasteners Close zips and fasten buttons or hooks; loose belts or ribbons should be tied together. Stain removal • Blood, milk, egg etc. are generally removed by the automatic enzyme phase of the programme. • To remove red wine, coffee, tea, grass and fruit stains etc. add a stain removing agent to the detergent dispenser or chlorine bleach in compartment (depending on model). • Load the laundry only afterwards. • Only use products designed for use in washing machines.

• Follow manufacturer's instructions. • Note: use only specific detergents for washing wool. • Do not use solvents (e.g. trichloroethylene, benzene, etc).

• Notes: Too much detergent can result in excessive foam. This reduces washing efficiency. If the washer-dryer detects too much foam, it may prevent spinning. • In this case only use powder detergents for the main wash. • The dispenser has three chambers. • Check that the programme selector is on "Stop". 2. Plug in the appliance. 3. Open the water tap.

4. Set the programme selector to the desired programme. 5. 6. 7. Select the options desired by pressing the corresponding buttons. By a further press of the button this option can be turned off again. 8. Check that the door is well closed. Press the "On/Off" button.

The indicator lamp lights up. Attention: the programme selector knob only moves clockwise, do not force it in the opposite direction. Door lock The door locks automatically after the programme start until the end of the programme is functioning correctly (use a table lamp or similar); • "On/Off" button pressed.

Detergents and additive produce residues in the detergent drawer at end of wash. Check whether: • the siphon device is correctly installed and clean (see "Care and maintenance"); • enough water is being supplied.

• If not, turn on the tap and switch the washer-dryer off and then on again. The washer-dryer vibrates during the spin cycle. Check whether: • the washer-dryer is perfectly horizontal and all four feet adjusted (see "Installation"); • the transit bolts have been removed. The transit bolts must be removed before the washer-dryer can be used (see "Installation"). The washer-dryer stops during the programme.

Check whether: • the "Rinse and Hold" button is pressed; terminate this option by pressing the button again; • the "On/Off" indicator light is flashing. Press the "On/Off" button. Final spin results are poor: The washer-dryer has an imbalance detection and correction system. If individual heavy articles are loaded (bathmat, bathrobe) this system may reduce the spin speed automatically or even interrupt the spin cycle, if the imbalance is too great even after several spin starts. • If the laundry is still too wet at the end of the cycle, add smaller articles of laundry and repeat the spin cycle. • Excessive foam formation may also prevent spinning. Ensure correct amount of detergent is used Important: wait one hour and if the fault persists, contact After-Sales Service, quoting the error number displayed (see "After-Sales Service"). Insufficient or no water supply. Check whether: • the water tap is turned on completely; • kinks are present in the water hose; • the water hose filter is clogged; • the water in the supply hose is frozen. Waste water not pumped out.

Check whether: • the drain hose is correctly installed (see "Installation"); • the filter is clogged; • the water in the drain hose is frozen; • the "Rinse and Hold" button is pressed. 11 3Gb20105.fm5 Page 12 Thursday, February 28, 2002 4:33 PM AFTER-SALES SERVICE Before contacting After-Sales Service: 1. Try to remedy the problem yourself (see "Troubleshooting guide"). 2. Restart the programme to check whether the problem has solved itself. 3. If the malfunction persists, call After-Sales Service, Specify: • The nature of the fault. • The exact model of the washer-dryer. • The service code (number after the word SERVICE).

The After-Sales Service sticker is on the inside of the door. • Your full address. • Your telephone number and area code. After-Sales Service phone numbers and addresses are given on the guarantee card. Alternatively, consult the dealer from whom you purchased the appliance.

MOVING AND TRANSPORTING THE APPLIANCE Never move the washer-dryer by carrying it by the worktop. 1. Unplug the appliance. 2. Turn off the tap. 3. Disconnect the inlet and drain hoses. 4. Eliminate all water from the hoses and from the washer-dryer (see "Removing the filter", "Draining residual water"). 5. Fit the transit bolts (obligatory) (see "Installation"). 12 3Gb20105.fm5 Page 13 Thursday, February 28, 2002 4:33 PM Home Appliances INSTALLATION Removing the transit bolts 1. Slacken and remove the screws "A" which lock the drum during transport by following the instructions given at the side. 2.

Insert a screwdriver into the empty holes and tilt to remove the plastic spacers "C" (transit bolts) and retrieve them. 3. Keep the transit bolts for future use. If the spacers remain inside the machine: open the rear panel by removing the screws "B" remove the spacers and replace the panel. Fit the transit bolts before transporting the appliance as follows: 1. Disconnect the plug, remove the inlet and drain hoses. 2. Unscrew fixing screws "B" on the rear panel and remove it.

3. Insert the four screws "A" of the safety catch in the four rubber bushes, then put the four spacers "C" on the screws behind the panel.

4. Position the rear panel on the appliance, first tighten the four screws "A" of the safety catch for transportation to the rear part of the tub, then use screws "B" to fit the panel to the appliance. A B A B A C 13 3Gb20105.fm5 Page 14 Thursday, February 28, 2002 4:33 PM Adjust the feet Slight unevenness of the floor may be compensated by turning the four washer-dryer feet in or out (do not insert wooden shims, cardboard or similar materials under the feet):

1. Slacken the lock nut using the spanner supplied.

2. Adjust the height of the foot, turning it by hand. 3. Tighten the lock nut anticlockwise towards the washer-dryer. If the washer-dryer is to be installed on a wooden floor, distribute the weight by placing it on a 60 x 60 (or 40) cm sheet of plywood at least 3 cm in thickness.

Secure the plywood sheet to the floor. Connecting the water inlet hose For models with straight hose 1. Insert the mesh strainer (included in the accessories) into the threaded tap coupling and the coupling between the hose and the washer-dryer. 2. Connect the inlet hose carefully, preferably by hand, to the tap.

3. Make sure there are no kinks in the hose.



[You're reading an excerpt. Click here to read official WHIRLPOOL](http://yourpdfguides.com/dref/4918965)

[AWZ 410 user guide](http://yourpdfguides.com/dref/4918965)

<http://yourpdfguides.com/dref/4918965>

@@@@@@@The washer-dryer can be connected without a non-return valve. Connecting the water drain hose 1.Unhook the drain hose from the right clip.

Attention: do not unhook the left drain hose connection. 2.Connect the drain hose to the siphon or hook it over the edge of a sink by means of the "U" bend supplied. 3.Make sure there are no kinks in the hose. 4.Secure the hose so that it cannot fall down while the washer-dryer is running. Small hand basins are not suitable. If the hose is to be inserted directly into the drain pipeline, the inside diameter of the pipe must be appropriate in relation to the diameter of the drain hose. If you need to add an extension, use a flexible hose of the same type.

Secure the connections with suitable hose clamps. Max. drain hose length: 2.50 m Max. drain height: 90 cm Min. drain height: 60 cm A 1 14 .



[You're reading an excerpt. Click here to read official WHIRLPOOL](#)

[AWZ 410 user guide](#)

<http://yourpdfguides.com/dref/4918965>