



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL AWZ 410. You'll find the answers to all your questions on the WHIRLPOOL AWZ 410 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual WHIRLPOOL AWZ 410**  
**User guide WHIRLPOOL AWZ 410**  
**Operating instructions WHIRLPOOL AWZ 410**  
**Instructions for use WHIRLPOOL AWZ 410**  
**Instruction manual WHIRLPOOL AWZ 410**

3gb20163.fm5 Page 1 Monday, March 4, 2002 6:47 PM



**GB AWZ 410**

- "On/Off" Indicator Light
- "On/Off" Button
- "Spin Speed Reduction" Button
- "Rinse and Hold" Button
- "Intensive Rinse" Button
- "Dryer Half Load" Button
- Washing "Temperature" Selector Knob
- "Drying Time" Selector Knob
- "Washing Program" Selector Knob



Avoid touching the glass door during and immediately after running the drying cycle since it will be hot.  
Do not dry fabrics that have been treated with solvents or petroleum based products, sleeping bags, duvets or bulky clothing.  
Avoid drying clothing excessively in order to prevent creasing and difficult ironing.  
For hand-washed items, remove excess water using the highest spin speed before starting the drying cycle.  
\* option / Yes: add the detergent.

Programme selector knob	Programme	Type of load/Notes	Max. Load Washing Kg	Washing temperature selector knob °C	Detergent and Additives					Options			1/2 load for drying	Max. drying load	Approx. Time Iron Drying	Approx. Time Customised Drying
					Pre-wash	Main wash	Fabric Softener	Intensive Rinse	Rinse and Hold	Spin speed Reduction	Brooks Plus	ARIC Care Plus				
1	Cotton with prewash	Heavily soiled, hard-wearing cotton and linen fabrics (bed linen, table linen, underwear, shirts etc.).	5.0	Max. 90°	yes	yes	*	*	—	1000/550	*	2.5 kg	80/120	140		
2	Cotton	Normally soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton or linen.	5.0	Max. 90°	—	yes	*	*	—	1000/550	*	2.5 kg	80/120	140		
3	Coloured Cotton	Average to heavily soiled, hard-wearing cotton or linen fabrics.	5.0	Max. 60°	—	yes	*	*	—	1000/550	*	2.5 kg	80/120	140		
4	Quick wash	Normally soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton or linen.	5.0	Max. 40°	—	yes	*	*	—	1000/550	*	2.5 kg	80/120	140		
B	Special rinse for softeners	Programme for treating laundry with starch and/or softener. The programme ends with an intensive spin cycle.	5.0	—	—	—	*	*	—	1000/550	—	2.5 kg	80/120	140		
C	Drain + Spin	Drain, with final spin. Alternative method for unloading laundry earlier.	5.0	—	—	—	—	—	—	—	—	—	—	—		
5	Synthetic with prewash	Heavily soiled shirts, blouses, aprons, etc. made of polyester (diolen, trevis), polyamide (perlon, nylon) or cotton blends.	2.5	Max. 60°	yes	yes	*	—	*	550	*	1.5 kg	30/40	50		
6	Synthetic	Lightly to normally soiled blouses, t-shirts, aprons, etc. made of polyester (diolen, trevis), polyamide (perlon, nylon) or cotton blends.	2.5	Max. 60°	—	yes	*	—	*	550	*	1.5 kg	30/40	50		
A	Rinse	Rinse program, ending with a spin cycle.	2.5	—	—	—	*	—	*	550	—	1.5 kg	30/40	50		
B	Special rinse for synthetic fabrics	Programme for treating laundry with starch and/or softener. The programme ends with an intensive spin cycle.	2.5	—	—	—	*	—	*	550	—	1.5 kg	30/40	50		
D	Drain + Spin	Drain, with final spin. Alternative method for ending the "Synthetic", "Delicate" and "Wool" programmes and for unloading the laundry earlier.	2.5	—	—	—	—	—	—	550	—	1.5 kg	30/40	50		
7	Wool	Only machine washable wools with Pure New Wool label. If you select "Rinse and Hold" do not leave items to soak for too long.	1.0	Max. 40°	—	yes	*	—	*	550	—	—	—	—		
D	Drain + Spin for wools	Drain, with final spin. Alternative method for ending the "Synthetic", "Delicate" and "Wool" programmes and for unloading the laundry earlier.	1.0	—	—	—	—	—	—	—	—	—	—	—		

\* drying times for guidance only. These times will be perfected with experience and use.

Whirlpool is a registered trademark of Whirlpool USA.  
5019 301 20163



You're reading an excerpt. [Click here to read official WHIRLPOOL AWZ 410 user guide](http://yourpdfguides.com/dref/4918966)

**Manual abstract:**

fm5 Page 1 Monday, March 4, 2002 6:47 PM GB AWZ 410 "On/Off" indicator light "On/Off" Button "Spin Speed Reduction" Button "Rinse and Hold" Button "Intensive Rinse" Button "Dryer Half Load" Button Washing "Temperature" Selector Knob "Drying Time" Selector Knob "Washing Program" Selector Knob Max Washing Load temperature Washing selector knob Kg °C Max. 90° Max. 90° Max. 60° Max. 40° — — Max. 60° Max. 60° — — — Max. 40° — yes — — — — — yes — — — — — yes yes yes yes — — yes yes — — — yes — L L L L L — L L L L — L — L L L L L — — — — — — — — — — — L L L L — L — 1000 550 1000 550 1000 550 1000 550 1000 550 — 550 550 550 550 550 550 — L L L L — — L L — — — — — 2.5 kg 2.5 kg 2.

5 kg 1.5 kg 1.5 kg — — Detergent and Additives Prewash Main wash 1/2 load Fabric Intensive Rinse and Spin speed for drying Softener Rinse Hold Reduction Options Max. drying load Approx Time Iron Drying \* 80/120 80/120 80/120 80/120 80/120 — 30/40 30/40 30/40 30/40 30/40 — — Approx Time Cupboard Drying \* 140 140 140 140 140 — 50 50 50 50 50 — — Avoid touching the glass door during and immediately after running the drying cycle since it will be hot. @@@@ Normally soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton or linen. Average to heavily soiled, hard-wearing cotton or linen fabrics. Normally soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton or linen. Programme for treating laundry with starch and/or softener. The programme ends with an intensive spin cycle. Drain, with final spin. Alternative method for unloading laundry earlier. Heavily soiled shirts, blouses, aprons, etc. made of polyester (diolen, trevira), polyamide (perlon, nylon) or cotton blends.

Lightly to normally soiled blouses, t-shirts, aprons, etc. made of polyester (diolen, trevira), polyamide (perlon, nylon) or cotton blends. Rinse program, ending with a spin cycle. 5.0 5.0 5.0 5.0 5.0 5.0 2. 5 2.5 2.5 2.5 2.5 1.

0 1.0 Special rinse for Programme for treating laundry with starch and/or softener. The programme ends with an synthetic fabrics intensive spin cycle. Drain + Spin Wool Drain, with final spin. Alternative method for ending the "Synthetic", "Delicate" and "Wool" programmes and for unloading the laundry earlier. Only machine washable woollens with Pure New Wool label. If you select "Rinse and Hold" do not leave items to soak for too long. Drain, with final spin. Alternative method for ending the "Synthetic", "Delicate" and Drain + Spin for woollens "Wool" programmes and for unloading the laundry earlier. \* drying times for guidance only. These times will be perfected with experience and use. Whirlpool is a registered trademark of Whirlpool USA. 5019 301 20163 3gb20163.fm5 Page 2 Monday, March 4, 2002 6:47 PM CONSUMPTION DATA Programme 1 - Cotton 2 - Cotton 3 - Cotton 4 - Cotton 5 - Synthetics 6 - Synthetics 7 - Wool Temperature Selector (°C) 90° 90° 60° 40° 60° 60° 40° Load (kg) 5.0 5.

0 5.0 5.0 2.5 2.5 1.0 Water (l) 57 50 53 53 60 60 61 Energy (kWh) 1.85 1.07 0.97 0.60 0. 83 0.42 0.32 Approx. @@@@ Switch off the appliance by pressing the button. "ON/OFF" 2. Select the new programme. 3. Start the programme by pressing the "ON/OFF" button. @@ Press the "ON/OFF" button. 2. @@ AT THE END OF THE WASH PROGRAMME 1. @ 2. To unload the machine wait for the door to release (approx. 2 minutes). 3. Switch off the appliance, open the door and unload the washing. 4. @@ Load the machine according to the maximum drying load table. @@@@ 3. @ 4.

Press the "Dryer Half Load" button. 5. @@ SETTING THE WASHING/DRYING CYCLE IN SEQUENCE 1. @@ 2. Load the washer-dryer (according to the max. drying load table) and close the door 3. @@ 4. Press the "Dryer Half Load" button. 5. @@ 6.

Press the "ON/OFF" button to start the drying cycle. NOTES AND INDICATIONS FOR USE • CLEANING THE FILTER To ensure smooth operation of the pump, check the filter regularly and clean it when necessary. The use of the prewash cycle increases programme duration by approximately 15 min. Consumption data was calculated based on normalized conditions in compliance with Standard IEC 60 456. The data on the "Energy Label" refers to programme "Coloured Cotton 60° C".

Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash. The drying times shown may vary based on the spin speed and type of fabric. ADD THE DETERGENT, CLOSE THE DOOR AND SELECT THE PROGRAMME Add the detergent as described in the programme table or in the chapter "Detergent and Additives" in the booklet. 1. Make sure that the Programme selector is set to "Stop".

2. Open the water tap. 3. Set the Programme Selector to the desired programme. 4. Set the thermostat knob to the desired temperature. 5. Set the spin selector knob to the desired speed. 6. Special options can be selected, if required.

7. Check that the door is well closed and turn on the washer-dryer by pressing the "ON/OFF" button. The indicator light comes on, indicating that the washer-dryer is on. SELECT THE DESIRED OPTIONS "Dryer half load" button (depending on model) "Intensive Rinse" button (depending on model) • The quantity of water duration of the rinse cycle are increased. • This option is especially recommended in areas with extremely soft water, for baby linen and linen belonging to skin allergy sufferers. "Rinse and Hold" button (depending on model) only for synthetic and wool programmes • The laundry remains in the final rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from running. @@@@ If you do not wish to spin the clothes, turn the programme selector knob to the Drain cycle, after pressing the "No Spin" button. "Spin Speed Reduction" Button Reduces or increases the spin speed from 1000 to 550. Whirlpool is a registered trademark of Whirlpool USA. 5019 301 20163 .



[You're reading an excerpt. Click here to read official WHIRLPOOL AWZ 410 user guide http://yourpdfguides.com/dref/4918966](http://yourpdfguides.com/dref/4918966)