



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL AWZ 475/S. You'll find the answers to all your questions on the WHIRLPOOL AWZ 475/S in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual WHIRLPOOL AWZ 475/S
User guide WHIRLPOOL AWZ 475/S
Operating instructions WHIRLPOOL AWZ 475/S
Instructions for use WHIRLPOOL AWZ 475/S
Instruction manual WHIRLPOOL AWZ 475/S

AWZ510E-AWZ 510SE-AWZ512E-AWZ512SE-AWZ475S PROGRAMME CHART

This washer/dryer is equipped with automatic safety functions which may not react appropriately, e.g.:

- A. "Service" indicator
- B. "Clean Pump" indicator
- C. "Water Tap Closed" indicator
- D. "Door open" indicator

E. Programme selector
 F. "Drying time" button
 G. "Variable spin" button
 H. "Start delay time indicator"
 I. Optional function buttons
 J. "Start delay" button

Programme	Temperature range	Spin Speed (rev/min)	Max. Load (kg)	Type of wash/Items (see carrier)	Diagnosis and advice		Special functions		Max. Monthly spin (rev/min)
					Water tap closed	Water tap open	Start delay	Variable spin	
White Cotton Antibacterial	30-60°C	1200	5.0	Normally to heavily soiled bed linen, table linen and underwear, towels, dresses, made of cotton and linen, as programme advanced, basket, laundry is separated into 2 parts, the basket removing efficiency has been increased to 20%.	Yes	Yes	Yes	Yes	Max.
Cotton	30-60°C	1200	5.0	Normally to heavily soiled bed linen, table linen and underwear, towels, dresses, made of cotton and linen, as programme advanced, basket, laundry is separated into 2 parts, the basket removing efficiency has been increased to 20%.	Yes	Yes	Yes	Yes	Max.
Synthetics	30-60°C	1200	2.5	Normally to heavily soiled bed linen, table linen and underwear, towels, dresses, made of cotton and linen, as programme advanced, basket, laundry is separated into 2 parts, the basket removing efficiency has been increased to 20%.	Yes	Yes	Yes	Yes	800 (1)
Delicates	30-60°C	1200	2.5	Delicate and delicate clothing, delicates, items and fabrics.	Yes	Yes	Yes	Yes	500 (1)
Wool	30-60°C	1200	1.0	Wool garments, woolens, wool, fur, silk, cashmere and other delicate items. This programme (40°C) is reserved and approved by The Woolmark Company for the care of wool.	Yes	Yes	Yes	Yes	600 (1)
Lightcare	35°C	1200	2.5	Colour and delicate clothing in wash or silk only suitable in cold water.	Yes	Yes	Yes	Yes	600 (1)
Quickwash	40°C	1200	2.5	Colour and delicate clothing in wash or silk only suitable in cold water.	Yes	Yes	Yes	Yes	Max.
Dailywash	40°C	1200	2.5	Slightly so normally soiled garments made of cotton and/or synthetics.	Yes	Yes	Yes	Yes	Max.
Cold wash	—	1200	5.0	Slightly soiled garments in cotton and/or synthetics washable only in cold water.	Yes	Yes	Yes	Yes	Max.
Drying	30°C	—	3.0	Drying can be carried out using the "Cotton" programme (with dry board of 1.5 kg).	—	—	—	—	—
Rise	—	—	5.0	Items on the last time and the first spin in the "Cotton" programme.	—	—	—	—	—
DrumSpin	—	—	5.0	Programme.	—	—	—	—	—

(1) For improved garment care, this speed is restricted to these programme.

© 2020 Whirlpool Corporation. All rights reserved. Whirlpool is a registered trademark of Whirlpool Corporation. The Whirlpool logo is a registered trademark of Whirlpool Corporation. The Whirlpool logo is a registered trademark of Whirlpool Corporation. The Whirlpool logo is a registered trademark of Whirlpool Corporation.

5019 301 20200



[You're reading an excerpt. Click here to read official WHIRLPOOL AWZ 475/S user guide](http://yourpdfguides.com/dref/4912416)
<http://yourpdfguides.com/dref/4912416>

• Press the button to set another spin speed. • If spin speed "0" is selected, the final spin is cancelled but intermediate spin peaks remain during rinse. The water is drained out only. At the end of a programme, the "End" indicator lights up signalling that the door can be opened. As long as a wash programme is running, the door remains locked and must not be forced open. In case you have an urgent need to open it during a running programme, refer to "Cancel (Reset) a running programme before the end". 461307266 5019 301 20200 .



[You're reading an excerpt. Click here to read official WHIRLPOOL](#)

[AWZ 475/S user guide](#)

<http://yourpdfguides.com/dref/4912416>