




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL AWZ 614 D WP. You'll find the answers to all your questions on the WHIRLPOOL AWZ 614 D WP in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual WHIRLPOOL AWZ 614 D WP
User guide WHIRLPOOL AWZ 614 D WP
Operating instructions WHIRLPOOL AWZ 614 D WP
Instructions for use WHIRLPOOL AWZ 614 D WP
Instruction manual WHIRLPOOL AWZ 614 D WP

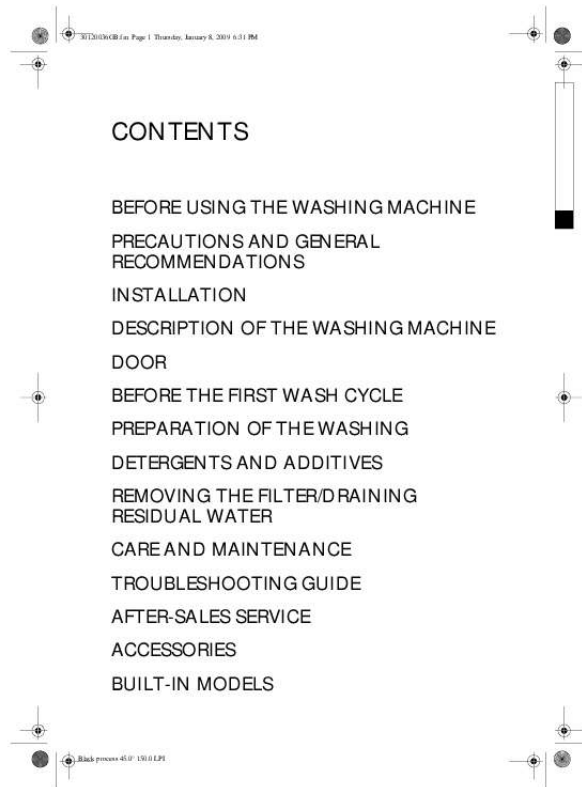

CONTENTS

BEFORE USING THE WASHING MACHINE

PRECAUTIONS AND GENERAL RECOMMENDATIONS

INSTALLATION

DESCRIPTION OF THE WASHING MACHINE

DOOR

BEFORE THE FIRST WASH CYCLE

PREPARATION OF THE WASHING

DETERGENTS AND ADDITIVES

REMOVING THE FILTER/DRAINING RESIDUAL WATER

CARE AND MAINTENANCE

TROUBLESHOOTING GUIDE

AFTER-SALES SERVICE

ACCESSORIES

BUILT-IN MODELS



[You're reading an excerpt. Click here to read official WHIRLPOOL AWZ 614 D WP user guide](http://yourpdfguides.com/dref/4830740)
<http://yourpdfguides.com/dref/4830740>

Manual abstract:

Contact After-Sales Service or your local retailer. • Check that the accessories and supplied parts are all present. @@@@ • Use only new hoses to connect the washing machine to the water supply. Used hoses must not be used and should be discarded, 5.Drain • Connect the drain hose to the siphon or hook it over the edge of a sink by means of the “U” bend supplied. • If the washing machine is connected to an integrated drainage system, ensure the latter is equipped with a vent to avoid simultaneous loading and draining of water (siphoning effect). 2.Remove the transport bolts • The washing machine is fitted with transport bolts to avoid any possible damage to the interior during transport. Before using the washing machine, it is imperative that the transport bolts are removed. • After their removal, cover the openings with the 4 enclosed plastic caps.

6.Electrical connections • Electrical connections must be carried out by a qualified technician in compliance with the manufacturer’s instructions and current standard safety regulations. • Voltage, power consumption and electrical protection data are supplied on the inside of the appliance door. • The washing machine must be connected exclusively by means of a socket with an earth connection in accordance with current regulations. The washing machine must be earthed by law.

The manufacturer declines all liability for possible damage to property or injury to persons or pets deriving from failure to observe the a/m directions. • Do not use extension leads or multi sockets. • Before any maintenance on the washing machine disconnect it from the mains supply. • After installation, access to the mains plug or to disconnection from mains supply must be ensured at all times via a double-pole switch. • Do not operate the washing machine if it has been damaged during transport.

Inform the After-Sales Service. • Mains cable replacement is only to be carried out by After-Sales Service. • Use the appliance only for domestic washing and for its intended applications. 3.Install the washing machine • You are advised not to install the appliance in a room where the temperature could drop to below 0°C. • Given the weight of the appliance, attention must be paid to safety standards when it is being moved. • When positioning the appliance, make sure that the power cable is not kinked or compressed and that it can be easily accessed if required. • Remove the protective film from the control panel (if available on your model). • Move the appliance without carrying it by the worktop. • Install the appliance on a solid and level floor surface, preferably in a corner of the room.

• Make sure that all four feet are stable and resting on the floor and then check that the washing machine is perfectly level (use a spirit level). • In case of wooden or so-called “floating floors” (for instance certain parquet or laminate floors), place the appliance on a 60 x 60 cm sheet of plywood at least 3 cm in thickness which is secured to the floor. • If the washing machine is installed on a carpeted floor, leave sufficient space between the appliance and the floor to guarantee the free circulation of air. Minimum housing dimensions: Width: Height: Depth: 600 mm 850 mm 600 mm 4.Water supply • Connect the water supply inlet hose in accordance with the regulations of your local water company. • Water supply: Cold water only (unless otherwise indicated on the programme chart) GB 2 Black process 45.0° 150.0 LPI 30120036GB.fm Page 3 Thursday, January 8, 2009 6:31 PM PRECAUTIONS AND GENERAL RECOMMENDATIONS 1.Packing • The packaging material is entirely recyclable, and marked with the recycling symbol .

Adhere to local regulations when disposing of packaging material. For washer/dryer models • Do NOT dry items that have been washed or treated with chemical stain removers, cooking oil, petroleum, acetone, alcohol, petrol, paraffin, white spirit, wax. Remove these substances by means of a hot wash with abundant detergent before drying. • Do NOT dry items made from foam rubber, latex, raincoats, waterproof fabrics, rubber airbeds, printed objects, clothes or pillows filled with foam rubber. These materials could melt and damage other items in the wash or damage the appliance.

2.Disposing of packaging and scrapping old washing machines • The appliance is built from reusable materials. It must be disposed of in compliance with current local waste disposal regulations. • Before scrapping, remove all detergent residues and cut off the power cable so that the washing machine is made unusable. • This appliance is marked according to European Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE).

By ensuring that this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health. The symbol on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. 4.Advice on saving energy • To achieve the best use of energy, water, detergent and time use the recommended maximum load size. • Do not exceed the recommended dosages on the detergent packet. • The Eco Flap - a special system in the outlet prevents detergent loss from the drum to avoid detergent loss into the environment. • Use the “Pre-wash” programme for heavily soiled laundry only.

Use a programme with no “Pre-wash” cycle for slightly or normally soiled items; You save on water, energy and time as a result. • Before using the washing machine, treat laundry with a stain remover or soak dry stained items in water so as to avoid having to use high temperature wash programmes. • Save energy by using a 60° C instead of a 95° C wash programme or a 40° C instead of a 60° C wash programme. • Save energy and time by selecting a high spin speed to reduce the water content in laundry before using a drying programme (for machines with adjustable spin speed). 3.Safety Instructions • The washing machine can only be used indoors. • Do not store flammable fluids near the appliance. • If you want to place a dryer on top of your washing machine, first contact our After-Sales Service or your specialist dealer to verify if this is possible. Placing a dryer on your washing machine is only admitted by using an appropriate stacking kit available through our After-Sales Service or your specialist dealer.



[You're reading an excerpt. Click here to read official WHIRLPOOL](http://yourpdfguides.com/dref/4830740)

[AWZ 614 D WP user guide](http://yourpdfguides.com/dref/4830740)

<http://yourpdfguides.com/dref/4830740>

• Do not leave the appliance plugged in when not in use.

• Turn off the tap when not in use. • Before any cleaning and maintenance switch off the machine or disconnect it from the mains. • Never open the door forcibly or use it as a step. • Children must not be allowed to play with the washing machine or to climb into the drum. • If necessary, the power cable may be replaced with an identical one obtained from our AfterSales Service.

The power cable must only be replaced by a qualified technician. • Lighters must not be left in pockets. 5.EC Declaration of Conformity • The appliance conforms to the following European Standards: 73/23/EEC Low voltage directive 89/336/EEC EMC Directive 93/68/EC CE Marking Directive . GB 3 Black process 45.

0° 150.0 LPI 30120036GB.fm Page 4 Thursday, January 8, 2009 6:31 PM INSTALLATION Remove the transport bolts 1. Loosen the three or four bolts (A). 2. Unscrew the bolts by hand. 3. Take hold of the bolts and plastic spacers and remove them. Keep the transport safety bolts for possible future use. 4.

Close the holes with the plastic covers (supplied with the documents). B A B 1 A A 4 TRANSPORT/HANDLING Never lift the appliance by the worktop when transporting. 1. Unplug the appliance. 2. Shut off the water tap. 3. Check that the door and detergent dispenser are properly closed. 4. Remove the water supply and drain hose from the domestic connection.

5. Remove any water remaining in the hoses and the appliance (see "Removing The Filter/Draining Residual Water"). 6. Pry off the plastic covers with a screwdriver and remove them. 7.

Insert the transit screws following the removal procedure in reverse. GB 4 Black process 45.0° 150.0 LPI 30120036GB.fm Page 5 Thursday, January 8, 2009 6:31 PM DESCRIPTION OF THE WASHING MACHINE 1 1 2 3 4 2 3 4 5 5 6 6 7 7 1.

2. 3. 4. 5. 6. 7. Worktop Control panel Detergent drawer After-Sales Service sticker (inside door) Door Pump access behind plinth or cover (depending on the model) Adjustable feet DOOR To open the door, hold the door handle, press the inside handle (if available on your model) and pull the door. Close the door by pressing it without excessive force until it clicks shut. BEFORE THE FIRST WASH CYCLE To remove any residual water used in testing by the manufacturer, we recommend that you carry out a short wash cycle without laundry. 1.

Turn on the water supply tap. 2. Close the door. 3. Pour a little detergent (about 30 ml) into the main wash chamber of the detergent dispenser. 4. Select and start a short programme (see separate "Programme Chart"). GB 5 Black process 45.0° 150.0 LPI 30120036GB.

fm Page 6 Thursday, January 8, 2009 6:31 PM PREPARATION OF THE WASHING 1.Sort the load according to... • Type of fabric / care label symbol Cottons, mixed fibres, easy care/synthetics, wool, handwash items.

• Colour Separate coloured and white items. Wash new coloured items separately. • Loading Wash items of different sizes in the same load to improve washing efficiency and distribution in the drum. • Delicates Wash small items (e.g. nylon stockings, belts etc.) and items with hooks (e.g. bras) in a washbag or pillow case with a zip fastener. Always remove curtain glides or wash curtains with the glides inside a cotton bag. Stain removal • Blood, milk, eggs etc. are generally removed by the automatic enzyme phase of the programme. • For stains made by red wine, coffee, tea, grass, fruit etc. @@@@ • Follow the manufacturer's instructions. @@ Open the door.

2. Unfold the laundry and place it loosely in the drum. Observe the load sizes given in the quick reference guide. @@3. Close the door. 2.Empty all pockets Coins, safety pins etc. @@@@Note: Use only specific detergents for wool. • Colour. • washing temperature.

• Degree and type of soiling. Remarks: • Whitish residues on dark fabrics are due to the insolth or open the cover (depending on the model) by using the separator of the detergent dispenser (fig. A / B). 3. Place a bowl beneath the filter.

@@4. Open the filter but do not remove it completely. Slowly turn the filter counterclockwise (fig. C) until the water begins to drain out. 5.

Wait until all the water has drained. 6. Now unscrew the filter completely and extract it. 7. Tilt the appliance forwards carefully to allow the water to flow out. 8. Clean the filter and the filter chamber. 9. Check that the pump impeller can still rotate. 10.

Re-insert the filter and screw it in clockwise as far as it will go. 11. @@ Check that the filter is inserted properly and securely. 12. Reinstall the plinth or the cover, depending on the model. 13. Plug in the appliance again. 14. @@@@1. Press "PUSH" and extract the dispenser drawer.

2. Remove the cover grid from the fabric softener compartment. @@3. Wash all the parts under running water. 4.

Clean detergent from the dispenser with a damp cloth. 5. @@@@Close the tap and loosen the inlet hose on the tap. 2. @@3.

Now unscrew the inlet hose on the rear of the washing machine. 4. @@5. Refit the mesh filter and screw the inlet hose on again. 6. Turn on the tap and check that the connections are water-tight. @@@@ • The socket or fuse is faulty (use another lamp or electrical device to test the socket). • The "On/Off" switch (if present) has not been pressed. • The door has not been closed correctly. The machine will not start even though the "Start" button has been pressed The machine stops • The "Rinse Hold" function (if present) is turned on and the Anticrease light during the programme goes on in the programme sequence indicator; terminate "Rinse Hold" and the "Start" light by pressing the "Start" button or by choosing and starting the "Drain" flashes programme.

• the programme has been changed: select the new programme and press "Start". • The programme has been interrupted and the door opened: close the door and re-start the programme by pressing "Start". • The appliance's safety system has been activated (see "Description of red indications"). • The water tap is not open or the water inlet hose is kinked ("Water tap closed" indication lights up). The dispenser contains • The separator in the main wash chamber has not been correctly fitted or is detergent and/or not suitable for the use of powder and liquid detergents (see "Detergents and additive residue additives"). • The water level is insufficient; the mesh filters of the water supply may be blocked (see "Care and maintenance"). The washing machine • The transport bolts have not been removed; before using the machine, it vibrates during the spin is imperative that the transport bolts are removed. cycle • The appliance is not level/not standing firmly on all four feet (see separate "Installation Guide"). Final spin results are The washing machine has an imbalance detection and correction system.



[You're reading an excerpt. Click here to read official WHIRLPOOL](http://yourpdfguides.com/dref/4830740)

[AWZ 614 D WP user guide](http://yourpdfguides.com/dref/4830740)

<http://yourpdfguides.com/dref/4830740>

If poor individual heavy items are loaded (e.

g. bathrobes), this system may reduce the spin speed automatically or even interrupt the cycle in order to protect the washing machine. • Heavy items may prevent the spin cycle from being carried out; add small items and repeat the spin cycle. • The excessive formation of foam may prevent the spin cycle from being carried out; select and start the "Rinse & Spin" programme. Avoid using excessive amounts of detergent (see "Detergents and additives").

• The "Variable Spin" button (if present) has been set to a low spin speed or the "No Spin" option (if present) has been activated. The programme time It is normal for the washing machine to adjust to factors that might affect the initially shown on the duration of the wash cycle, e.g. the excessive formation of foam, an display can be unbalanced load of very heavy items or extended heating time due to a low lengthened/shortened water temperature. by a given amount of For reasons like these, the wash time is recalculated and up-dated if necessary.

time (only on appliances On some displays (depending on the model), an animation appears with a display indicating during such update periods. remaining programme time) GB 10 Black process 45.0° 150.0 LPI 30120036GB.fm Page 11 Thursday, January 8, 2009 6:31 PM Description of red indications The red light will go on (if fitted to the appliance) Alphanumeric indications shown on the display (on models fitted with them) Description Cause Solutions "Water Tap E00 Closed" The appliance has insufficient or no water supply. The "Start" light goes on. Check that: • The water tap is fully open and the water pressure is sufficient. • The water supply hose is kinked. • the mesh filters of the water supply could be blocked (see "Care and maintenance". • The water hose is frozen up.

When the problem has been resolved, re-start the programme by pressing the "Start" button. If the fault occurs again, contact the After-Sales Service [see next chapter). The water is not pumped out of the washing machine. The appliance stops in mid programme; unplug the appliance and check if: • there are kinks in the drain hose. • the filter or pump is blocked (see chapter "Removing The Filter/Draining Residual Water"; make sure the water has cooled before draining the appliance). • the water in the water inlet hose is frozen. When you have resolved the problem, turn the programme selector to "Off/O" to reset the appliance; next re-start the desired programme. If the fault occurs again, contact the After-Sales Service [see next chapter). "Electrical module fault" "Clean Pump" E01 E02 "Service" E03 "Fod" E04 Door locking error Unplug the appliance and turn the programme selector to "Off/O", then turn the appliance ON again. Select the "Drain/Spin" programme and restart within 15 seconds.

@ @ @ @ @ @ 2. Restart the programme to check whether the problem has solved itself. 3. @ @ The After Sales Service sticker can be found inside the door. • Your full address.

• Your telephone number and area code. After-Sales Service phone numbers and addresses are given on the guarantee card. Alternatively, consult the dealer where you purchased the appliance. Specify: • The nature of the problem. • The washing machine model.

• The service code (number after the word SERVICE) ACCESSORIES For some models, you can obtain accessories from our After-Sales Service or from an authorised dealer: • a Pedestal Drawer which can be installed beneath your washing machine It raises your machine to allow for more comfortable loading and unloading, as you now no longer need to bend as far to access the unit. Furthermore, it offers a great space-management tool and storage solution. • a Stacking Kit by means of which you can fix your dryer on top of your washing machine and thus effectively save space. Some models are able to be installed under your kitchen worktop; in that case, please contact our After-Sales Service (see above). Attention: • the appliance MUST be installed under a continuous worktop. • according to the legal safety regulations, the installation of the appliance MUST be carried out by an authorized technician or by our After-Sales Service. • the appliance MUST be installed using the intermediate cover panel of the UBS Base Set which can be obtained from specialist dealers or our After-Sales Service. GB 12 Black process 45.0° 150.0 LPI 30120036GB.

fm Page 13 Thursday, January 8, 2009 6:31 PM BUILT-IN MODELS INSTALLATION TIPS Washer dryer housing dimensions: • Due to the need for the washer dryer filter to be cleaned periodically the plinth should be easily removable. • For easy care and maintenance water supply and drain should not be positioned behind the appliance. • The electrical connections should be positioned so that the appliance can be disconnected when fitted in position. GB 13

Black process 45.0° 150.0 LPI 30120036GB.fm Page 14 Thursday, January 8, 2009 6:31 PM FITTING A DÉCOR DOOR TO THE APPLIANCE The appliance front part has been fitted to accommodate the hinges so that the door can be opened either from the left or from the right hand side. Proceed as follows: 1. Screw the hinges onto the décor door, if a dummy drawer front is also being used ensure it to be fastened to the top edge of the door. Ensure the gap between door and drawer matches the units either side.

2. Fix the two hinge plates to the front of the washer dryer using the two plastic backing pieces. Note: an 8mm box spanner can be used to screw the thread cutting screws into position. 3. Fasten the two magnetic catches to the opposite side to the hinges and ensure the metal straps are fastened to the back of the door.

4. Locate the hinges on the door into the two hinge plates on the appliance. 5. If adjustment is necessary this can be achieved by either the hinge plates (vertical) or by the hinge fixing screws (horizontal). FITTING A FULL HEIGHT DOOR If a full height door is to be fitted (no dummy drawer front is being used) a top hinge hole has to be drilled in the door.

The distance between the two hinge hole centres is 360 - 384mm and the distance from the edge of the door is 21.5mm. The hinge hole should be max 12mm deep and its diameter 35mm: make sure you do not drill through the door. The two fixing holes for the hinge screws are 2mm. DÉCOR STRIP A décor strip can be screwed into position on the edge of the washer dryer. If needed, the strip can be cut to be adjusted to your furniture but normally this will not be necessary. TO LINE UP TO DRILL GB 14 Black process 45.0° 150.0 LPI .



[You're reading an excerpt. Click here to read official WHIRLPOOL](#)

[AWZ 614 D WP user guide](#)

<http://yourpdfguides.com/dref/4830740>