




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL DW 100 W. You'll find the answers to all your questions on the WHIRLPOOL DW 100 W in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual WHIRLPOOL DW 100 W
User guide WHIRLPOOL DW 100 W
Operating instructions WHIRLPOOL DW 100 W
Instructions for use WHIRLPOOL DW 100 W
Instruction manual WHIRLPOOL DW 100 W

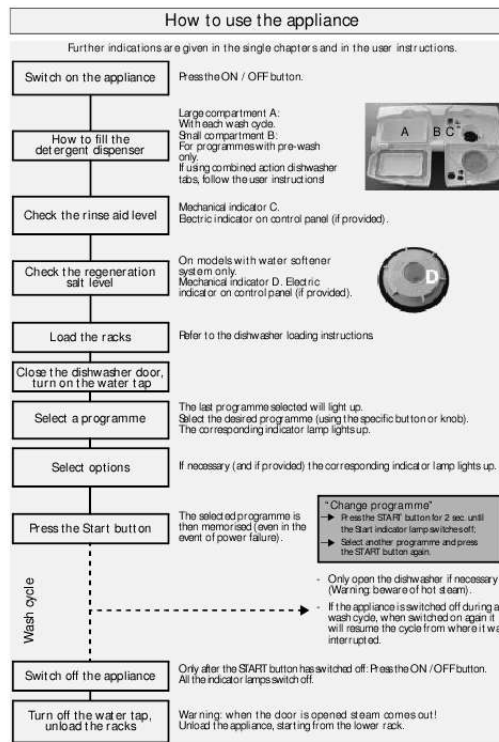

[You're reading an excerpt. Click here to read official WHIRLPOOL DW 100 W user guide](http://yourpdfguides.com/dref/4911507)
<http://yourpdfguides.com/dref/4911507>

Manual abstract:

Small compartment B: For programmes with pre-wash only. @@Mechanical indicator C. Electric indicator on control panel (if provided). How to fill the detergent dispenser A BC Check the rinse aid level Check the regeneration salt level On models with water softener system only. Mechanical indicator D. Electric indicator on control panel (if provided). Load the racks Close the dishwasher door, turn on the water tap Select a programme Refer to the dishwasher loading instructions. The last programme selected will light up. Select the desired programme (using the specific button or knob). The corresponding indicator lamp lights up.

If necessary (and if provided) the corresponding indicator lamp lights up. Select options "Change programme" Press the Start button The selected programme is then memorised (even in the event of power failure). Press the START button for 2 sec. until the Start indicator lamp switches off; Select another programme and press the START button again. Wash cycle - Only open the dishwasher if necessary (Warning: beware of hot steam).

- If the appliance is switched off during a wash cycle, when switched on again it will resume the cycle from where it was interrupted. Only after the START button has switched off: Press the ON / OFF button. All the indicator lamps switch off. Warning: when the door is opened steam comes out! Unload the appliance, starting from the lower rack. Switch off the appliance Turn off the water tap, unload the racks Dishwasher loading instructions and racks provided
Upper rack: Fold down glass holder (A): Depending on the position, for example small or longstemmed glasses.

Crockery holders (B): Depending on the position, for example plates, cups and long-stemmed glasses. Long-handled utensils (e.g. @@@@) • The appliance does not load sufficient water. • There is a power failure. @@ • Ensure there are no kinks in the water hose. • • • • Insert the plug into the mains socket. Press the Start button. Close the door. @@ • Increase dosage *.

- Load crockery at an angle. • Arrange crockery so that items do not touch each other. Load crockery upside down. • Follow recommended detergent dosage.
- Select a more intense wash cycle. • The spray arms must be able to turn freely. @@ • Residual water in cavities. • The water jet does not reach the crockery.
- Insufficient detergent. • Unsuitable programme.

- Spray arms blocked. @@@@ • Insert the filter correctly *. @@ • Streaks on glasses. @@ • Reduce the rinse aid dosage *. • Close the salt container lid properly *.

- Change water hardness setting, if necessary add salt *. @@@@ • The START indicator lamp flashes. • Indicator F...

(if provided). • Use suitable cutlery. • Ensure the filter assembly is not clogged and that there is no interruption to the water supply (if necessary, clean the filters *). Start the programme again. Press the START button for 2 seconds, until the START indicator lamp switches off. Select a new programme and press the Start button again. If after carrying out the above checks the malfunction persists or appears again, turn the appliance off and turn off the water supply tap, then call our After-Sales Service (see guarantee). Before contacting our After-Sales Service, take note of the following: • The nature of the fault. • The appliance type and model. • The service code (the number indicated on the adhesive rating plate) inside the door on the right-hand side.

Before using the dishwasher, read the user instructions! DW 100 Quick Reference Guide GB Programme selector knob On / Off button Start button Switches "on" when the dishwasher is operating. Flashes when a fault occurs. Switches off at the end of the programme. Programme chart Programmes Loading instructions Detergent 2) A B Consumption 3) Litres kWh Minutes Quickwash Eco 1) Intensive 1) 2) 40°C 50°C 70°C Lightly soiled crockery with no dried-on food. X - 13.0 0.70 30 Normally soiled crockery. @@.



[You're reading an excerpt. Click here to read official WHIRLPOOL](http://yourpdfguides.com/dref/4911507)

[DW 100 W user guide](http://yourpdfguides.com/dref/4911507)

<http://yourpdfguides.com/dref/4911507>