



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL FL 5064. You'll find the answers to all your questions on the WHIRLPOOL FL 5064 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual WHIRLPOOL FL 5064
User guide WHIRLPOOL FL 5064
Operating instructions WHIRLPOOL FL 5064
Instructions for use WHIRLPOOL FL 5064
Instruction manual WHIRLPOOL FL 5064

GB FL 5054/ FL 5064

- Cotton
- Synthetic
- Delicate/Wool
- On/Off

- "Half Load" option
- "No Spin" option
- "Rinse Hold" option
- "Gentle Wash" option

Estimated Programme Duration refer to maximum programme temperature selection without special options.

During the selected washing programme the programme selector knob moves by steps clockwise through the phases *prewash, main wash, rinse and spin*. Each step takes from some seconds to several minutes.

* : optional / Yes : dosing required
¹⁾ Max 500 rpm for FL 5054
 Max 600 rpm for FL 5064

Programme Selector Knob	Programme	Temperature Selector °C	Type of wash/Notes	Detergents and additives					Special options				Spin Speed rpm	Estimated Programme Duration Min.
				Max Load Kg	Pre-wash	Main Wash	Fabric Softener	Chlorine Bleach	Half Load	No Spin	Rinse Hold	Gentle Wash		
1	Cotton with prewash	Min 95° Max 95°	Heavily soiled, long wearing and temperature stable textiles in cotton and linen (bed linen, table linen, underwear, shirts etc.).	5.0	*	Yes	*	*	*	*	*	*	Max ¹⁾	120
2	Cotton	Min 95° Max 95°	Slightly to normally soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	5.0	—	Yes	*	*	*	*	*	*	Max ¹⁾	110
3	Synthetic	Min 60° Max 60°	Slightly to normally soiled blouses, shirts, overalls etc. made of polyester (Dioten, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2.0	—	Yes	*	—	*	*	*	*	Max ¹⁾	85
4	Cotton short	Min 40° Max 40°	Slightly soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	2.5	—	Yes	*	—	*	*	*	*	Max ¹⁾	75
4	Synthetic short	Min 40° Max 40°	Slightly soiled overalls and sports wear made of cotton, polyester, polyamide and blends with cotton.	2.0	—	Yes	*	—	*	*	*	*	Max ¹⁾	75
5	Delicate	Min 40° Max 40°	Curtains and delicate clothing, dresses, skirts, shirts and blouses.	1.5	—	Yes	*	—	—	*	*	—	Max ¹⁾	70
6	Wool	Min 40° Max 40°	Only woolsens with a felt-free finish, labelled with the woolmark and identified as machine washable. If you select "Rinse Hold" do not leave items to soak for too long.	1.0	—	Yes	*	—	—	*	—	—	Max ¹⁾	60
A	Rinse + Long spin	Min	With this programme you can add starch and/or fabric softener. The programme ends with an intensive spin cycle.	5.0	—	—	*	—	*	*	*	—	Max ¹⁾	20
B	Long spin	—	In this programme spinning is intensive. Same as the spin cycle in the "Cotton" programme.	5.0	—	—	—	—	—	—	—	—	Max ¹⁾	15
C	Rinse + Short spin	Min	In this programme spinning is gentle. Same as the spin cycle in the "Wool" programme.	1.5	—	—	*	—	—	*	*	—	Max ¹⁾	15
D	Short spin	—	In this programme spinning is gentle. Same as the spin cycle in the "Wool" programme.	1.5	—	—	—	—	—	—	—	—	Max ¹⁾	10
E	Drain	—	Drain only - no spinning. Alternative method of terminating programme the synthetic, delicate and wool programme and for premature removal of the laundry.	—	—	—	—	—	—	—	—	—	—	6

Whirlpool is a registered trademark of Whirlpool USA.
5019 301 10005



[You're reading an excerpt. Click here to read official WHIRLPOOL FL 5064 user guide](http://yourpdfguides.com/dref/4920462)
<http://yourpdfguides.com/dref/4920462>

