



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL FL 5105. You'll find the answers to all your questions on the WHIRLPOOL FL 5105 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual WHIRLPOOL FL 5105**  
**User guide WHIRLPOOL FL 5105**  
**Operating instructions WHIRLPOOL FL 5105**  
**Instructions for use WHIRLPOOL FL 5105**  
**Instruction manual WHIRLPOOL FL 5105**

**GB FL 5105**

A. "On/Off" Button  
B. "On/Off" Indication

During the selected washing programme the programme selector knob moves by steps clockwise through the phases *prewash*, *main wash*, *rinse* and *spin*. Each step takes from some seconds to several minutes.

⊛ : optional / Yes : dosing required

<sup>1)</sup> For improved garment care spin speed is restricted to 900 rpm in this programme.

<sup>2)</sup> For improved garment care spin speed is restricted to 400 rpm in this programme.

Programme	Care Labels	Type of wash/ Notes	Max Load Kg	Detergents and additives						Special options			Max. Spin Speed rpm	Temperature Selector °C	Programme Selector
				Bleach	Softener	Main Wash	Pre-wash	Eco	Rapid	Intensive Rinse	Rinse Hold				
Cotton with prewash	95 60	Heavily soiled, long wearing and temperature stable textiles in cotton and linen (bed linen, table linen, underwear, shirts etc.).	5.0	⊛	⊛	Yes	Yes	⊛	—	⊛	⊛	1000	Mtx. 95°	<b>1</b>	
Synthetics with prewash	60 40	Heavily soiled blouses, shirts, overalls etc. made of polyester (Dolene, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2.5	—	⊛	Yes	Yes	⊛	⊛	⊛	900 <sup>1)</sup>	Mtx. 60°	<b>2</b>		
Delicates with prewash	40	Heavily soiled curtains and delicate clothing, dresses skirts, shirts and blouses.	1.5	—	⊛	Yes	Yes	—	—	—	900 <sup>1)</sup>	Mtx. 40°	<b>3</b>		
Cotton	95 60 40 30	Slightly to normally soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. <i>When you select the "Rapid" option, the "Eco" and the "Intensive Rinse" options cannot be selected.</i>	Normal 5.0 Rapid 3.0	⊛	⊛	Yes	—	⊛	⊛	⊛	1000	Mtx. 95° Rapid Mtx. 60°	<b>4</b>		
Cotton short	60 40 30	Slightly soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	3.0	⊛	⊛	Yes	—	⊛	—	⊛	1000	Mtx. 60°	<b>5</b>		
Synthetics	60 40 30	Slightly to normally soiled blouses, shirts, overalls etc. made of polyester (Dolene, Trevira), polyamide (Perlon, Nylon) or blends with cotton. <i>When you select the "Rapid" option, the "Eco" and the "Intensive Rinse" options cannot be selected.</i>	Normal 2.5 Rapid 1.5	—	⊛	Yes	—	⊛	⊛	⊛	900 <sup>1)</sup>	Mtx. 60° Rapid Mtx. 60°	<b>6</b>		
Synthetics short	40 30	Slightly soiled overalls and sports wear made of cotton, polyester, polyamide and blends with cotton.	2.5	—	⊛	Yes	—	⊛	—	⊛	900 <sup>1)</sup>	Mtx. 60°	<b>7</b>		
Delicates	40 30	Curtains and delicate clothing, dresses skirts, shirts and blouses.	1.5	—	⊛	Yes	—	—	—	⊛	900 <sup>1)</sup>	Mtx. 40°	<b>8</b>		
Wool	40	Only woolsens with a felt-free finish, labelled with the woolmark and identified as machine washable. <i>If you select "Rinse Hold" do not leave items to soak for too long.</i>	1.0	—	⊛	Yes	—	—	—	⊛	900 <sup>1)</sup>	Mtx. 40°	<b>9</b>		
Handwash	40	Textiles made of linen, silk, wool and viscose marked as "handwashable". <i>If you select "Rinse Hold" do not leave items to soak for too long.</i>	1.0	—	⊛	Yes	—	—	—	⊛	400 <sup>2)</sup>	Mtx. 30°	<b>10</b>		
Rinse + spin	—	<i>With this programme you can add starch and/or fabric softener. The programme ends with an intensive spin cycle.</i>	5.0	—	⊛	—	—	—	⊛	⊛	1000	—	<b>A</b>		
Spin	—	<i>In this programme spinning is intensive. Same as the spin cycle in the "Cotton" programme.</i>	5.0	—	—	—	—	—	—	—	1000	—	<b>B</b>		
Gentle spin	—	<i>In this programme spinning is gentle. Same as the spin cycle in the "Wool" programme.</i>	1.5	—	—	—	—	—	—	—	900 <sup>1)</sup>	—	<b>C</b>		
Drain	—	<i>Drain only - no spinning. Alternative method of terminating programme the synthetic, delicate and wool programme and for premature removal of the laundry.</i>	—	—	—	—	—	—	—	—	—	—	<b>D</b>		

Whirlpool is a registered trademark of Whirlpool USA  
**5019 301 10043**



[You're reading an excerpt. Click here to read official WHIRLPOOL FL 5105 user guide](http://yourpdfguides.com/dref/4923330)  
<http://yourpdfguides.com/dref/4923330>

**Manual abstract:**

Each step takes from some seconds to several minutes. h : optional / Yes : dosing required 1) 2) A. "On/Off" Button B. "On/Off" Indication For improved garment care spin speed is restricted to 900 rpm in this programme. @@Max. @@Heavily soiled blouses, shirts, overalls etc. @@Heavily soiled curtains and delicate clothing, dresses skirts, shirts and blouses. Slightly to normally soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. When you select the "Rapid" option, the "Eco" and the "Intensive Rinse" options cannot be selected.

Slightly soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. 5.0 2.5 1.

5 Normal 5.0 Rapid 3.0 3.0 h — h h h h h h h h h h h h — — — — — Yes Yes Yes Yes Yes Yes Yes h h — h h h h — — — — — h — h h h — h h h h

60° Max. 40° Max. 95° 1 2 3 4 5 6 7 8 9 10 A B C D — — — — — — — — — — — Rapid Max. 60° Max. 60° Max. 60° Cotton short Yes — h — — — — —  
— — — — — 1000 Synthetics Synthetics short Delicates Wool Handwash Rinse + spin Spin Gentle spin Drain Slightly to normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide Normal 2.5 (Perlon, Nylon) or blends with cotton. Rapid When you select the "Rapid" option, the "Eco" and the "Intensive Rinse" options cannot be selected. @@ Curtains and delicate clothing, dresses skirts, shirts and blouses.

@@@With this programme you can add starch and/or fabric softener. The programme ends with an intensive spin cycle. In this programme spinning is intensive. Same as the spin cycle in the "Cotton" programme. In this programme spinning is gentle. Same as the spin cycle in the "Wool" programme. Drain only - no spinning. @60° Max. 60° Max. 40° Max.

40° Max. @@@@2. Select the new programme. 3. Start the programme by pressing the "ON/OFF" button. PROGRAMME END 1. At the end of the programme the programme selector moves to the stop position. 2. To unload the machine wait for the door to unlock (about 1 minute). 3.

Switch off the appliance, open the door and take out the laundry. 4. Close the tap and leave the door ajar to allow the drum to dry out. NOTES AND INDICATIONS FOR USE • WATER LEVEL It may not be visible as the cycle is optimised for a minimum water consumption without compromising washing results. SPIN SPEED CONTROL Spin speed may be reduced automatically or may even be excluded in the case of small loads with highly absorbent garments (e.g. bathrobes, bathmat). This control avoids cloth and machine damage and excessive vibrations and consequent noise produced by the machine due to load unbalance: by selecting high spin speeds the noise level increases. MOTOR NOISE The running noises of the new, electronically controlled motor are not the same as the ones you are used to from your old appliance. Don't be surprised - modern technology has a modern sound.

CLEANING THE FILTER To ensure an impeccable function of the pump, check the filter regular and clean it if necessary. •Prewash cycle increases programme duration approximately 15 min. Consumption values were measured in normalized conditions in compliance with Standard IEC 60 456. @@1.

Open the tap. 2. Set the programme selector to the desired programme. 3. Set the temperature selector to the desired temperature. 4. Set the spin selector to the desired speed. 5. Special options can be selected. 6. @@@@ "Rapid Wash" button • For quick, economical washes. • Ideal for minimum loads of lightly-soiled articles. Note: reduce the detergent quantity. "Intensive Rinse" button • More water and a longer time in rinse cycle is added. • This option is particularly suitable for areas with very soft water, washing baby linen and helps people with allergies. • Whirlpool is a registered trademark of Whirlpool USA.  
5019 301 10043 .



[You're reading an excerpt. Click here to read official WHIRLPOOL FL 5105 user guide](http://yourpdfguides.com/dref/4923330)  
<http://yourpdfguides.com/dref/4923330>