



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL MWA 10149 WH. You'll find the answers to all your questions on the WHIRLPOOL MWA 10149 WH in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual WHIRLPOOL MWA 10149 WH
User guide WHIRLPOOL MWA 10149 WH
Operating instructions WHIRLPOOL MWA 10149 WH
Instructions for use WHIRLPOOL MWA 10149 WH
Instruction manual WHIRLPOOL MWA 10149 WH

Dosing Aid

This function will suggest to you the correct amount of detergent for your wash load. By using the Dosing Aid you avoid detergent overdosing and

- save detergent
- protect the environment
- protect sensitive skin

Before the first use...

Make sure that the Dosing Aid function can work optimally.

1. Compare the dosing recommendation of the detergents you use with the dosing values preset in the washing machine. Adjust them if there is a mismatch.
2. Check and eventually adjust the water hardness preset in the washing machine.

1. Detergent dosing values

The concentration of detergents available on the market differs considerably. This is why you have to adjust your washing machine settings according to your detergents.

Your washing machine comes with 3 preset dosing values for 3 different types of detergents (generic – delicates – dark colours). Each detergent type is associated to a group of programmes (see table on the right). Each of the 3 preset values should be adjusted as to match the dosing recommendation reported on the package of the detergent's that you intend to use for each specific group.

 Dark colours	 Delicates	 Generic
Dark	Wool/Handwash and Delicates	All other programmes

Check and adjust one of the preset dosing values (Detergent calibration)

Suppose you want to check and adjust the preset dosing value for all the programmes belonging to the "Generic detergent group".

Important: during this phase do not consider the local water hardness and the habitual soil level of your laundry. Simply follow the instruction below.

A - Check

First Check on the package of your generic detergent which dosing amount is recommended for medium water hardness (or medium/soft) and medium soil level (or medium/light). Please use this value when you reach step 3 of the procedure described in the following section (see **B - Adjust**).

		water hardness		
		soft	medium	hard
soil level	light			
	medium		ml	
	heavy			

GB 5019 106 01494/A



[You're reading an excerpt. Click here to read official WHIRLPOOL MWA 10149 WH user guide](http://yourpdfguides.com/dref/4923558)
<http://yourpdfguides.com/dref/4923558>

Manual abstract:

By using the Dosing Aid you avoid detergent overdosing and • save detergent • protect the environment • protect sensitive skin Before the first use... Make sure that the Dosing Aid function can work optimally. 1. Compare the dosing recommendation of the detergents you use with the dosing values preset in the washing machine. Adjust them if there is a mismatch. 2. @@@@Your washing machine comes with 3 preset dosing values for 3 different types of detergents (generic – delicates – dark colours). Each detergent type is associated to a group of programmes (see table on the right).

Each of the 3 preset values should be adjusted as to match the dosing recommendation reported on the package of the detergent/s that you intend to use for each specific group. Dark Dark colours Delicates Generic Wool/Handwash and Delicates All other programmes 04/11 - © Copyright Whirlpool Europe s.r.l. 2011.

All rights reserved Subject to change - Printed in Italy Check and adjust one of the preset dosing values (Detergent calibration) Suppose you want to check and adjust the preset dosing value for all the programmes belonging to the "Generic detergent group". Important: during this phase do not consider the local water hardness and the habitual soil level of your laundry. Simply follow the instruction below. A - Check First Check on the package of your generic detergent which dosing amount is recommended for medium water hardness (or medium/soft) and medium soil level (or medium/light). Please use this value when you reach step 3 of the procedure described in the following section (see B - Adjust).

water hardness soft medium soil level light medium heavy hard GB 5019 106 01494/A B - Adjust (Detergent Calibration) Select a programme belonging to the programme group for which you want to check and possibly adjust the preset dosing value (for example the "Cotton" programme for the "Generic" group). Press and hold the "Dosing Aid" button for a few seconds. The bottle symbol on the display lights up, and the preset detergent dosing value appears on the display. Compare the preset value indicated on the display with the dosing amount previously identified (i.e., that recommended on your detergent package for medium water hardness and medium soil level). If they differ, adapt the displayed value now by pressing "+" or "-" Press the "Ok" button to confirm and save the new detergent value for the group. The value on the display disappears, and the display goes back to the initial state. Do this for all 3 programme groups. @@@@The preset dosing value appears on the display.

@@2011. @@@@2011. @@@@The door locks. @@On the display an animation is shown. @@@@If "Dosing Aid" is selected and you want to add more laundry after you have pressed the "Start (Pause)" button for the first time, proceed as follows: - press and hold the "Reset/Drain" button for a few seconds; the display shows the default setting of the programme. - Wait until the door unlocks (this can take more than a minute). - Now add your laundry and go on following the procedure as described above ("Daily Use") to get the recommended detergent quantity displayed. • When "Dosing Aid" is selected, you have to add the detergent into the dispenser. You cannot add the detergent directly to the drum using a dosing cup because the door will be locked while the dosing amount is displayed. GB 5019 106 01494/A Subject to change - Printed in Italy • If "Dosing Aid" is selected and you want to reset everything after you have pressed the "Start (Pause)" button for the first time, proceed as follows: - press and hold the "Reset/Drain" button for a few seconds; the display goes back to the initial state.

It can take more than a minute until the door unlocks. • The duration of programmes with small maximum loads (like "Delicates", "Wool/Handwash" etc. - see in separate Programme Chart) is NOT updated according to the amount of laundry added. • The real programme duration can differ from the time indicated on the display even after the wash load has been identified. This is because it can be influenced by factors like reduced inlet water temperature, which leads to a longer heating time.

@@@@2011. All rights reserved If you have selected the option "Prewash", the display will alternately show the detergent amount for the prewash chamber (marked with "I") and for the main wash chamber (marked with "II") of the detergent dispenser. Prewash Mainwash The washing machine recalculates the programme duration according to the detected wash load while the display shows an animation. The new wash time is displayed and the wash programme starts automatically. .



[You're reading an excerpt. Click here to read official WHIRLPOOL MWA 10149 WH user guide](http://yourpdfguides.com/dref/4923558)
<http://yourpdfguides.com/dref/4923558>